


OUTPUT POINTS CONFIGURATION

Front Panel
Main Menu >Controller >More >Advanced IO >Output Points

Web Interface
Home >Controller >Advanced IO >Cabinet Configuration >Output Points

I/O Module 1

NOTICE OUTPUT REMAIPPING 	Output Point	Description	Output Control Type	Index
	33	C1-35	Channel Green Walk Driver	20
	34	C1-36	Channel Red Do Not Walk Driver	20
	35	C1-37	Not Active	14
	36	C1-38	Not Active	16

OUTPUT CHANNEL CONFIGURATION

Front Panel
Main Menu >Controller >More>Channels>Channels Config

Web Interface
Home >Controller >Advanced IO>Channels>Channels Configuration

Channel Configuration

Channel	Control Type	Control Source	Flash Yellow	Flash Red	Flash Alt	MMU Channel
1	Phase Vehicle	1	-	X	X	1
2	Phase Vehicle	2	-	X	-	2
3	Phase Vehicle	3	-	X	X	3
4	Phase Vehicle	4	-	X	-	4
5	Phase Vehicle	5	-	X	-	5
6	Phase Vehicle	6	-	X	X	6
7	Phase Vehicle	7	-	X	-	7
8	Phase Vehicle	8	-	X	X	8
9	Overlap	1	-	X	X	9
10	Overlap	2	-	X	X	10
11	Overlap	3	-	X	-	11
12	Overlap	4	-	X	-	12
13	Phase Ped	2	-	-	-	13
14	Phase Ped	4	-	-	-	14
15	Phase Ped	6	-	-	-	15
16	Phase Ped	8	-	-	-	16
17	Overlap	5	-	X	X	17
18	Overlap	6	-	X	-	18
19	None	-	-	-	-	19
20	Adv. Warning Flasher	2	-	-	-	20
21	None	-	-	-	-	21

NOTE CHANNEL 20 ASSIGNED TO
FLASHER WITH CONTROL SOURCE 2

ENABLE ADVANCE FLASHER WARNING PROGRAMMING


Front Panel
Main Menu >Controller >Phase >Phase Options
Select Plan 1

Web Interface
Home >Controller> Phase Configuration > Phase Option Plans
Select Phase Option Plan 1

Phase Option Plan 1

Phase	1	2	3	4	5	6	7	8
Advanced Warning	N	Y	N	N	N	N	N	N

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 01-0767
DESIGNED: September 2025
SEALED: 9/15/2025
REVISED: _____

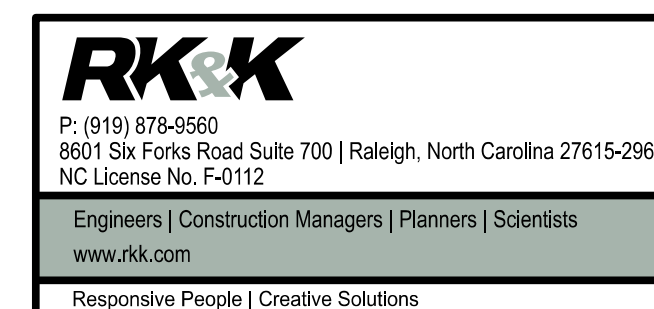

New Installation - Electrical Detail (Sheet 2 of 2)

</