

CROSS SECTION INDEX

ALIGNMENT

SHEET NUMBERS

-LI87-
-LI88-
-LI89-
-LI90-
-DRIVE-
-DRIVE2-

X-1 THRU X-4
X-5 THRU X-8
X-9 THRU X-11
X-12 THRU X-15
X-16 THRU X-19
X-20