

13_14 Turning off Horizontal Text

Question:

How can you turn off the horizontal text w/o turning off the alignment text. Both are on the same level, which makes it hard to display curve data on Hearing Maps.

Answer:

When laying out the horizontal alignment for public Hearing Map production, use the Roadway Hearing Map ddb. The ddb file breaks up the proposed horizontal alignment to the "Prop Horizontal Alignment" level and the "Prop Alignment Control Point Label" level. You can turn these levels on or off independently.

If you have already placed the horizontal alignment by the ncdot alignment ddb (used for regular plan production), then use the edit and select by attribute tool and programmatically select all the text on level "Prop Horizontal Alignment" level and change it to "Prop Alignment Control Point Label" level. For the leader lines, manually change these to the "Prop Alignment Control Point Label" level. The important thing is to acknowledge the existence of the horizontal alignment label for Public Hearing Maps and corridor mapping.