

14_10 Ditch Base to Berm Ditch Criteria

Question:

How can the Berm Ditch Criteria be configured to add a base to the berm ditch?

Answer:

For berm ditches (Drawing Standard 240.01), define the newly created variable "BRM01 BASE WIDTH" to change the berm ditch from a "V" to a base berm ditch. Default definition is 0 (no base, "V" ditch).

Example:

```
DEFINE "BRM01 BASE WIDTH" 2
```