

16_18 Levels for SS Text

Question:

What levels are the slope stake cut and fill texts supposed to be on?

Answer:

1. If the Designer uses Geopak Limits of Construction to place slope stake cut and fill texts, then use level "Prop DSN Text". Limits of Construction does not allow Roadway designers to differentiate between the green cut text (C) and the red fill text (F).
2. If the Designer uses Geopak Plan View Labeler to place slope stake cut and fill texts, then use level "Prop RDY Alternate Text Green" for slope stake cut text (C) and "Prop RDY Alternate Text Red" for slope stake fill text (F). These are the default levels for Plan View Labeler.
3. If the Designer manually places slope stake cut and fill texts, then the Designer has the option to place the slope stake texts on the same level as their slope stake lines counterpart. For slope stake cut texts (C), Designers can use level "Prop SS Cut Line". For slope stake fill texts (F), Designers can use level "Prop SS Fill Line". One advantage of this practice is the ability to turn off and on slope stake lines and text all at once.