



3_5 SUPERELEVATION AS POINT CONTROLS

Question:

When using super elevation input files, why isn't the super being applied in Roadway Designer?

Answer:

In Roadway Designer, superlevation is form of "Point Controls". Every time the INP is being applied (by clicking on the Apply button several times), the superlevation input is being added to list of point controls each time.

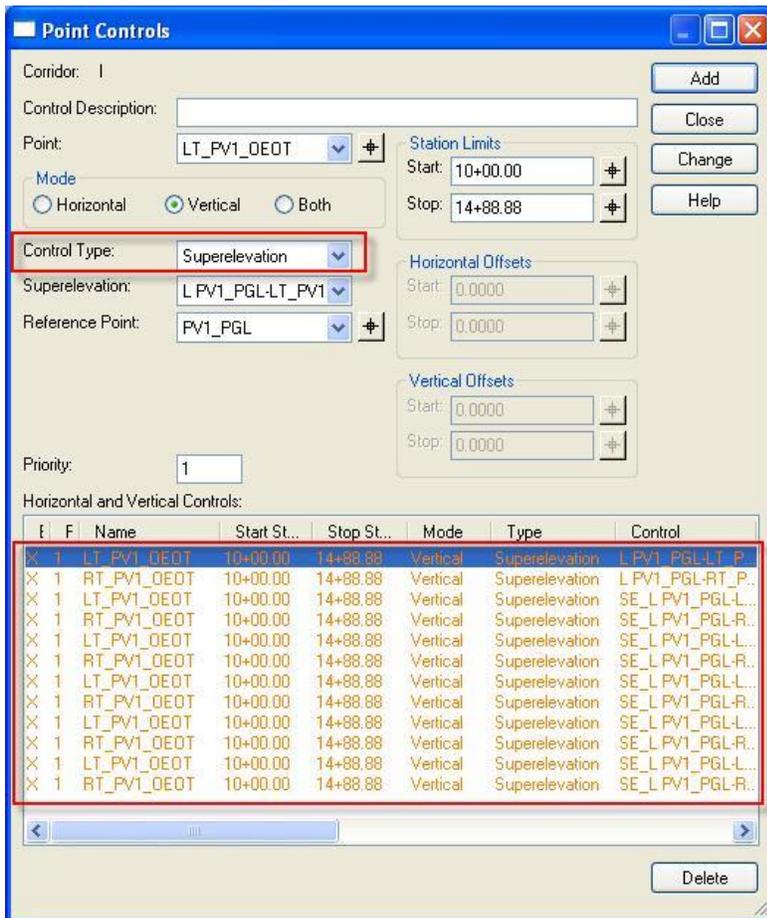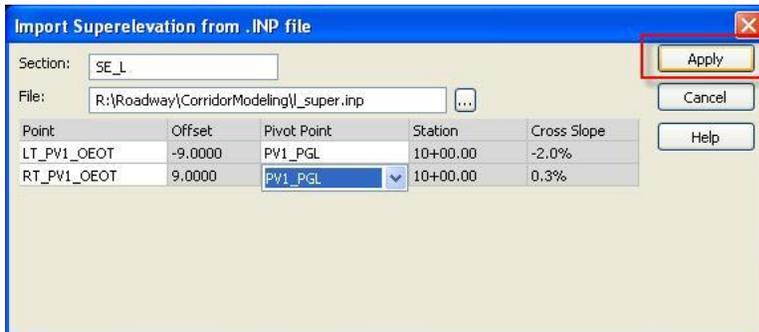

When there is a conflict between two or more superlevation inputs applied (turning the text orange), only the first set (the first to be applied) is active while the others are ignored. You can delete the super inputs from the Point Controls dialog box. Some superlevation sections do not show up in the Point Controls dialog box. To delete them, select the Superlevation radio button, right mouse click on the Superlevation window, and select Superlevation Display List. Select the superlevation section name from the list to delete all of the available superlevation inputs. Delete and Apply.

