


Internal click-click back height adjustment

Allows for custom lumbar support. From a seated position, or while standing, lift up on the back to adjust the back height to one of 5 preset positions. Lift the back to the 6th position to release the internal back height mechanism and return the back to the lowest position.

Adjustable back angle

Adjusts the angle of the back to a desired position for a more personal fit. To adjust, lift lever up to adjust to desired position. Push down to lock this position.

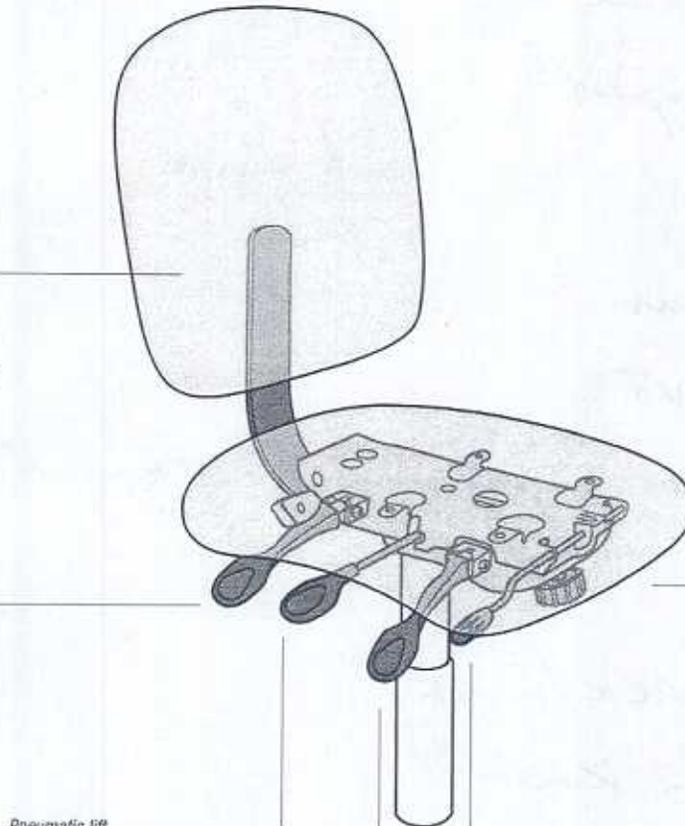

Tension control

Provides a firmer or softer recline - multiple settings allow fingertip adjustment. Turn handwheel on the front of the mechanism; clockwise for more tension, counterclockwise for less tension.

Pneumatic lift

Easily adjusts to the perfect seat height. To raise the seat, lift your weight off the seat and pull up on the lever. Release lever when seat reaches desired height. To lower seat, lift up on the lever while you are seated; release lever when seat reaches desired height.

Infinite tilt lock

Locks your chair in any position and free floats when unlocked. To lock the seat at a particular tilt position, depress the lever. To release the lock and allow the seat to free float, lift the lever.

Forward tilt

Puts you at the best task position for your work. To tilt chair forward unlock the infinite tilt lock, tilt seat back slightly and rotate the lever forward. To keep the chair from tilting forward, tilt the seat back and rotate the lever backward.