



DEFAULT PHASING DIAGRAM

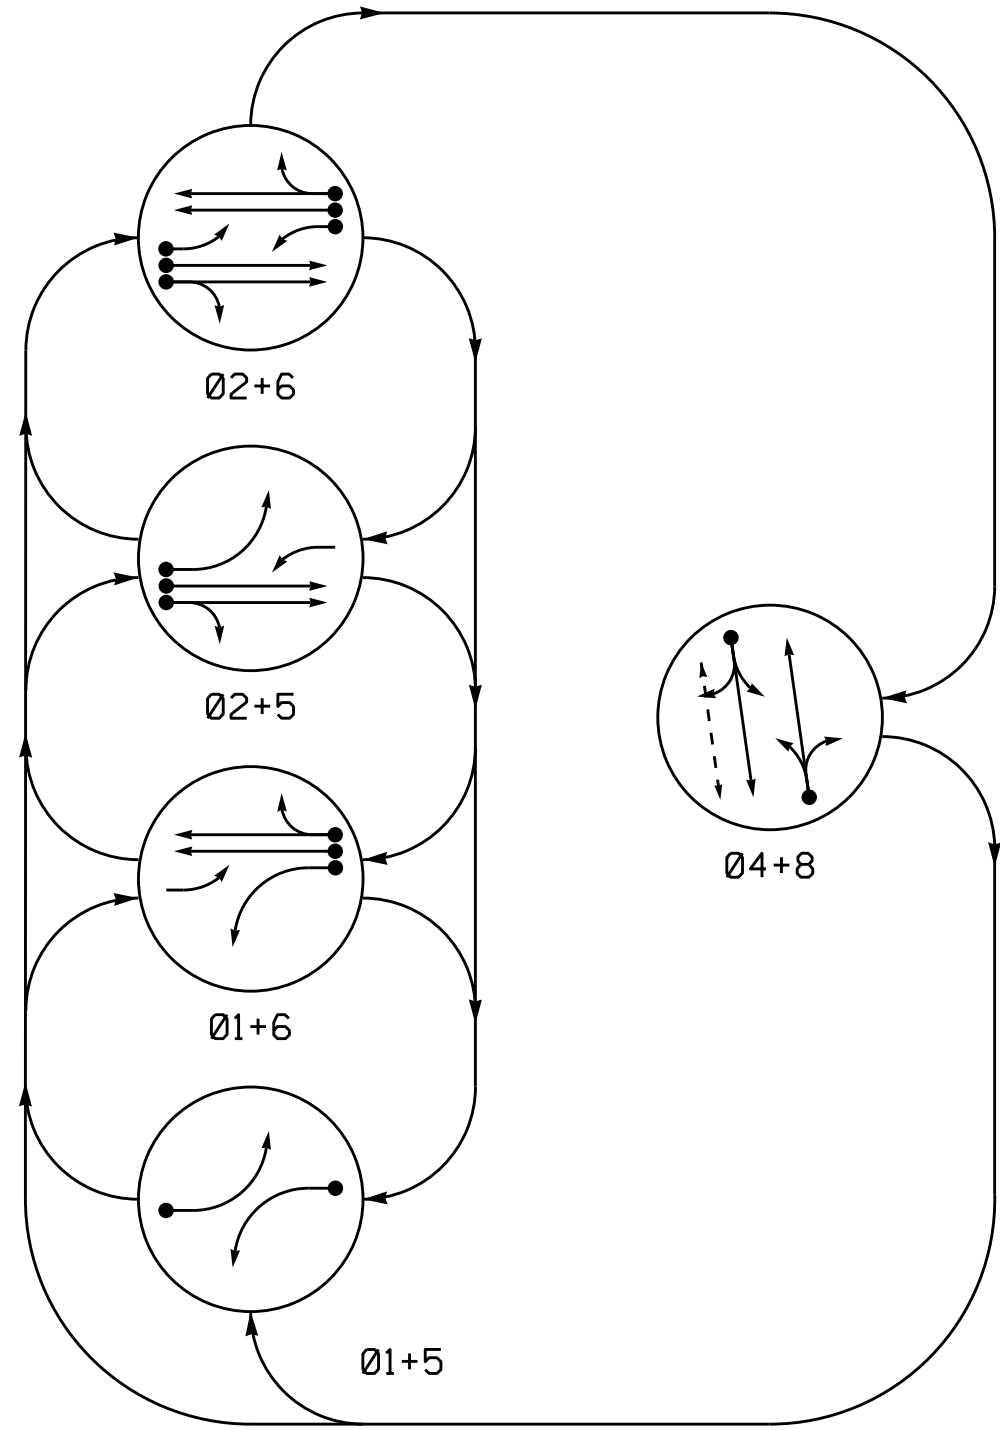

DEFAULT PHASING TABLE OF OPERATION

SIGNAL FACE	PHASE					
	01+5	01+6	02+5	02+6	04+8	F L S D H I
11	←	←	←	←	←	←
21,22	R	R	G	G	R	Y
41,42	R	R	R	R	G	R
51	←	←	←	←	←	←
61,62	R	G	R	G	R	Y
81,82	R	R	R	R	G	R
P41,P42	DW	DW	DW	DW	W	DRK

ALTERNATE PHASING DIAGRAM

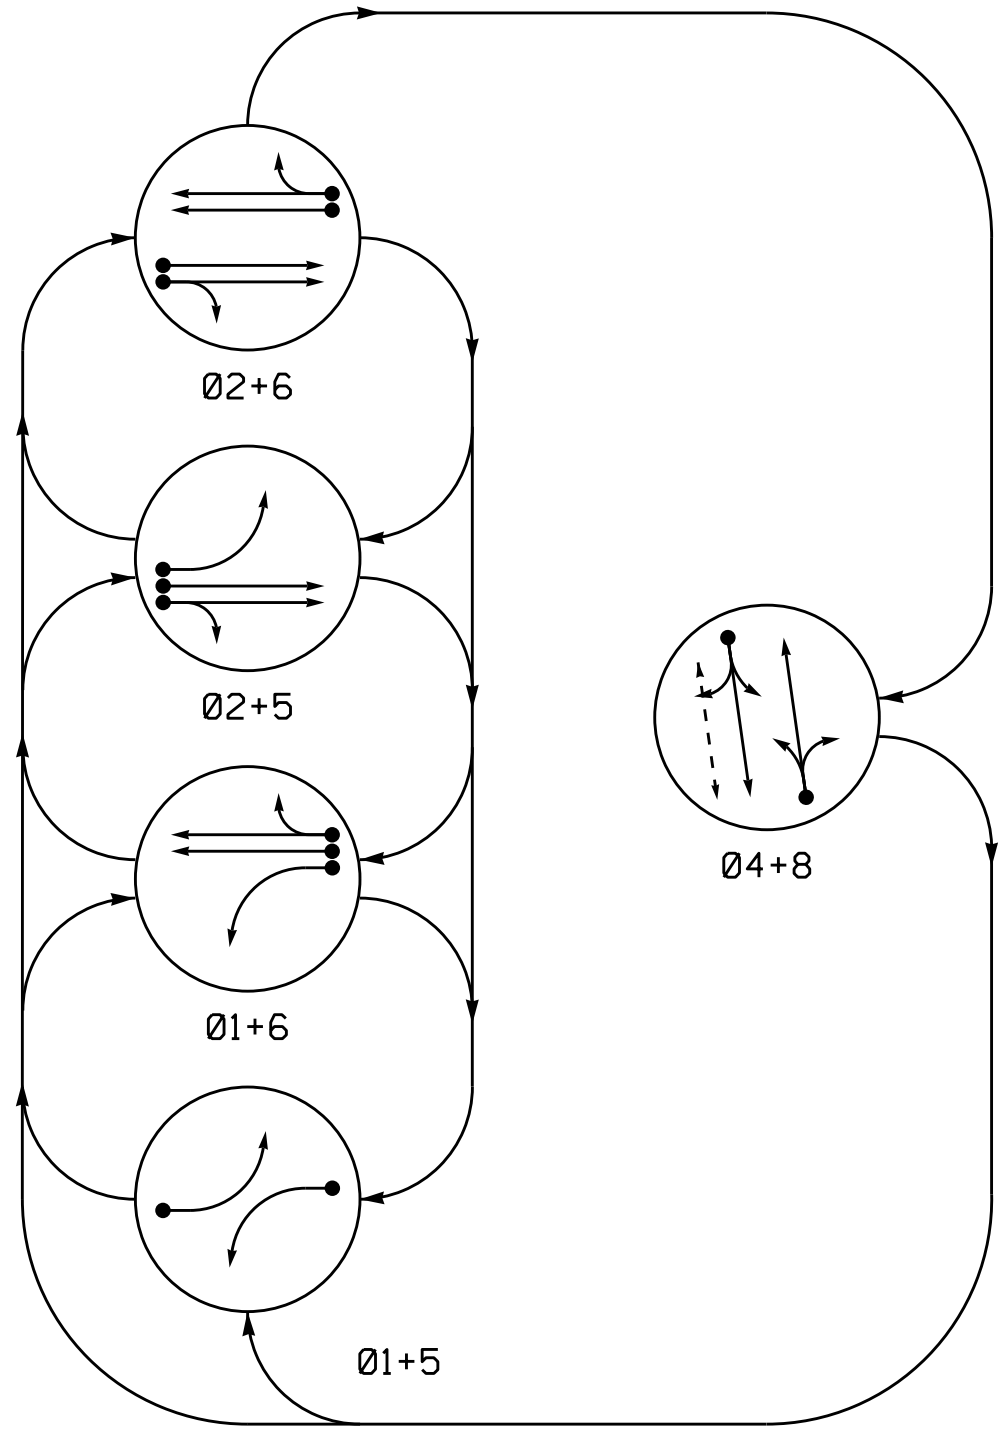

ALTERNATE PHASING TABLE OF OPERATION

SIGNAL FACE	PHASE					
	01+5	01+6	02+5	02+6	04+8	F L S D H I
11	←	←	←	←	←	←
21,22	R	R	G	G	R	Y
41,42	R	R	R	R	G	R
51	←	←	←	←	←	←
61,62	R	G	R	G	R	Y
81,82	R	R	R	R	G	R
P41,P42	DW	DW	DW	DW	W	DRK

OASIS 2070 LOOP & DETECTOR INSTALLATION CHART

LOOP	SIZE (FT)	DISTANCE FROM STOPBAR (FT)	TURNS	NEW LOOP	DETECTOR PROGRAMMING							
					PHASE	CALLING	EXTENSION	FULL TIME DELAY	STRETCH TIME	DELAY TIME	SYSTEM LOOP	NEW CARD
1A	6X40	0	2-4-2	X	1	Y	Y	-	-	15*	-	Y
2A	6X6	355	5	X	2	Y	Y	-	-	-	-	Y
2B	6X6	355	5	X	2	Y	Y	-	-	-	-	Y
4A	6X40	0	2-4-2	X	4	Y	Y	-	-	5	-	Y
5A	6X40	0	2-4-2	X	5	Y	Y	-	-	15*	-	Y
6A	6X6	355	5	X	6	Y	Y	-	-	-	-	Y
6B	6X6	355	5	X	6	Y	Y	-	-	-	-	Y
8A	6X40	0	2-4-2	X	8	Y	Y	-	-	5	-	Y

\*Reduce delay to 3 seconds during Alternate Phasing operation.  
\* Disable phase call during Alternate Phasing operation.

5 Phase Fully Actuated D01-07 Kitty Hawk



NOTES

- Refer to "Roadway Standard Drawings NCDOT" dated January 2018 and "Standard Specifications for Roads and Structures" dated January 2018.
- Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
- Phase 1 and/or phase 5 may be lagged.
- Set all detector units to presence mode.
- Locate new cabinet so as not to obstruct sight distance of vehicles turning right on red.
- Omit "WALK" and flashing "DON'T WALK" with no pedestrian calls.
- Program pedestrian heads to countdown the flashing "Don't Walk" time only.
- Program phase 4 ped detector to call phase 4 and 8 ped.
- Phase 8 ped is dummy ped to enable phase 4 leading ped interval.
- Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.

PHASING DIAGRAM DETECTION LEGEND

- ← ● DETECTED MOVEMENT
- ← ○ UNDETECTED MOVEMENT (OVERLAP)
- ← - - UNSIGNALIZED MOVEMENT
- ← - - - PEDESTRIAN MOVEMENT

SIGNAL FACE I.D.

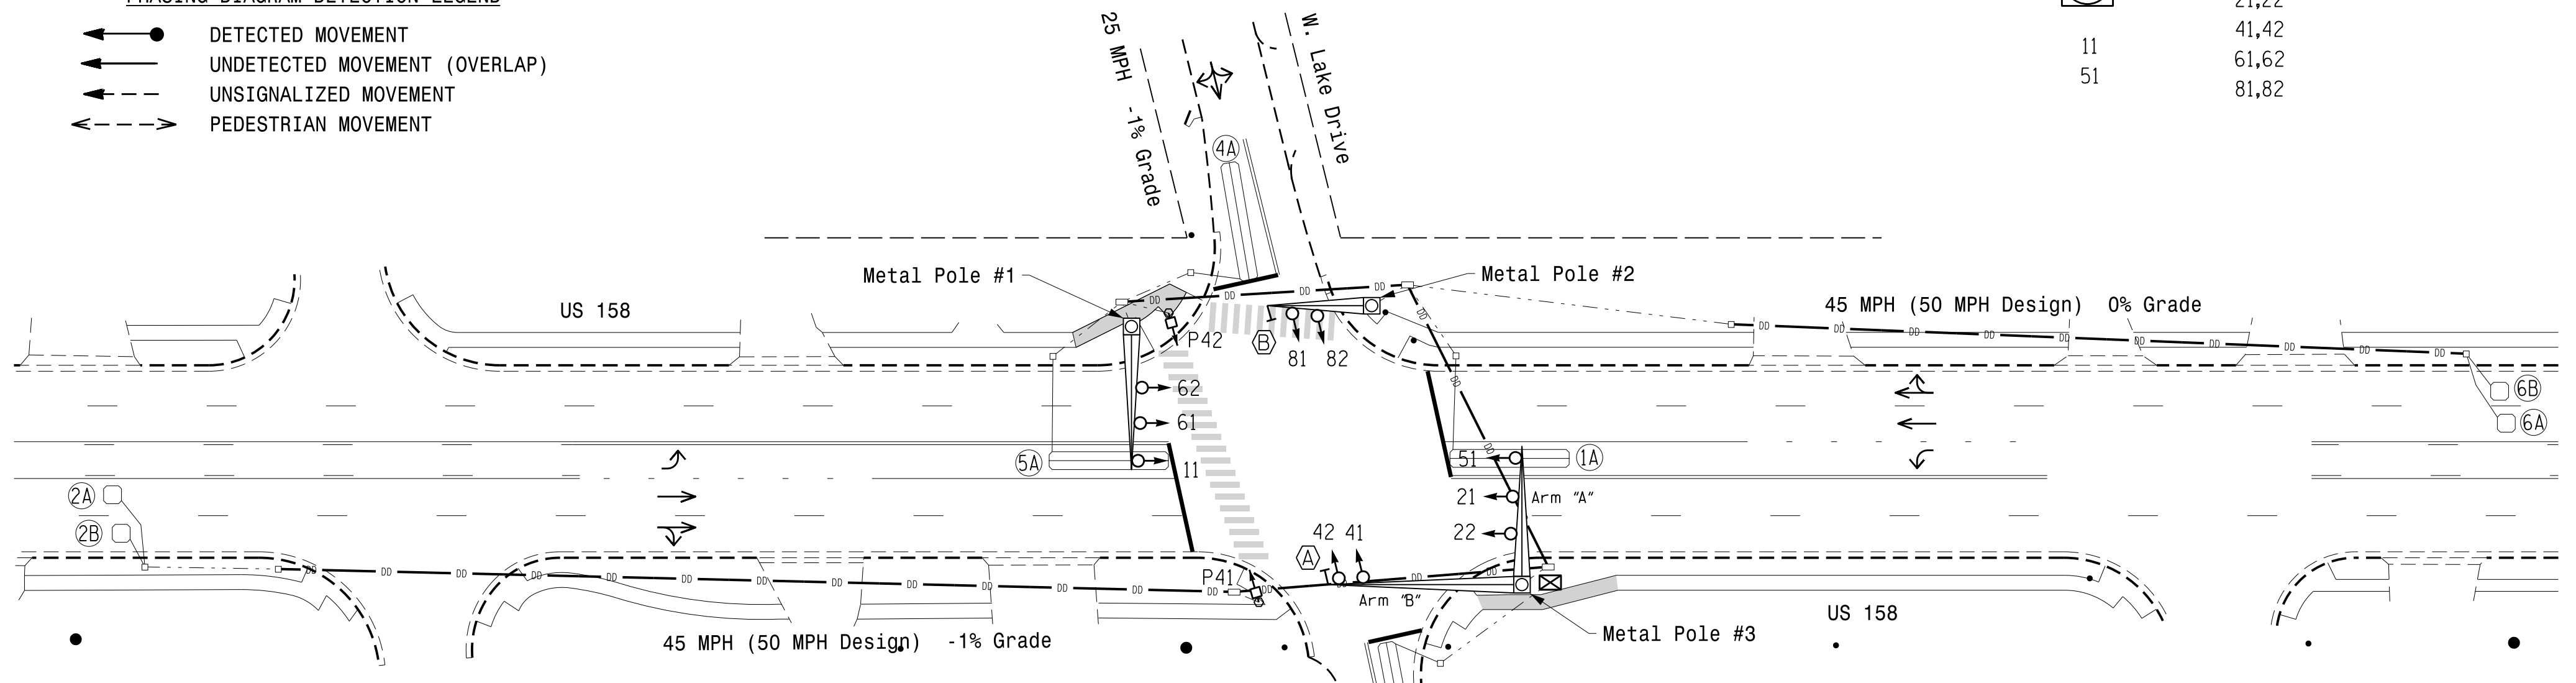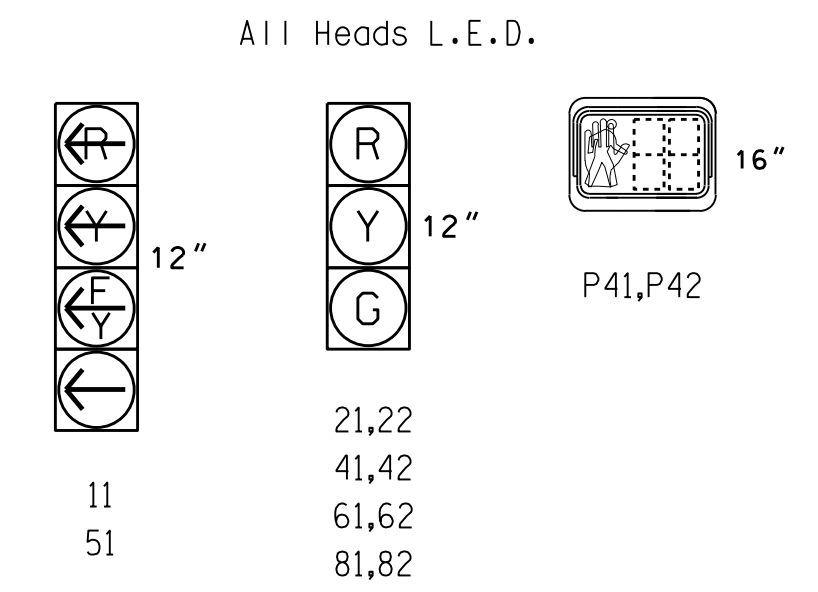


OASIS 2070 TIMING CHART

FEATURE	PHASE						
	1	2	4	5	6	8	
Min Green 1*	7	14	7	7	14	7	
Extension 1*	2.0	6.0	2.0	2.0	6.0	2.0	
Max Green 1*	20	90	20	20	90	20	
Yellow Clearance	3.0	4.9	3.2	3.0	4.9	3.2	
Red Clearance	2.1	2.1	2.8	2.1	2.1	2.9	
Walk 1*	-	-	7	-	-	7	
Don't Walk 1	-	-	21	-	-	21	
Advance Walk Time	-	-	3	-	-	3	
Seconds Per Actuation*	-	1.8	-	-	1.8	-	
Max Variable Initial*	-	40	-	-	40	-	
Time Before Reduction*	-	15	-	-	15	-	
Time To Reduce*	-	45	-	-	45	-	
Minimum Gap	-	3.1	-	-	3.1	-	
Recall Mode	-	MIN RECALL	-	-	MIN RECALL	-	
Vehicle Call Memory	-	YELLOW	-	-	YELLOW	-	
Dual Entry	-	-	ON	-	-	ON	
Simultaneous Gap	ON	ON	ON	ON	ON	ON	

\* These values may be field adjusted. Do not adjust Min Green and Extension times for phases 2 and 6 lower than what is shown. Min Green for all other phases should not be lower than 4 seconds.

LEGEND

- | PROPOSED   | EXISTING |
|--|----------|
| ○ → Traffic Signal Head                            | ● → N/A  |
| ○ → Modified Signal Head                           | ○ → N/A  |
| ○ → Pedestrian Signal Head With Push Button & Sign | ○ → N/A  |
| ○ → Signal Pole with Guy                           | ○ → N/A  |
| ○ → Signal Pole with Sidewalk Guy                  | ○ → N/A  |
| ○ → Inductive Loop Detector                        | ○ → N/A  |
| ○ → Controller & Cabinet                           | ○ → N/A  |
| ○ → Junction Box                                   | ○ → N/A  |
| ○ → 2-in Underground Conduit                       | ○ → N/A  |
| ○ → Directional Drill                              | ○ → N/A  |
| ○ → Right of Way                                   | ○ → N/A  |
| ○ → Directional Arrow                              | ○ → N/A  |
| ○ → Metal Pole with Mastarm                        | ○ → N/A  |
| ○ → Type II Signal Pedestal                        | ○ → N/A  |
| ○ → Turning Vehicles Yield to Peds Sign (R10-15R)  | ○ → N/A  |
| ○ → Turning Vehicles Yield to Peds Sign (R10-15L)  | ○ → N/A  |

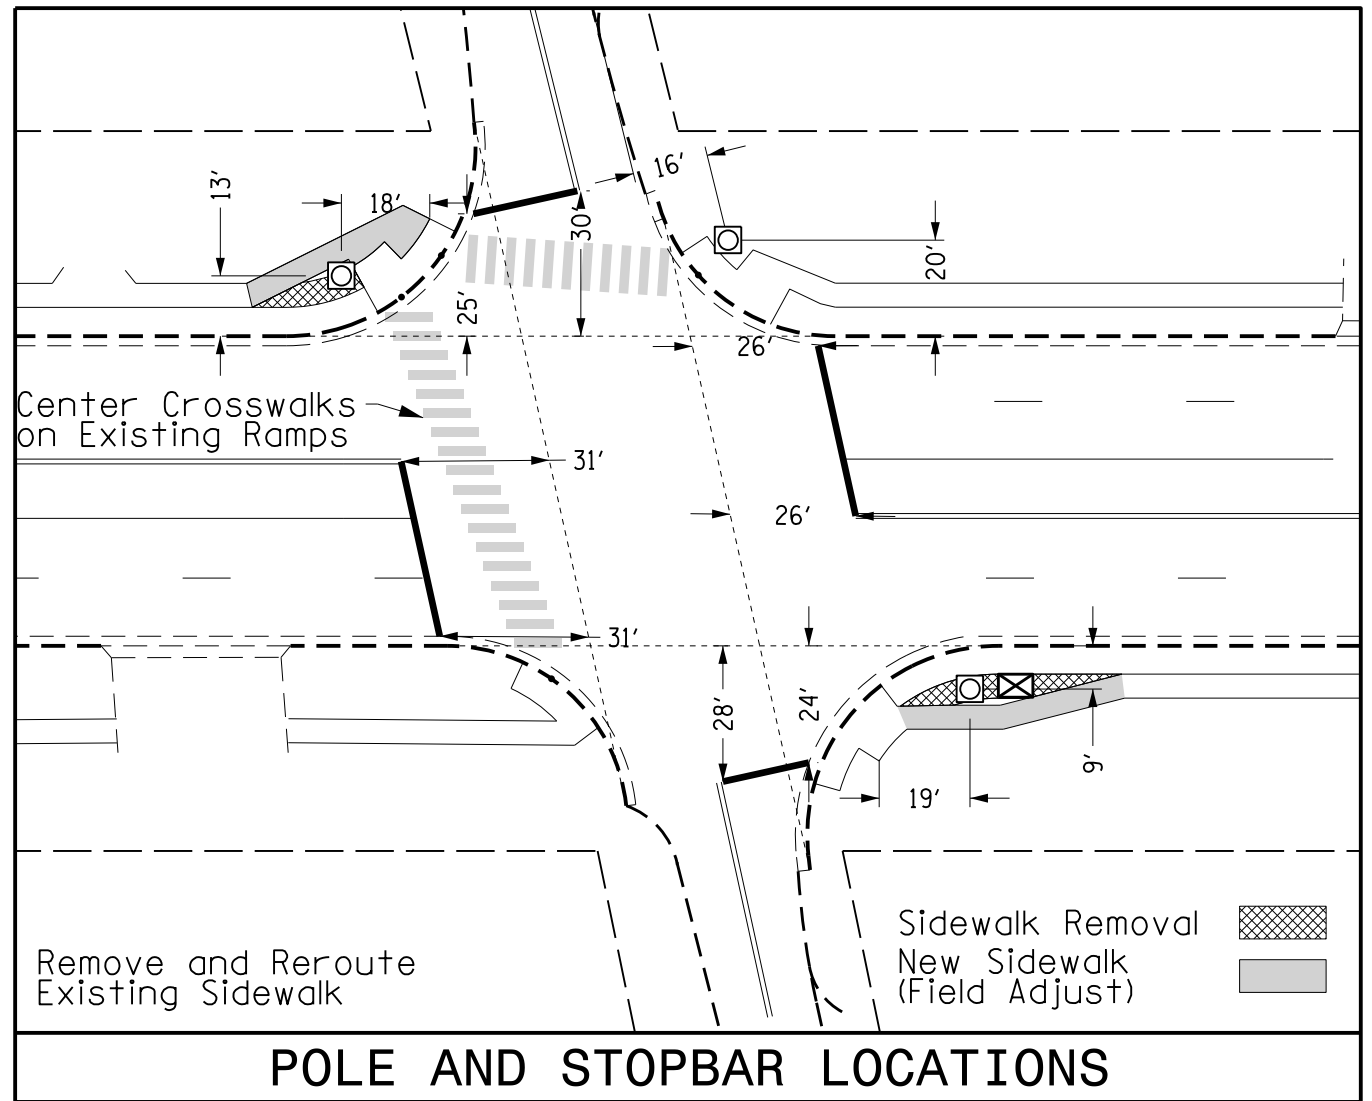

New Installation


Prepared in the Offices of:  
  
 US 158 at Lake Drive  
 Division 1 Dare County Kitty Hawk  
 PLAN DATE: November 2021 REVIEWED BY: ZML  
 PREPARED BY: JPG REVIEWED BY:  
 SCALE: 1" = 40'  
 DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED  

 DATE: 2/24/2022  
 SIGNATURE: \_\_\_\_\_ DATE: \_\_\_\_\_  
 SIG. INVENTORY NO. 01-0762

**EDI MODEL 2018ECL-NC CONFLICT MONITOR PROGRAMMING DETAIL**

(remove jumpers and set switches as shown)



REMOVE DIODE JUMPERS 1-5, 1-6, 1-9, 1-11, 2-5, 2-6, 2-9, 2-11, 4-8, 4-14, 5-9, 5-11, 6-9, 6-11, 8-14, and 9-11.

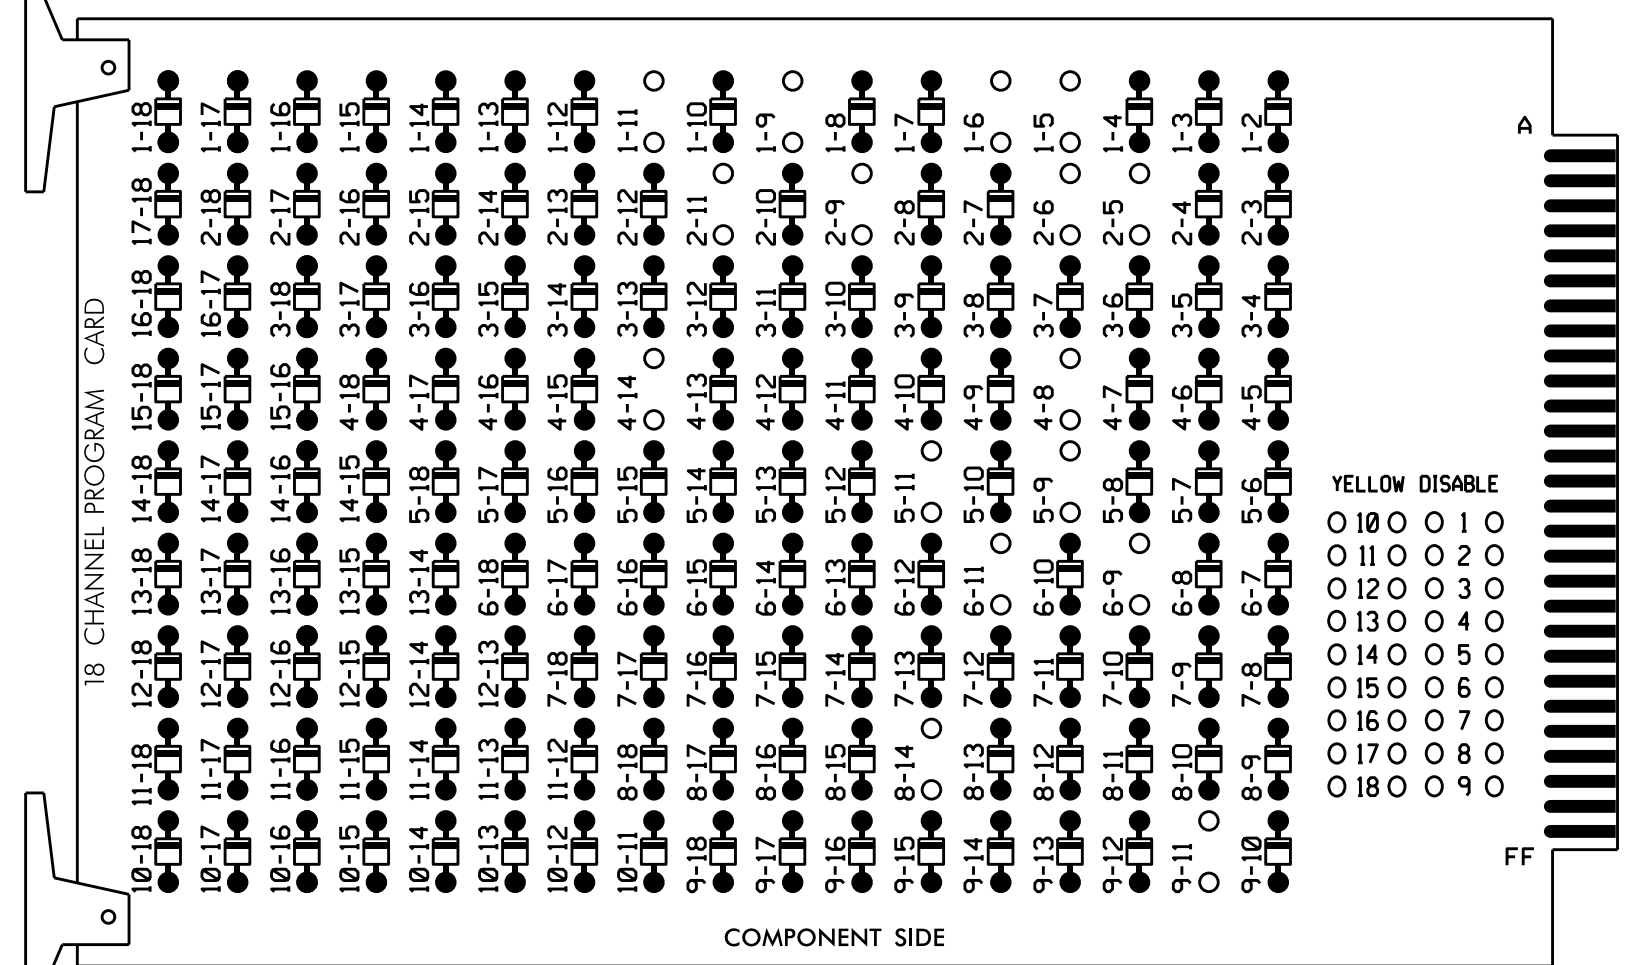

REMOVE JUMPERS AS SHOWN

**NOTES:**

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
- Ensure that Red Enable is active at all times during normal operation.
- Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

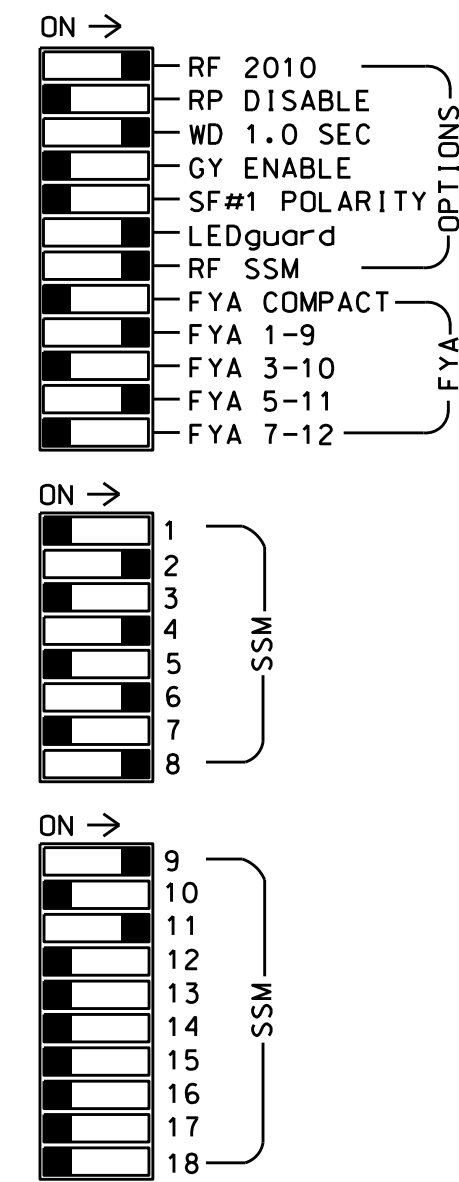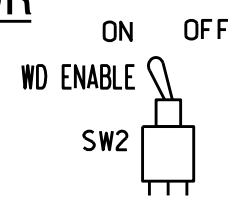

■ = DENOTES POSITION OF SWITCH

**NOTES**

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Program phases 4 and 8 for Dual Entry.
- Enable Simultaneous Gap-Out for all Phases.
- Program phases 2 and 6 for Variable Initial and Gap Reduction.
- Program phases 2 and 6 for Startup In Green.
- Program phases 2 and 6 for Yellow Flash, and overlap 1 as Wag Overlap.
- If this signal will be managed by an ATMS software, enable controller and detector logging for all detectors used at this location.
- The cabinet and controller are part of the D01-07 Kitty Hawk System.

**EQUIPMENT INFORMATION**

CONTROLLER.....2070  
 CABINET.....332 W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S1,S2,S5,S6,S7,S8,S11,AUX S1,AUX S4  
 PHASES USED.....1,2,4,PED,5,6,8,8PED  
 OVERLAP "A".....1+2  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....5+6  
 OVERLAP "D".....NOT USED

**SIGNAL HEAD HOOK-UP CHART**

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11	21,22	NU	NU	41,42	P41, P42	51	61,62	NU	NU	81,82	NU	11	NU	NU	51	NU	NU
RED		128			101			134			107							
YELLOW	*	129			102		*	135			108							
GREEN		130			103			136			109							
RED ARROW													A121			A114		
YELLOW ARROW													A122			A115		
FLASHING YELLOW ARROW													A123			A116		
GREEN ARROW	127							133										
Hand icon								104										
Person icon								106										

NU = Not Used  
 \* Denotes install load resistor. See load resistor installation detail this sheet.  
 ★ See pictorial of head wiring in detail this sheet.

**INPUT FILE POSITION LAYOUT**

(front view)

FILE "I"	1	2	3	4	5	6	7	8	9	10	11	12	13	14
U	∅ 1 1A	∅ 2 2A	∅ 3 3A	∅ 4 4A	∅ 5 5A	∅ 6 6A	∅ 7 7A	∅ 8 8A	∅ 9 9A	∅ 10 10A	∅ 11 11A	∅ 12 12A	∅ 13 13A	∅ 14 14A
L	NOT USED	∅ 2 2B	∅ 3 3B	∅ 4 4B	∅ 5 5B	∅ 6 6B	∅ 7 7B	∅ 8 8B	∅ 9 9B	∅ 10 10B	∅ 11 11B	∅ 12 12B	∅ 13 13B	∅ 14 14B
U	∅ 5 5A	∅ 6 6A	∅ 7 7A	∅ 8 8A	∅ 9 9A	∅ 10 10A	∅ 11 11A	∅ 12 12A	∅ 13 13A	∅ 14 14A	∅ 15 15A	∅ 16 16A	∅ 17 17A	∅ 18 18A
L	NOT USED	∅ 6 6B	∅ 7 7B	∅ 8 8B	∅ 9 9B	∅ 10 10B	∅ 11 11B	∅ 12 12B	∅ 13 13B	∅ 14 14B	∅ 15 15B	∅ 16 16B	∅ 17 17B	∅ 18 18B

EX.: 1A, 2A, ETC. = LOOP NO.'S  
 FS = FLASH SENSE  
 ST = STOP TIME

⊗ Wired Input - Do not populate slot with detector card

**INPUT FILE CONNECTION & PROGRAMMING CHART**

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A <sup>1</sup>	TB2-1,2	I1U	56	18	1	1	Y	Y			15
	-	J4U	48	10★	26	6	Y	Y	Y		3
	-	I1U	56	18★	51	1	Y	Y			3
2A	TB2-5,6	I2U	39	1	2	2	Y	Y			
	TB2-7,8	I2L	43	5	12	2	Y	Y			
	TB4-9,10	I6U	41	3	4	4	Y	Y			5
5A <sup>2</sup>	TB3-1,2	J1U	55	17	5	5	Y	Y	Y		15
	-	I4U	47	9★	22	2	Y	Y	Y		3
	-	J1U	55	17★	55	5	Y	Y			3
6A	TB3-5,6	J2U	40	2	6	6	Y	Y			
6B	TB3-7,8	J2L	44	6	16	6	Y	Y			
8A	TB5-9,10	J6U	42	4	8	8	Y	Y			
PED PUSH BUTTONS											
P41,P42	TB8-5,6	I12L	69	31	PED 4	4/8 PED					


NOTE:  
 INSTALL DC ISOLATOR IN INPUT FILE SLOT I12.

- <sup>1</sup>Add jumper from I1-W to J4-W, on rear of input file.  
<sup>2</sup>Add jumper from J1-W to I4-W, on rear of input file.  
 ★ See Input Page Assignment programming details on sheets 3 and 4.


**LOAD RESISTOR INSTALLATION DETAIL**

(install resistors as shown below)

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

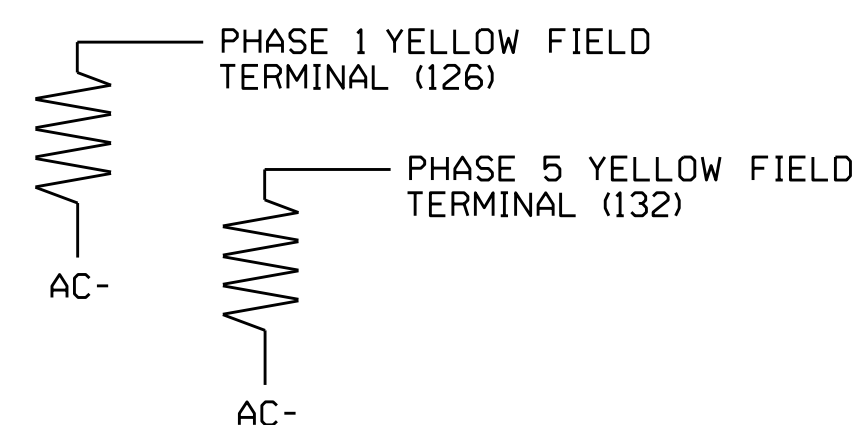


**INPUT FILE POSITION LEGEND: J2L**

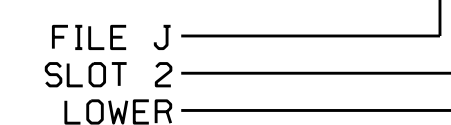

**FYA SIGNAL WIRING DETAIL**

(wire signal heads as shown)

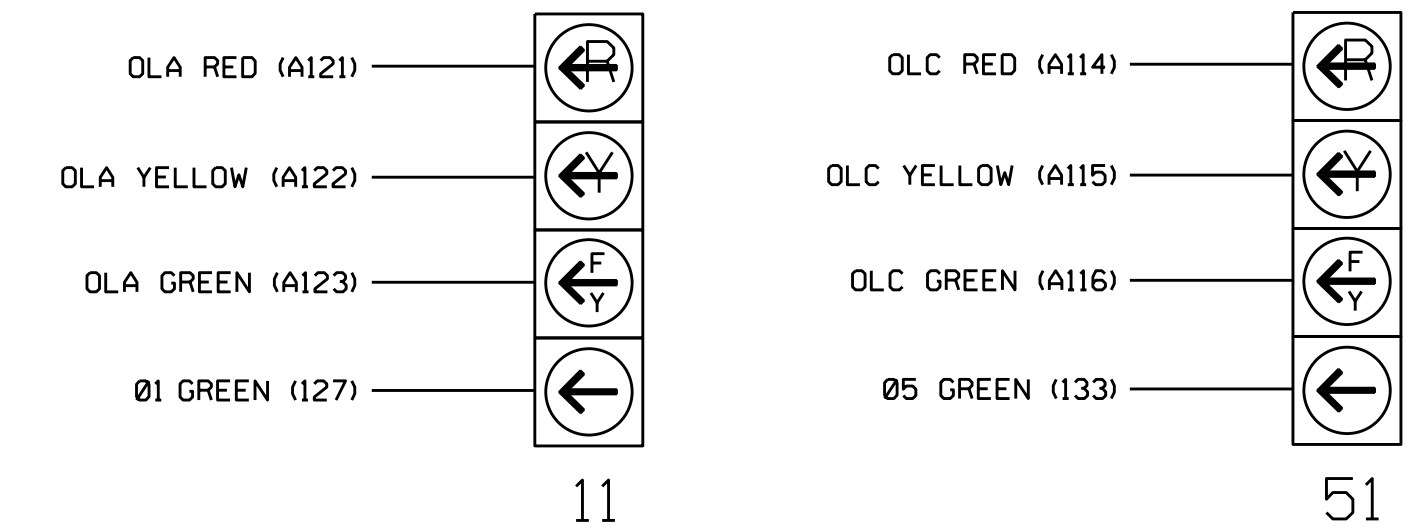

**NOTE**

The sequence display for signal heads 11 and 51 requires special logic programming. See sheet 2 for programming instructions.


**COUNTDOWN PEDESTRIAN SIGNAL OPERATION**

Countdown Ped Signals are required to display timing only during Ped Clearance Interval. Consult Ped Signal Module user's manual for instructions on selecting this feature.

THIS ELECTRICAL DETAIL IS FOR  
 THE SIGNAL DESIGN: 01-0762  
 DESIGNED: February 2022  
 SEALED: 02/24/2022  
 REVISED:

Electrical Detail - Sheet 1 of 5

ELECTRICAL AND PROGRAMMING DETAILS FOR:

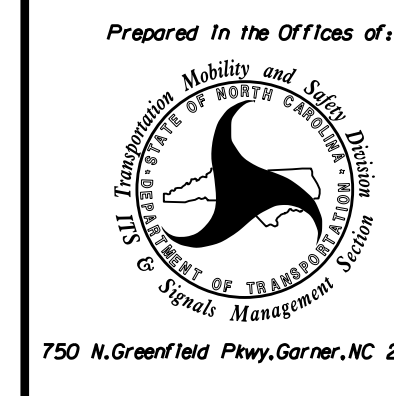

US 158  
 at  
 Lake Drive


Division 1 Dare County Kitty Hawk

PLAN DATE: February 2022 REVIEWED BY: ZML

PREPARED BY: JPG REVIEWED BY:

REVISIONS INIT. DATE

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

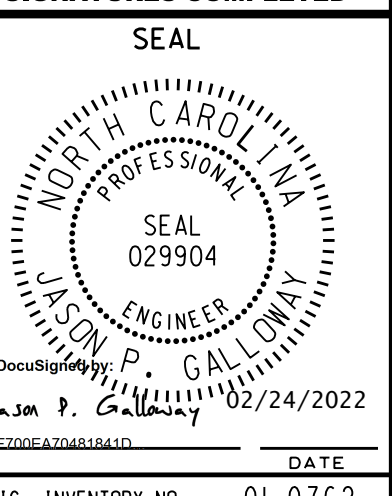

SIG. INVENTORY NO. 01-0762

### LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS), SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5 AND 6.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

LOGICAL I/O COMMAND #1 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON  
AND RED CLEAR ON PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #50 ON  
SET OUTPUT ASSIGNMENT #51 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 1 RED CLEAR WHEN TRANSITIONING FROM PHASE 1 TO PHASE 2 (HEAD 11).

LOGICAL I/O COMMAND #2 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #52 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #3 (+/-COMMAND#)  
IF YELLOW ON PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #51 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #4 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON  
AND RED CLEAR ON PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #42 ON  
SET OUTPUT ASSIGNMENT #43 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

LOGICAL I/O COMMAND #5 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #44 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).

LOGICAL I/O COMMAND #6 (+/-COMMAND#)  
IF YELLOW ON PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #43 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE

#### OUTPUT REFERENCE SCHEDULE

OUTPUT 42 = Overlap C Red  
OUTPUT 43 = Overlap C Yellow  
OUTPUT 44 = Overlap C Green  
OUTPUT 50 = Overlap A Red  
OUTPUT 51 = Overlap A Yellow  
OUTPUT 52 = Overlap A Green

### PEDESTRIAN DETECTOR ASSIGNMENT PROGRAMMING DETAIL

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN '2' (PEDESTRIAN DETECTOR ASSIGNMENTS). PRESS '+' UNTIL PED DETECTOR #4 IS REACHED.

PED DETECTOR #4 SETTINGS (+/- DET)  
PHASE# : 12345678910111213141516  
PHASES ASSIGNED : X X  
SETTING: (Y/N)  
ENABLE DETECTOR.....Y  
ENABLE LOGGING.....N  
ENABLE DIAGNOSTICS.....N  
RECALL IF FAILED.....N  
MAX CALLS/MINUTE (0-255).....255  
MAX CALLS/DIAG PERIOD (0-255).....0  
MAX OCCUPANCY % (0-100%).....100

### OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

PAGE 1: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: : 12345678910111213141516  
VEH OVL PARENTS: : XX  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC).....0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+' TWICE

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: : 12345678910111213141516  
VEH OVL PARENTS: : XX  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC).....0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)....0

OVERLAP PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS). PRESS 'NEXT' TO ADVANCE TO PAGE 2.

PAGE 2: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: : 12345678910111213141516  
VEH OVL PARENTS: : X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC).....0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+' TWICE

PAGE 2: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: : 12345678910111213141516  
VEH OVL PARENTS: : X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC).....0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)....0

OVERLAP PROGRAMMING COMPLETE


### ADVANCE WALK NOTE

(program controller as shown below)

From Main Menu press '2' (Phase Control), then '1' (Phase Control Functions). Program phases 4 and 8 for 'Advanced Walk'. Make sure the Walk Advance Time shown on the Signal Design plans are programmed in the 'Phase Timing' menu.

THIS ELECTRICAL DETAIL IS FOR  
THE SIGNAL DESIGN: 01-0762  
DESIGNED: February 2022  
SEALED: 02/24/2022  
REVISED:

Electrical Detail - Sheet 2 of 5

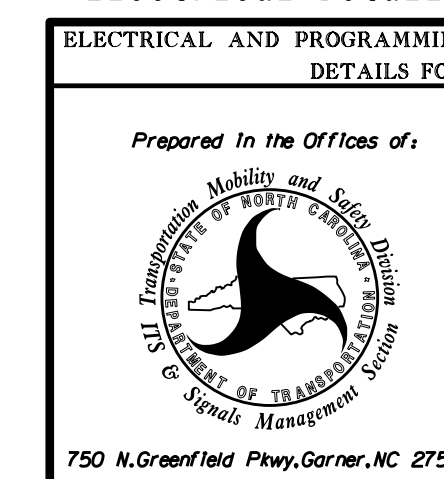

US 158  
at  
Lake Drive

Division 1 Dare County Kitty Hawk

PLAN DATE: February 2022 REVIEWED BY: ZML

PREPARED BY: JPG REVIEWED BY:

REVISIONS INIT. DATE

DocuSigned by: Jason P. Gallaway 02/24/2022

SIG. INVENTORY NO. 01-0762

DOCUMENT NOT CONSIDERED  
FINAL UNLESS ALL  
SIGNATURES COMPLETED

SEAL

DocuSigned by: Jason P. Gallaway 02/24/2022


SIG. INVENTORY NO. 01-0762

**INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 1A**

(program controller as shown below)

- NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.
2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #10 (DETECTOR 26) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 6 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 51 TO INPUT #18 SO THAT THE DELAY ON LOOP 1A CAN BE REDUCED FROM 15 SECONDS TO 3 SECONDS.


FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 10 IS REACHED.

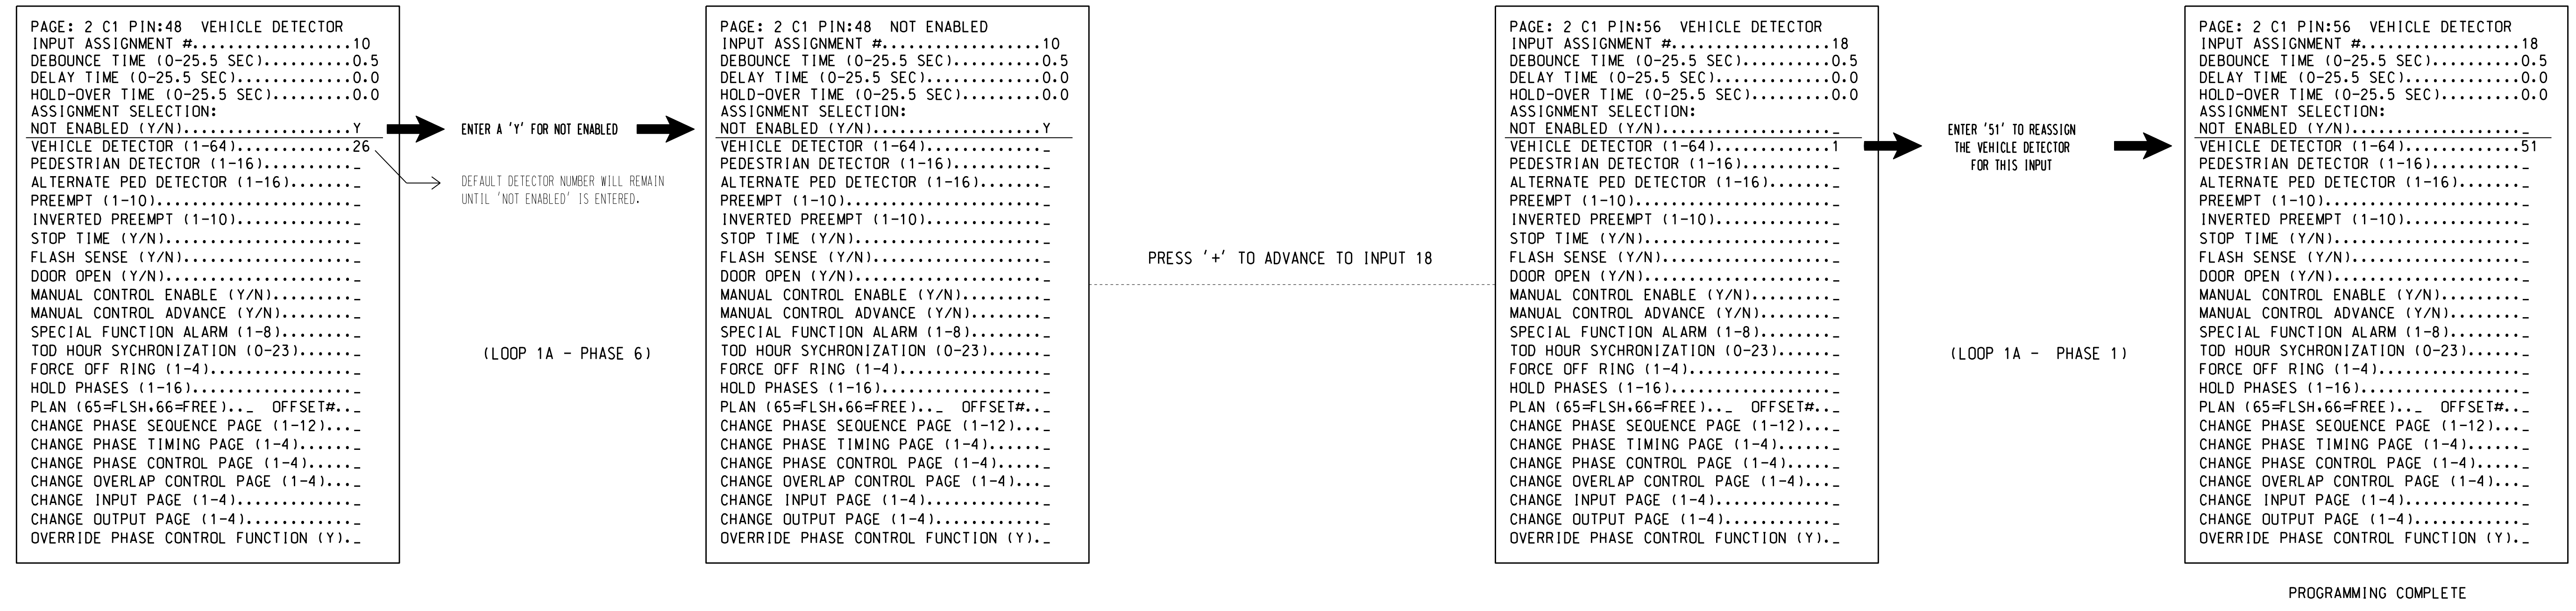

**SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 1A (ALT.)**

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #51.

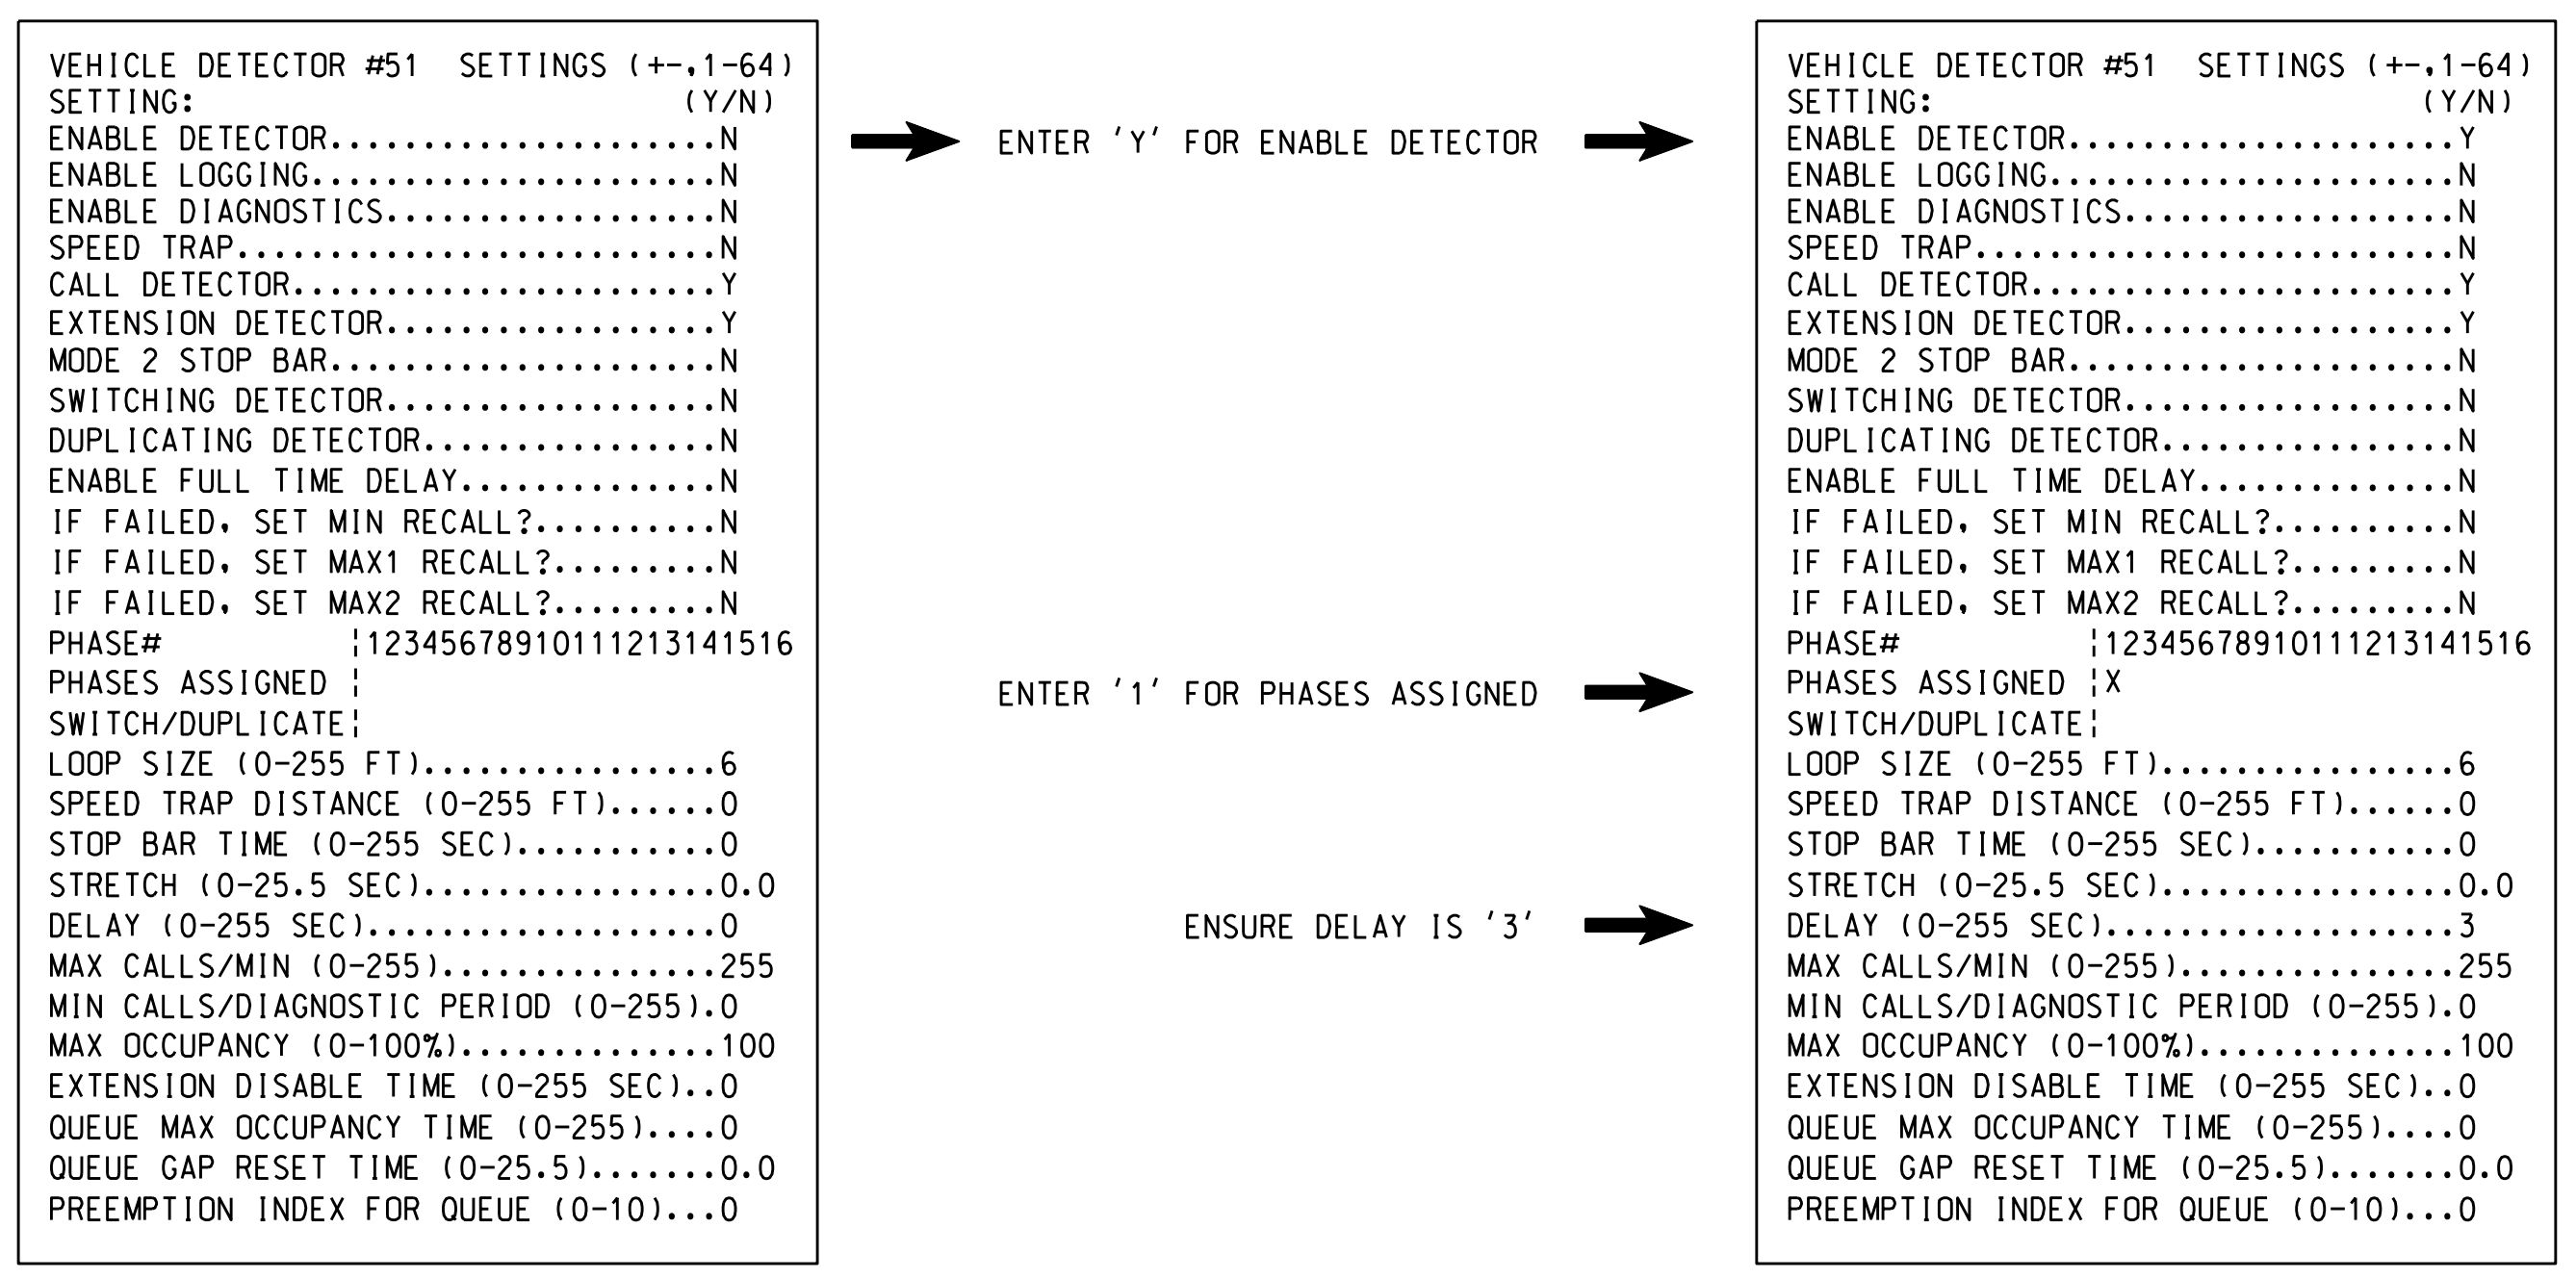

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 01-0762  
DESIGNED: February 2022  
SEALED: 02/24/2022  
REVISED:

24-FEB-2022 13:40  
41010627.mic.e16-202110v4.dgn  
jgcllcwcy

Electrical Detail - Sheet 3 of 5


<p>Prepared In the Offices of: North Carolina State Traffic Management Society 750 N. Greenfield Pkwy, Garner, NC 27529</p>	<p>US 158 at Lake Drive</p> <p>Division 1 Dare County Kitty Hawk</p> <p>PLAN DATE: February 2022 REVIEWED BY: ZML</p> <p>PREPARED BY: JPG REVIEWED BY:</p> <p>REVISIONS INIT. DATE</p>	<p>DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED</p> <p>SEAL</p> <p>SEAL 029904</p> <p>JASON P. GALLAWAY ENGINEER</p> <p>DocuSigned by: Jason P. Gallaway 02/24/2022</p> <p>SIG. INVENTORY NO. 01-0762</p>
---	--	--

INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 5A

(program controller as shown below)

- NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.
2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #9 (DETECTOR 22) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 2 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 55 TO INPUT #17 SO THAT THE DELAY ON LOOP 5A CAN BE REDUCED FROM 15 SECONDS TO 3 SECONDS.


FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 9 IS REACHED.

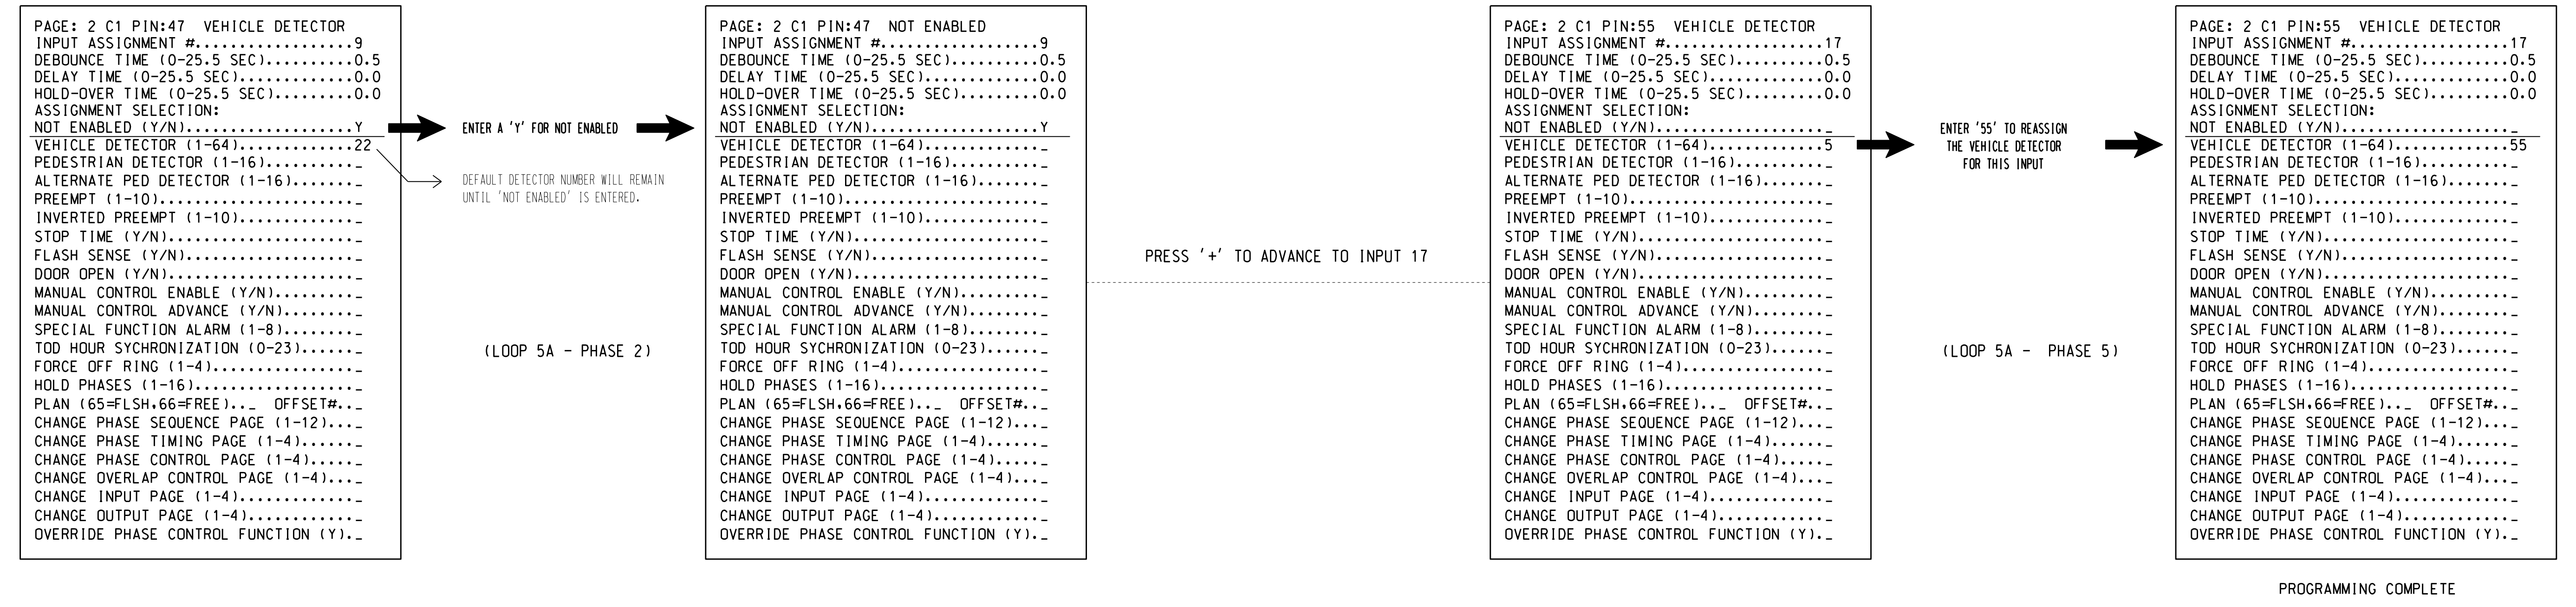

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 5A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #55.

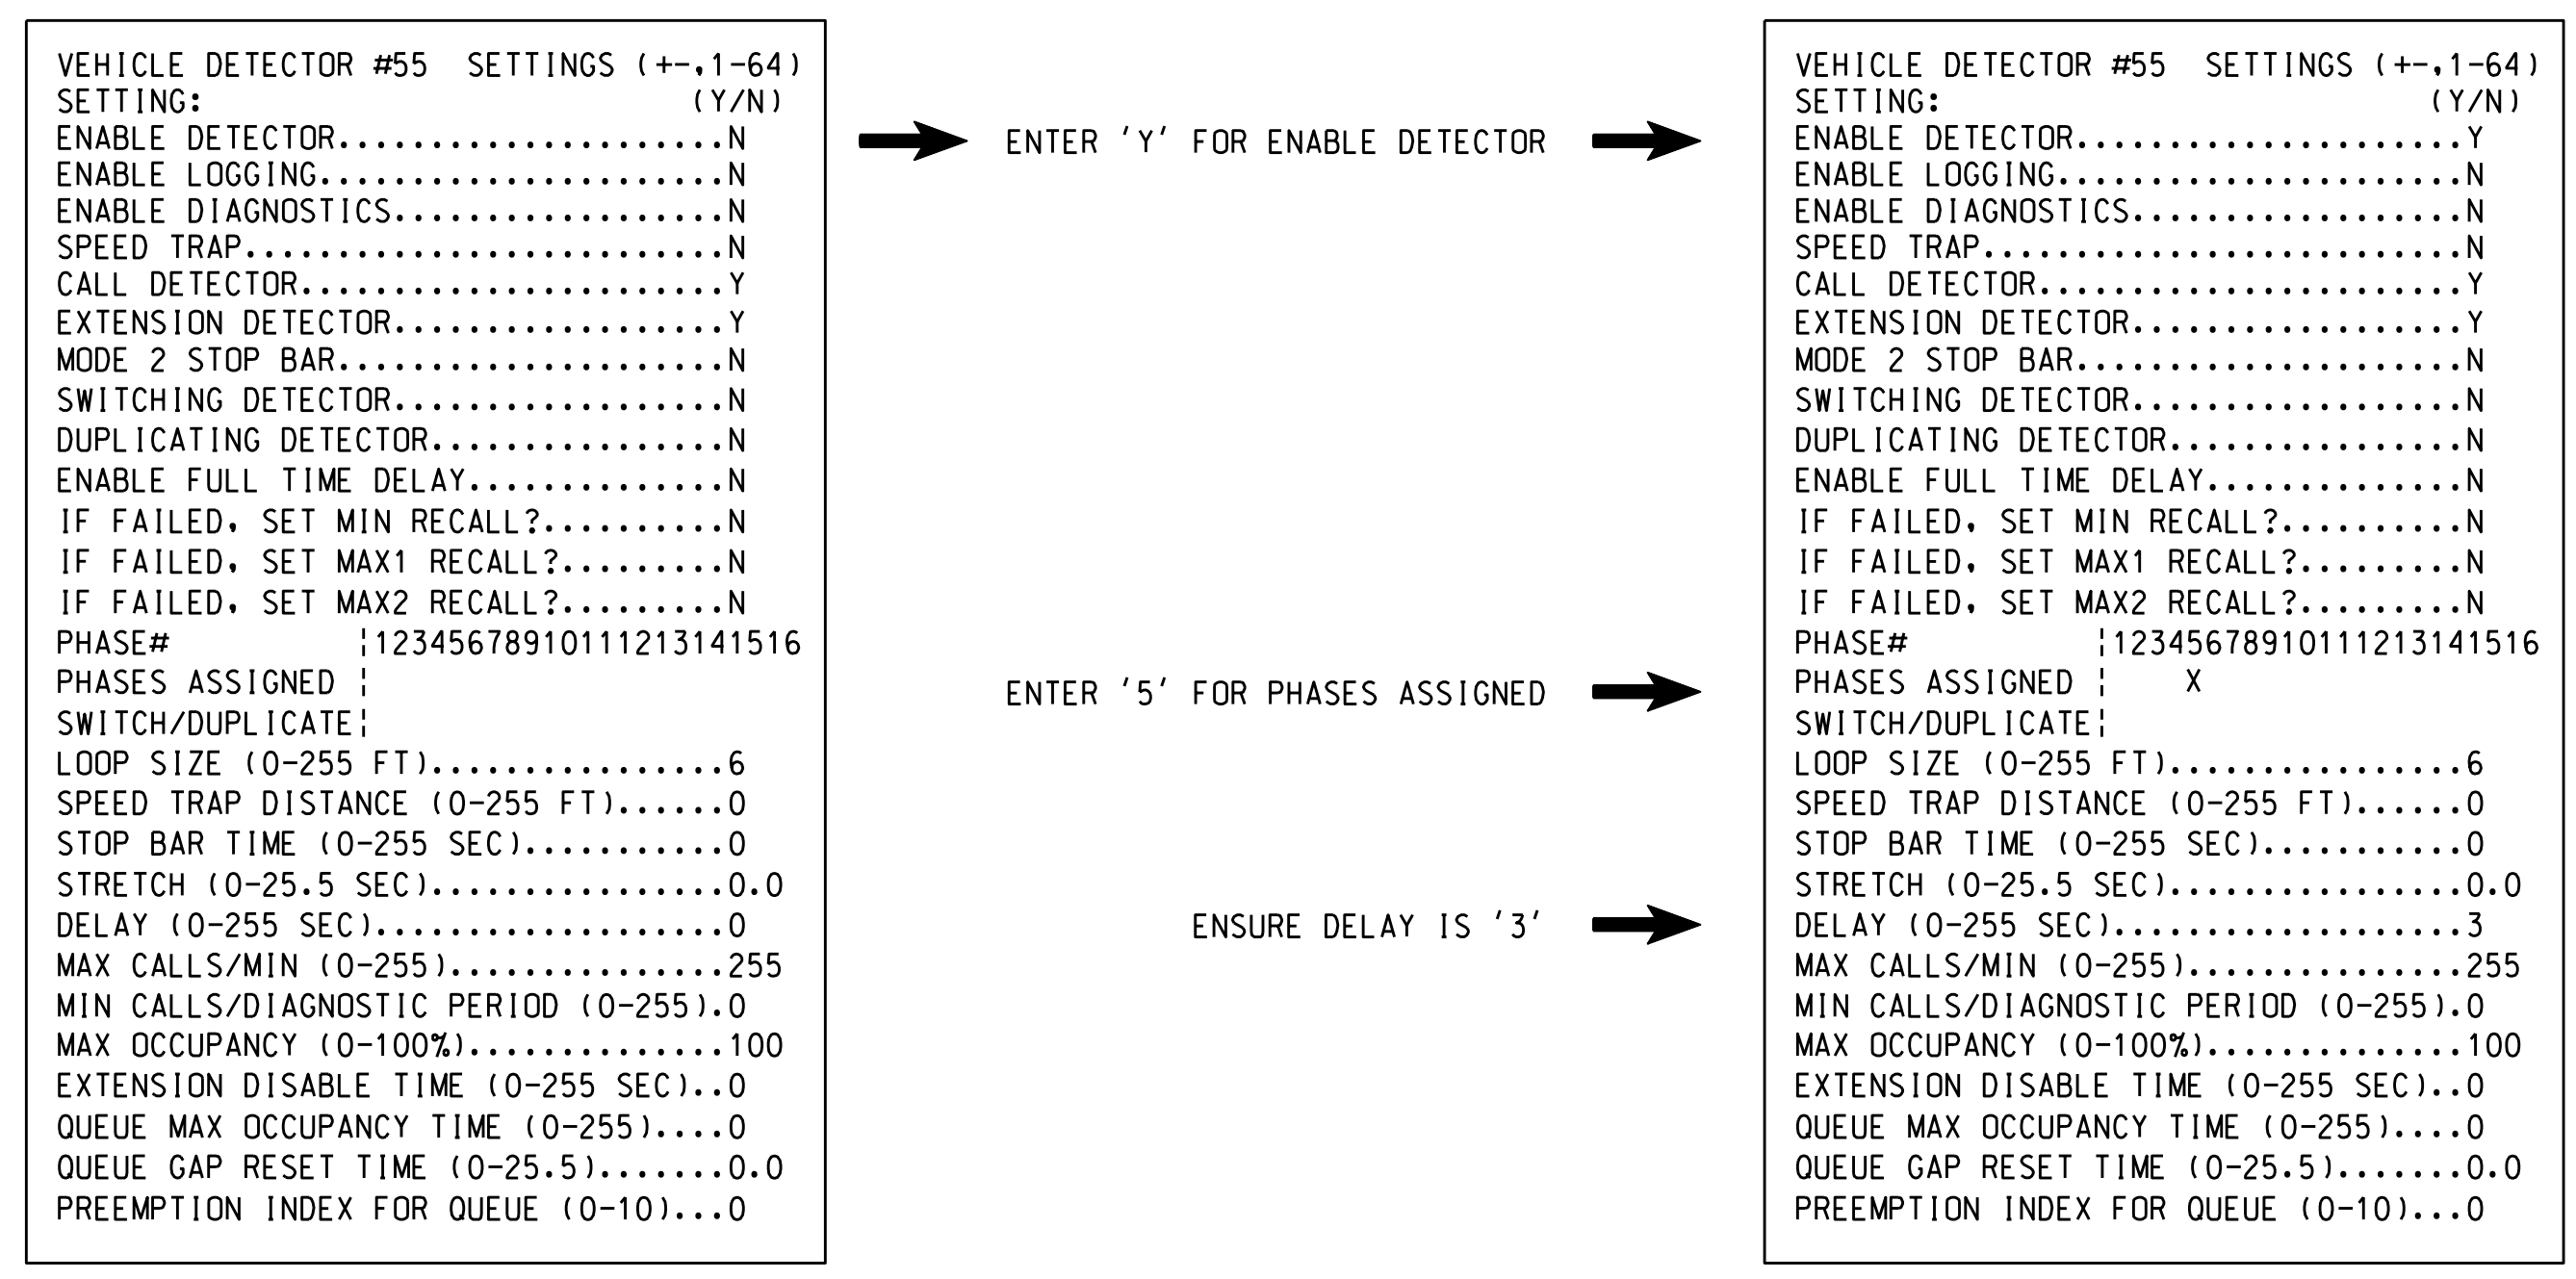

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 01-0762  
DESIGNED: February 2022  
SEALED: 02/24/2022  
REVISED:

24-FEB-2022 13:41  
4101027.mic.e16-202110v4.dgn  
jgc11cmcy

Electrical Detail - Sheet 4 of 5

US 158 at Lake Drive

Division 1 Dare County Kitty Hawk

PLAN DATE: February 2022 REVIEWED BY: ZML

PREPARED BY: JPG REVIEWED BY:

REVISIONS INIT. DATE

750 N. Greenfield Pkwy, Garner, NC 27529

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SEAL  
NATHAN H. CARROLL  
PROFESSIONAL ENGINEER  
SEAL 029904  
JASON P. GALLAWAY  
02/24/2022

SIG. INVENTORY NO. 01-0762

## ALTERNATE PHASING ACTIVATION DETAIL

TO RUN ALT. PHASING DURING COORDINATION - SELECT ALL PAGE CHANGES (AS SHOWN BELOW) WITHIN COORDINATION PLAN PROGRAMMING.

TO RUN ALT. PHASING DURING FREE RUN - PROGRAM PAGE CHANGES (SHOWN BELOW) IN SEPARATE TIME OF DAY EVENTS. IF PAGE 1 IS USED, NO EVENT PROGRAMMING IS NECESSARY FOR THAT PARTICULAR PAGE.

<u>PHASING</u>	<u>INPUTS PAGE</u>	<u>OVERLAPS PAGE</u>
ACTIVE PAGES REQUIRED TO RUN <u>DEFAULT PHASING</u>	1	1
ACTIVE PAGES REQUIRED TO RUN <u>ALTERNATE PHASING</u>	2	2

NOTE: PAGES NOT SHOWN (i.e. sequence, phase control, etc.) SHOULD REMAIN AS '1', OR AS DEFINED BY TIMING ENGINEER.

IMPORTANT: IF ALT. PHASING IS USED DURING FREE RUN AND COORDINATION, DO NOT OPERATE TIME OF DAY PAGE CHANGE EVENTS CONCURRENTLY WITH COORDINATION PLAN EVENTS IN THE EVENT SCHEDULER. (EX. FREE RUN PAGE CHANGE EVENT SHOULD END BEFORE COORDINATION PLAN EVENT STARTS AND VICE-VERSA).

### ALTERNATE PHASING PAGE CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN THESE OVERLAP/INPUT PAGE CHANGES ACTIVATE TO CALL THE "ALTERNATE PHASING":


OVERLAPS PAGE 2: Modifies overlap parent phases for heads 11 and 51 to run protected turns only.

INPUTS PAGE 2: Disables phase 6 call on loop 1A and reduces delay time for phase 1 call on loop 1A to 3 seconds.


Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 3 seconds.

THIS ELECTRICAL DETAIL IS FOR  
THE SIGNAL DESIGN: 01-0762  
DESIGNED: February 2022  
SEALED: 02/24/2022  
REVISED:

Electrical Detail - Sheet 5 of 5
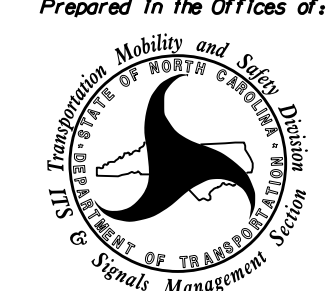
<p>ELECTRICAL AND PROGRAMMING DETAILS FOR:</p> <p>Prepared In the Offices of:</p>  <p>750 N. Greenfield Pkwy, Garner, NC 27529</p>	<p><b>US 158 at Lake Drive</b></p> <p>Division 1    Dare County    Kitty Hawk</p> <p>PLAN DATE: February 2022    REVIEWED BY: ZML</p> <p>PREPARED BY: JPG    REVIEWED BY:</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th>REVISIONS</th> <th>INIT.</th> <th>DATE</th> </tr> <tr> <td> </td> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> <td> </td> </tr> </table>	REVISIONS	INIT.	DATE							<p style="text-align: center;">SEAL</p> <p style="text-align: center;">NORTH CAROLINA PROFESSIONAL ENGINEER JASON P. GALLOWAY</p> <p style="text-align: center;">SEAL 029904</p> <p style="text-align: center;">Jason P. Galloway    02/24/2022</p> <p style="text-align: center;">7700EA70481841D    DATE</p> <p>SIG. INVENTORY NO. 01-0762</p>
REVISIONS	INIT.	DATE									

**Design Loading for METAL POLE NO. 1**

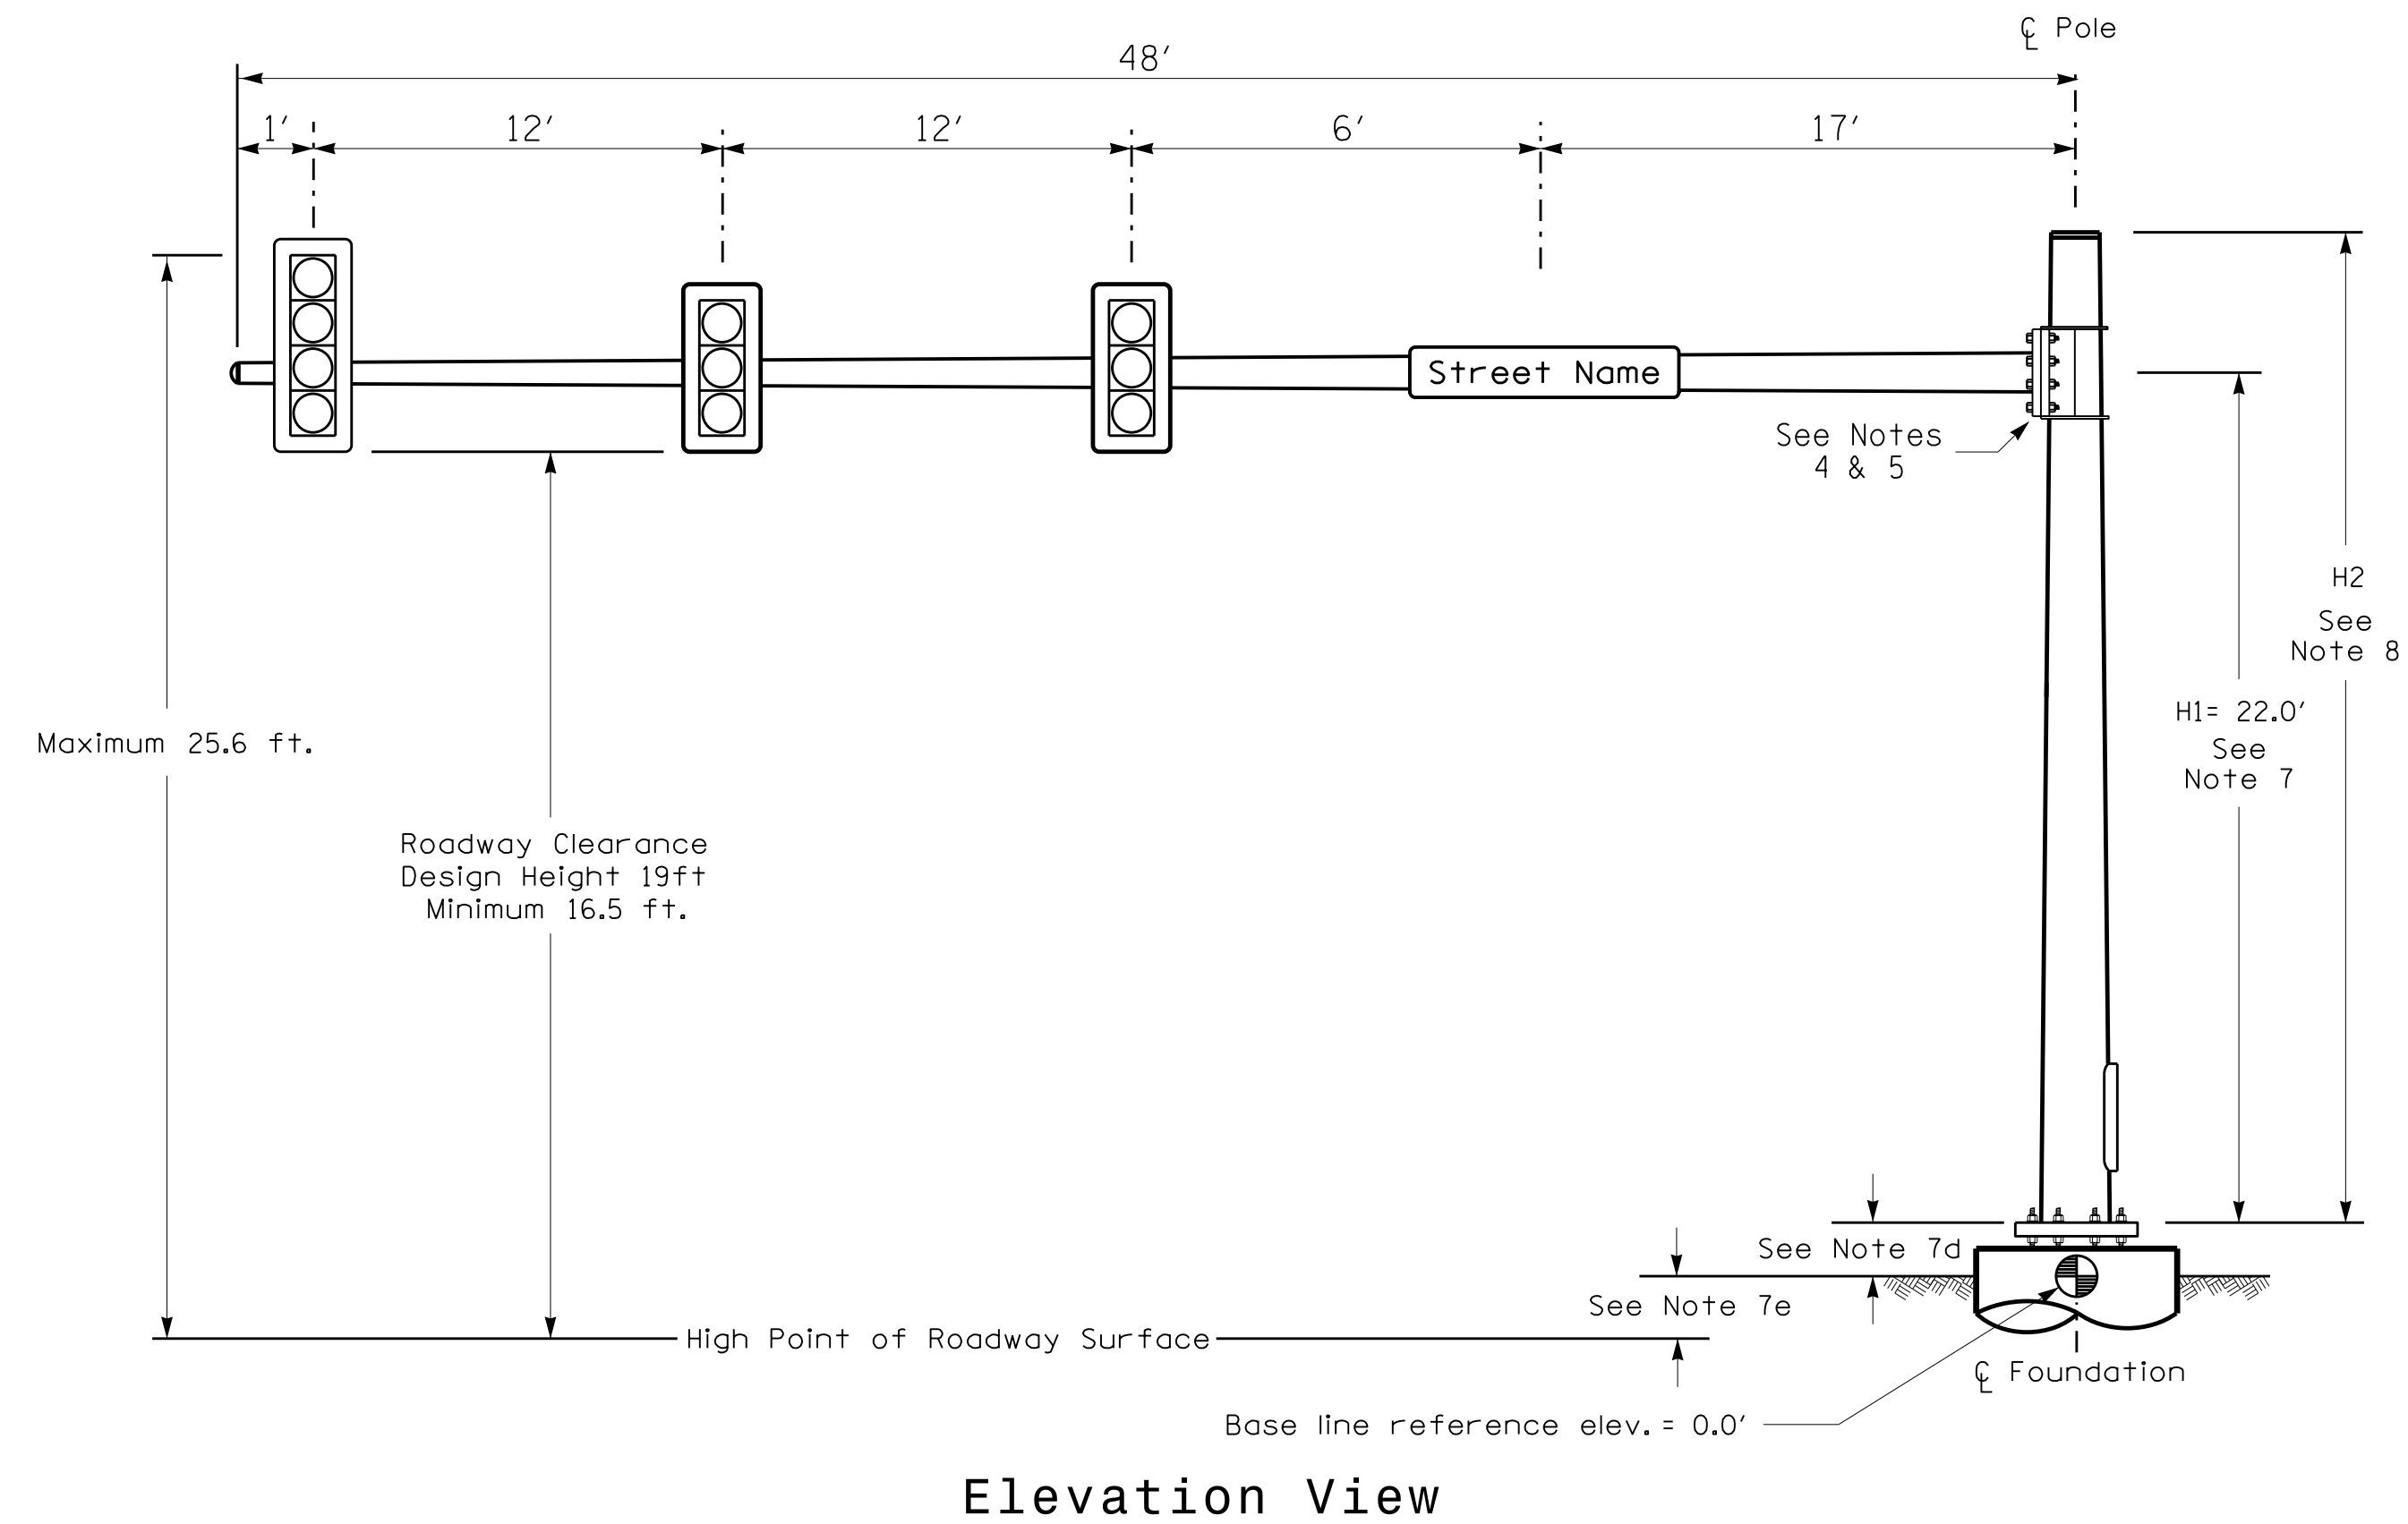

Elevation View

**SPECIAL NOTE**  
The contractor is responsible for verifying that the mast arm attachment height (H1) will provide the "Design Height" clearance from the roadway before submitting final shop drawings for approval. Verify elevation data below which was obtained by field measurement or from available project survey data.

**Elevation Data for Mast Arm Attachment (H1)**

Elevation Differences for:	Pole 1	Pole 2
Baseline reference point at Foundation @ ground level	0.0 ft.	0.0 ft.
Elevation difference at High point of roadway surface	+0.9 ft.	-0.8 ft.
Elevation difference at Edge of travelway or face of curb	N/A	N/A

**MAST ARM LOADING SCHEDULE**

LOADING SYMBOL	DESCRIPTION	AREA	SIZE	WEIGHT
[Symbol]	RIGID MOUNTED SIGNAL HEAD 12"-4 SECTION-WITH BACKPLATE	11.5 S.F.	25.5" W X 66.0" L	74 LBS
[Symbol]	RIGID MOUNTED SIGNAL HEAD 12"-3 SECTION-WITH BACKPLATE	9.3 S.F.	25.5" W X 52.5" L	60 LBS
[Symbol]	SIGN RIGID MOUNTED	7.5 S.F.	30.0" W X 36.0" L	14 LBS
[Symbol]	STREET NAME SIGN RIGID MOUNTED	16.0 S.F.	24.0" W X 96.0" L	36 LBS




**NOTES**

**DESIGN REFERENCE MATERIAL**


- Design the traffic signal structure and foundation in accordance with:
  - The 6th Edition 2013 AASHTO "Standard Specifications for Structural Supports for Highway Signs, Luminaires, and Traffic Signals, including all of the latest interim revisions.
  - The 2018 NCDOT "Standard Specifications for Roads and Structures." The latest addenda to the specifications can be found in the traffic signal project special provisions.
  - The 2018 NCDOT Roadway Standard Drawings.
  - The traffic signal project plans and special provisions.
  - The NCDOT "Metal Pole Standards" located at the following NCDOT website: <https://connect.ncdot.gov/resources/safety/Pages/ITS-Design-Resources.aspx>

**DESIGN REQUIREMENTS**

- Design the traffic signal structure using the loading conditions shown in the elevation views. These are anticipated worst case "design loads" and may not represent the actual loads that will be applied at the time of the installation. The contractor should refer to the traffic signal plans for the actual loads that will be applied at the time of the installation.
- Design all signal supports using stress ratios that do not exceed 0.9.
- The camber design for the mast arm deflection should provide an appearance of a low pitched arch where the tip or the free end of the mast arm does not deflect below horizontal when fully loaded.
- A clamp-type bolted mast arm-to-pole connection may be used instead of the welded ring stiffened box connection shown as long as the connection meets all of the design requirements.
- Design base plate with 8 anchor bolt holes. Provide 2 inch x 60 inch anchor bolts.
- The mast arm attachment height (H1) shown is based on the following design assumptions:
  - Mast arm slope and deflection are not considered in determining the arm attachment height as they are assumed to offset each other.
  - Signal heads are rigidly mounted and vertically centered on the mast arm.
  - The roadway clearance height for design is as shown in the elevation views.
  - The top of the pole base plate is 0.75 feet above the ground elevation.
  - Refer to the Elevation Data Chart for the elevation differences between the proposed foundation ground level and the high point of the roadway.
- The pole manufacturer will determine the total height (H2) of each pole using the greater of the following:
  - Mast arm attachment height (H1) plus 2 feet, or
  - H1 plus 1/2 of the total height of the mast arm attachment assembly plus 1 foot.
- If pole location adjustments are required, the contractor must gain approval from the Engineer as this may affect the mast arm lengths and arm attachment heights. The contractor may contact the Signal Design Section Senior Structural Engineer for assistance at (919) 814-5000.
- The contractor is responsible for verifying that the mast arm length shown will allow proper positioning of the signal heads over the roadway.
- The contractor is responsible for providing soil penetration testing data (SPT) to the pole manufacturer so site specific foundations can be designed.

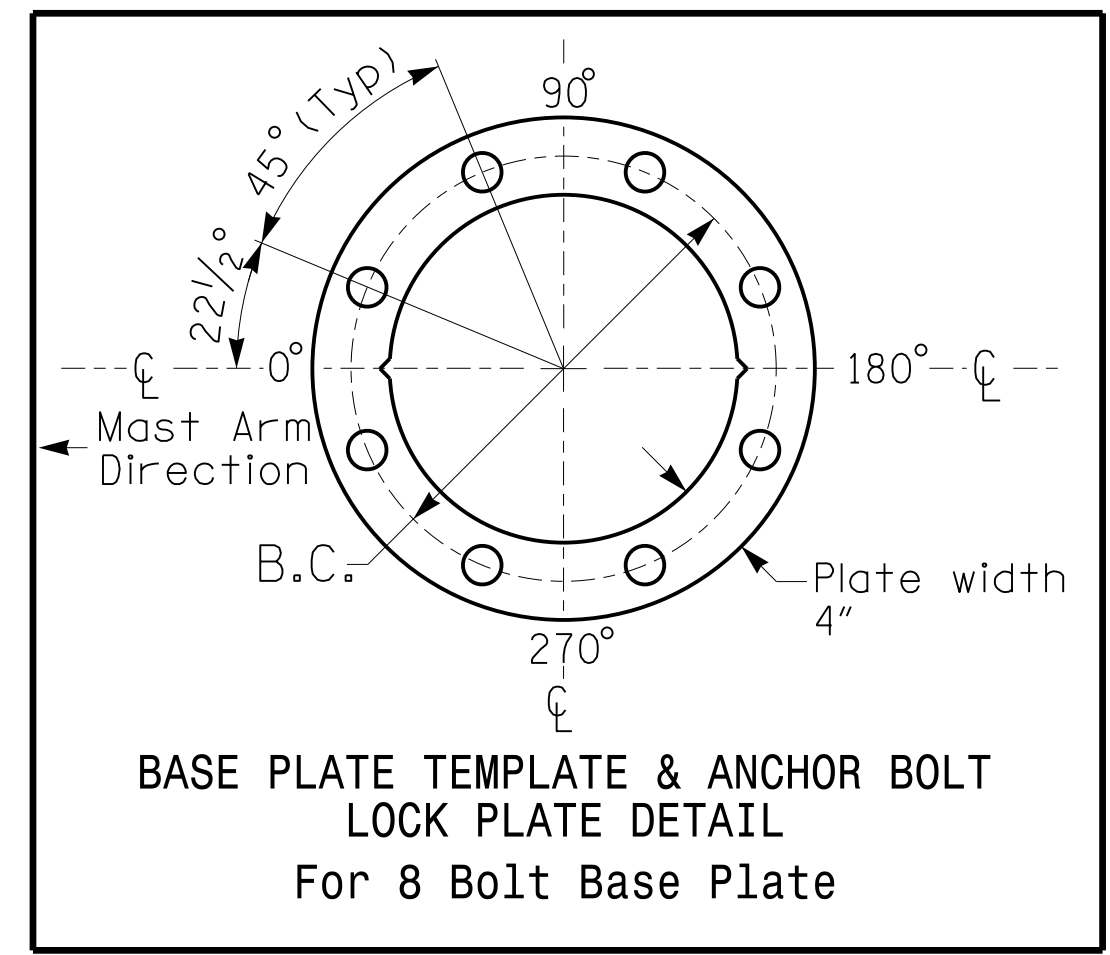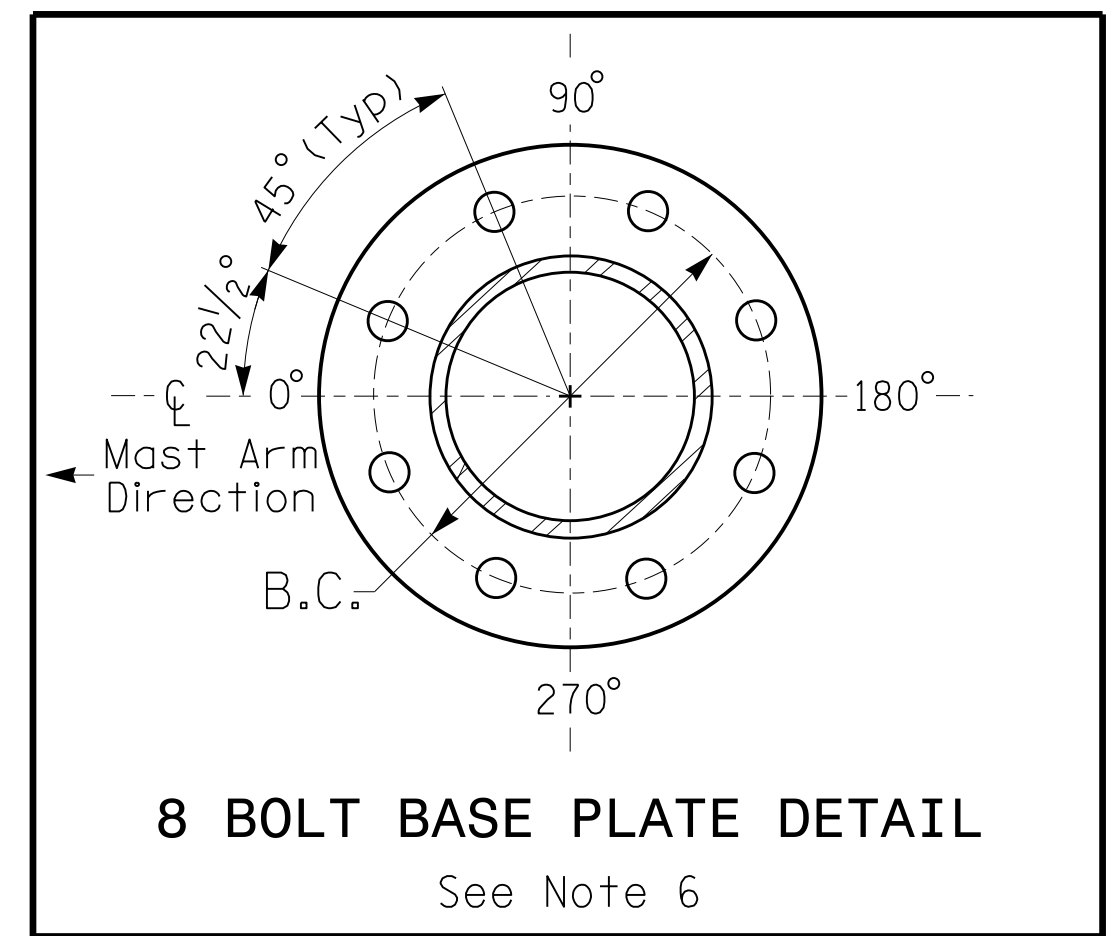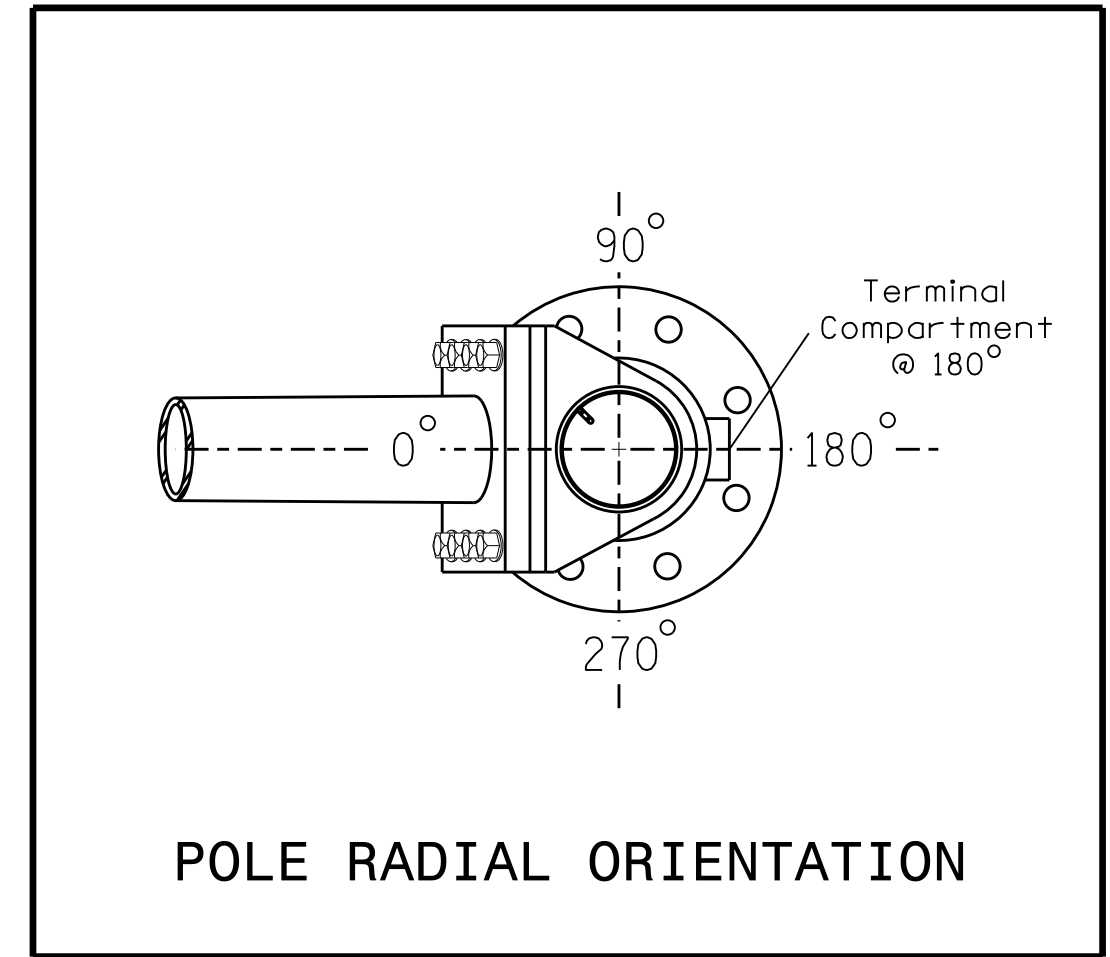

**Design Loading for METAL POLE NO. 2**

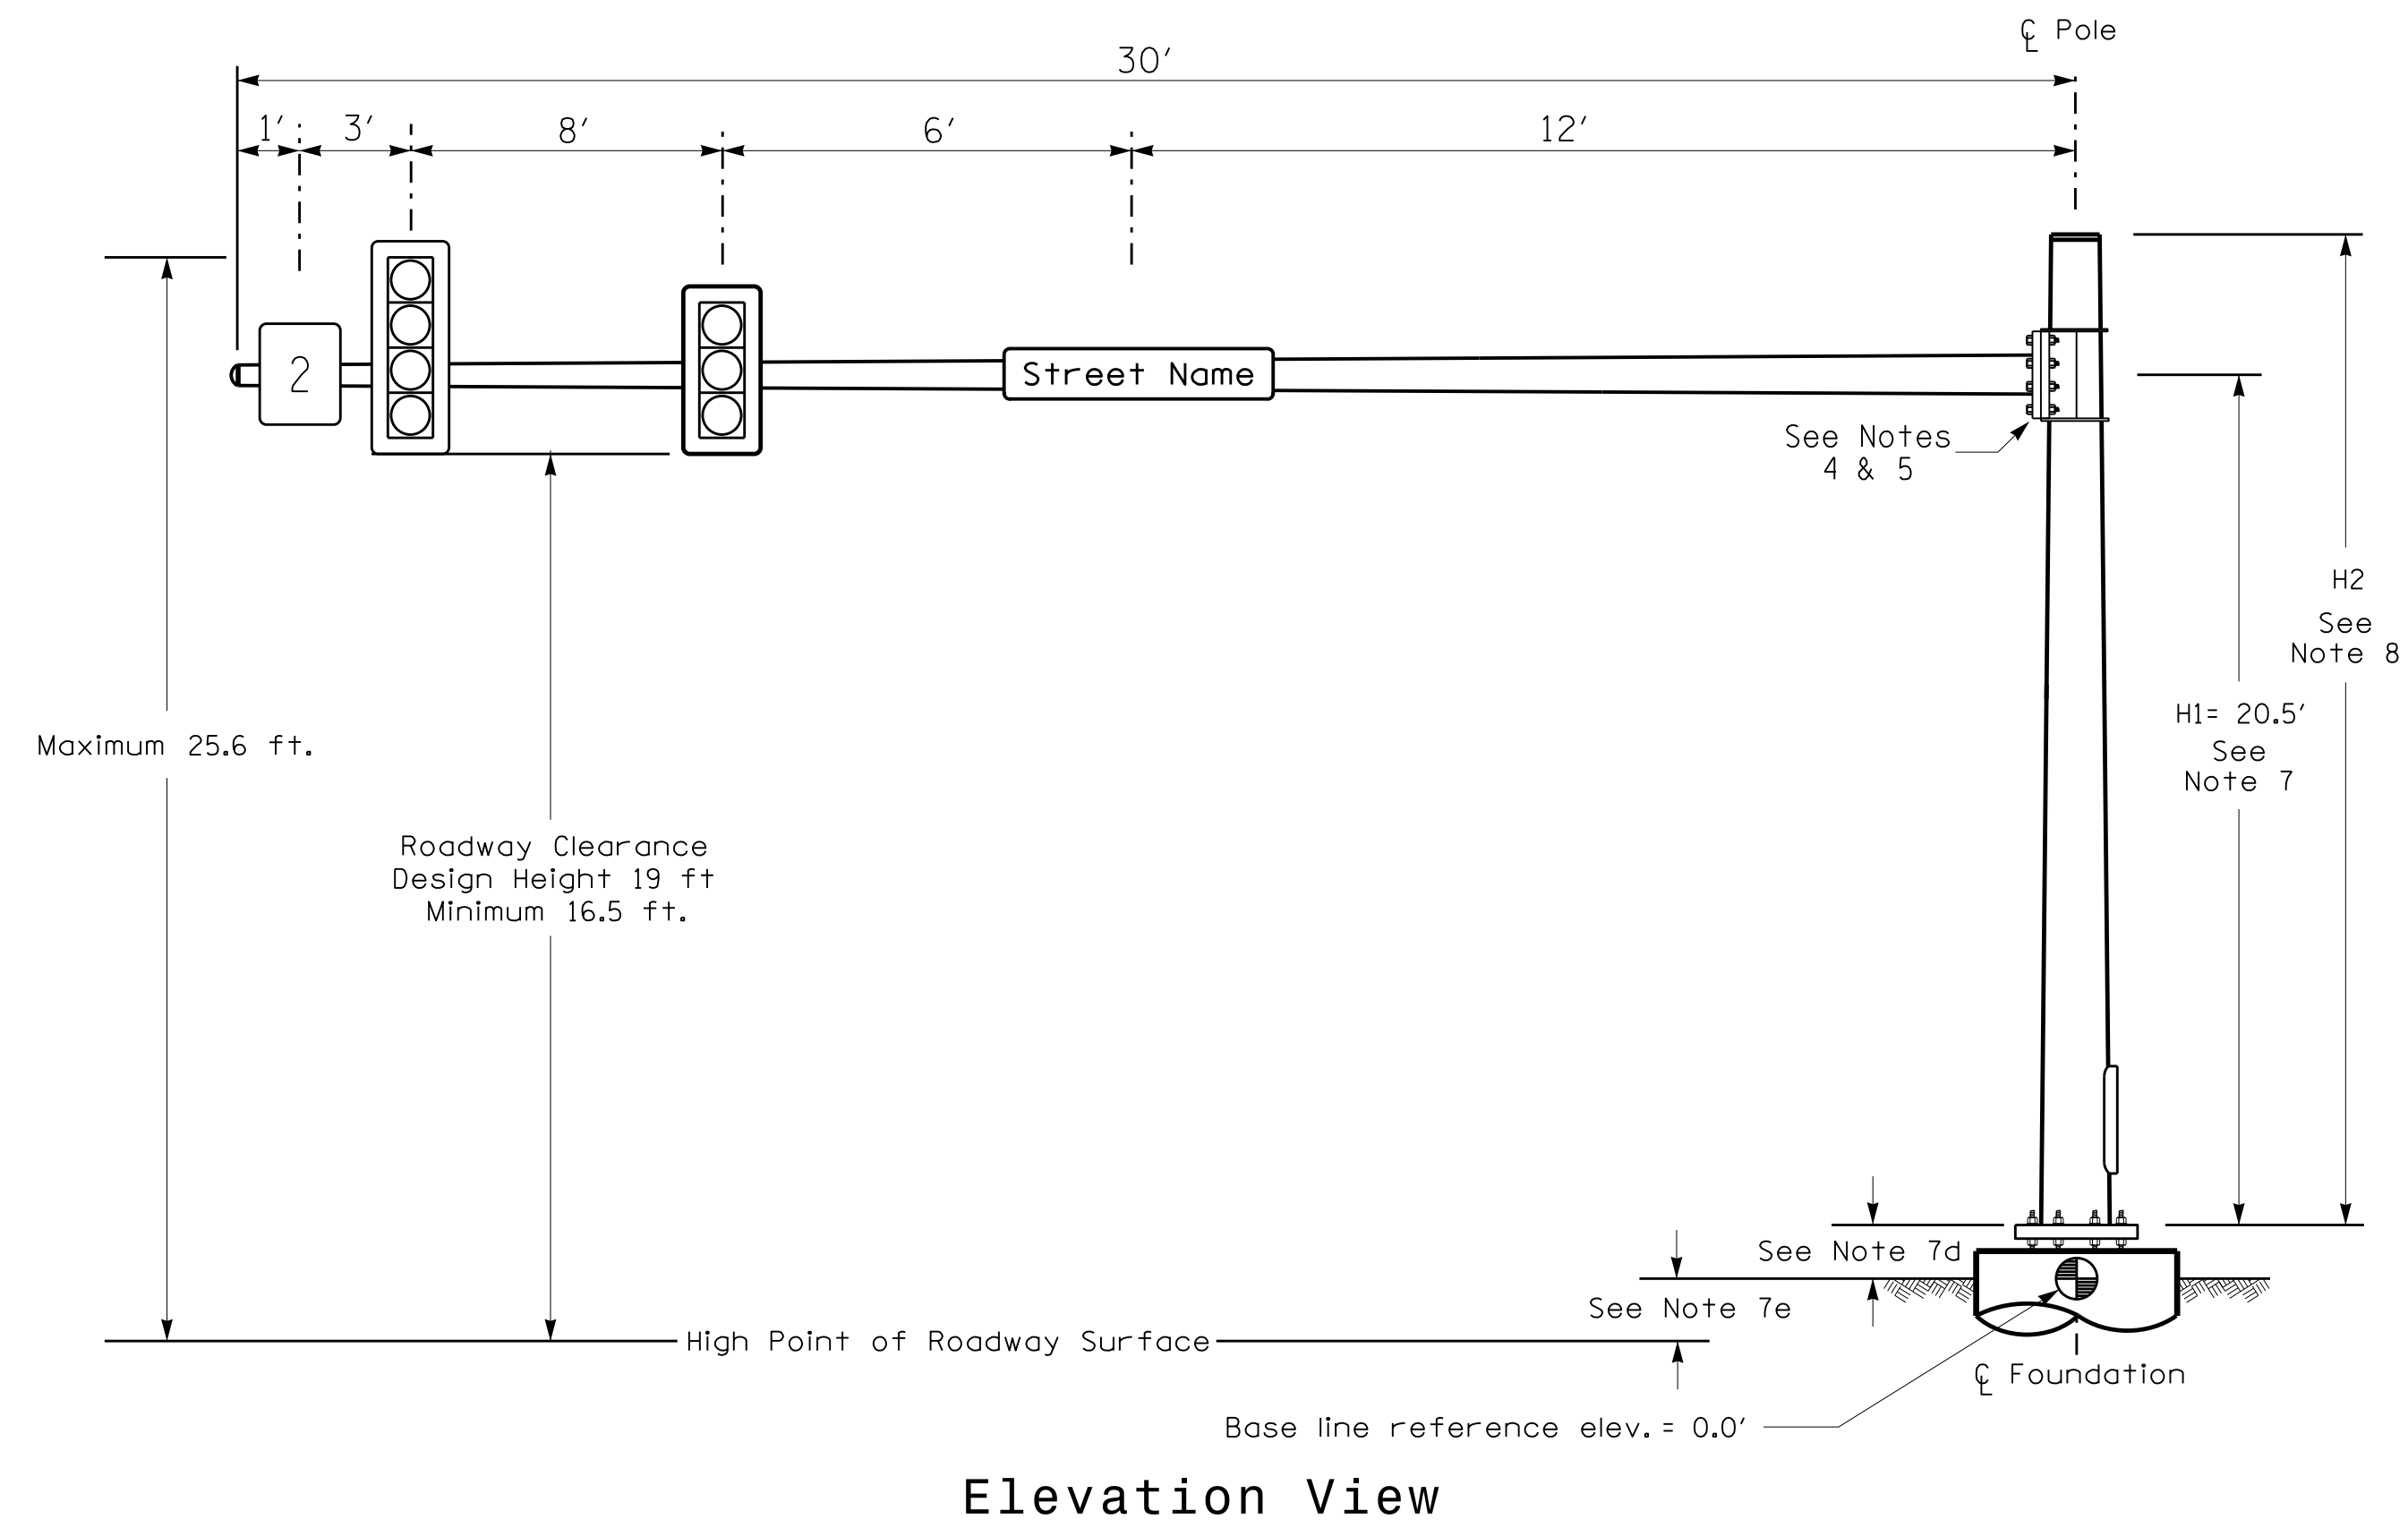

Elevation View

NCDOT Wind Zone 1 (140 mph)

Prepared in the Offices of:

TRANSPORTATION MOBILITY AND SAFETY DIVISION  
STATE OF NORTH CAROLINA  
Signal Design Section

US 158 at Lake Drive

Division 1 Dare County Kitty Hawk

PLAN DATE: February 2022 REVIEWED BY: ZML

PREPARED BY: JPG REVIEWED BY:

REVISIONS INIT. DATE

SCALE: 0 N/A

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED


SEAL  
NORTH CAROLINA PROFESSIONAL ENGINEER  
JASON P. GALLAGHER  
02/24/2022

SIGNATURE DATE

SIG. INVENTORY NO. 01-0762

24-FEB-2022 15:40  
 S:\ITS\ASST\ITS\_S\Signal\Signal Design\Section\Eastern Region\01-01-01-01-0762\010762.dwg, mp\_202110xx.dgn  
 Jpg:llowoy

Design Loading for METAL POLE NO. 3, MAST ARM A

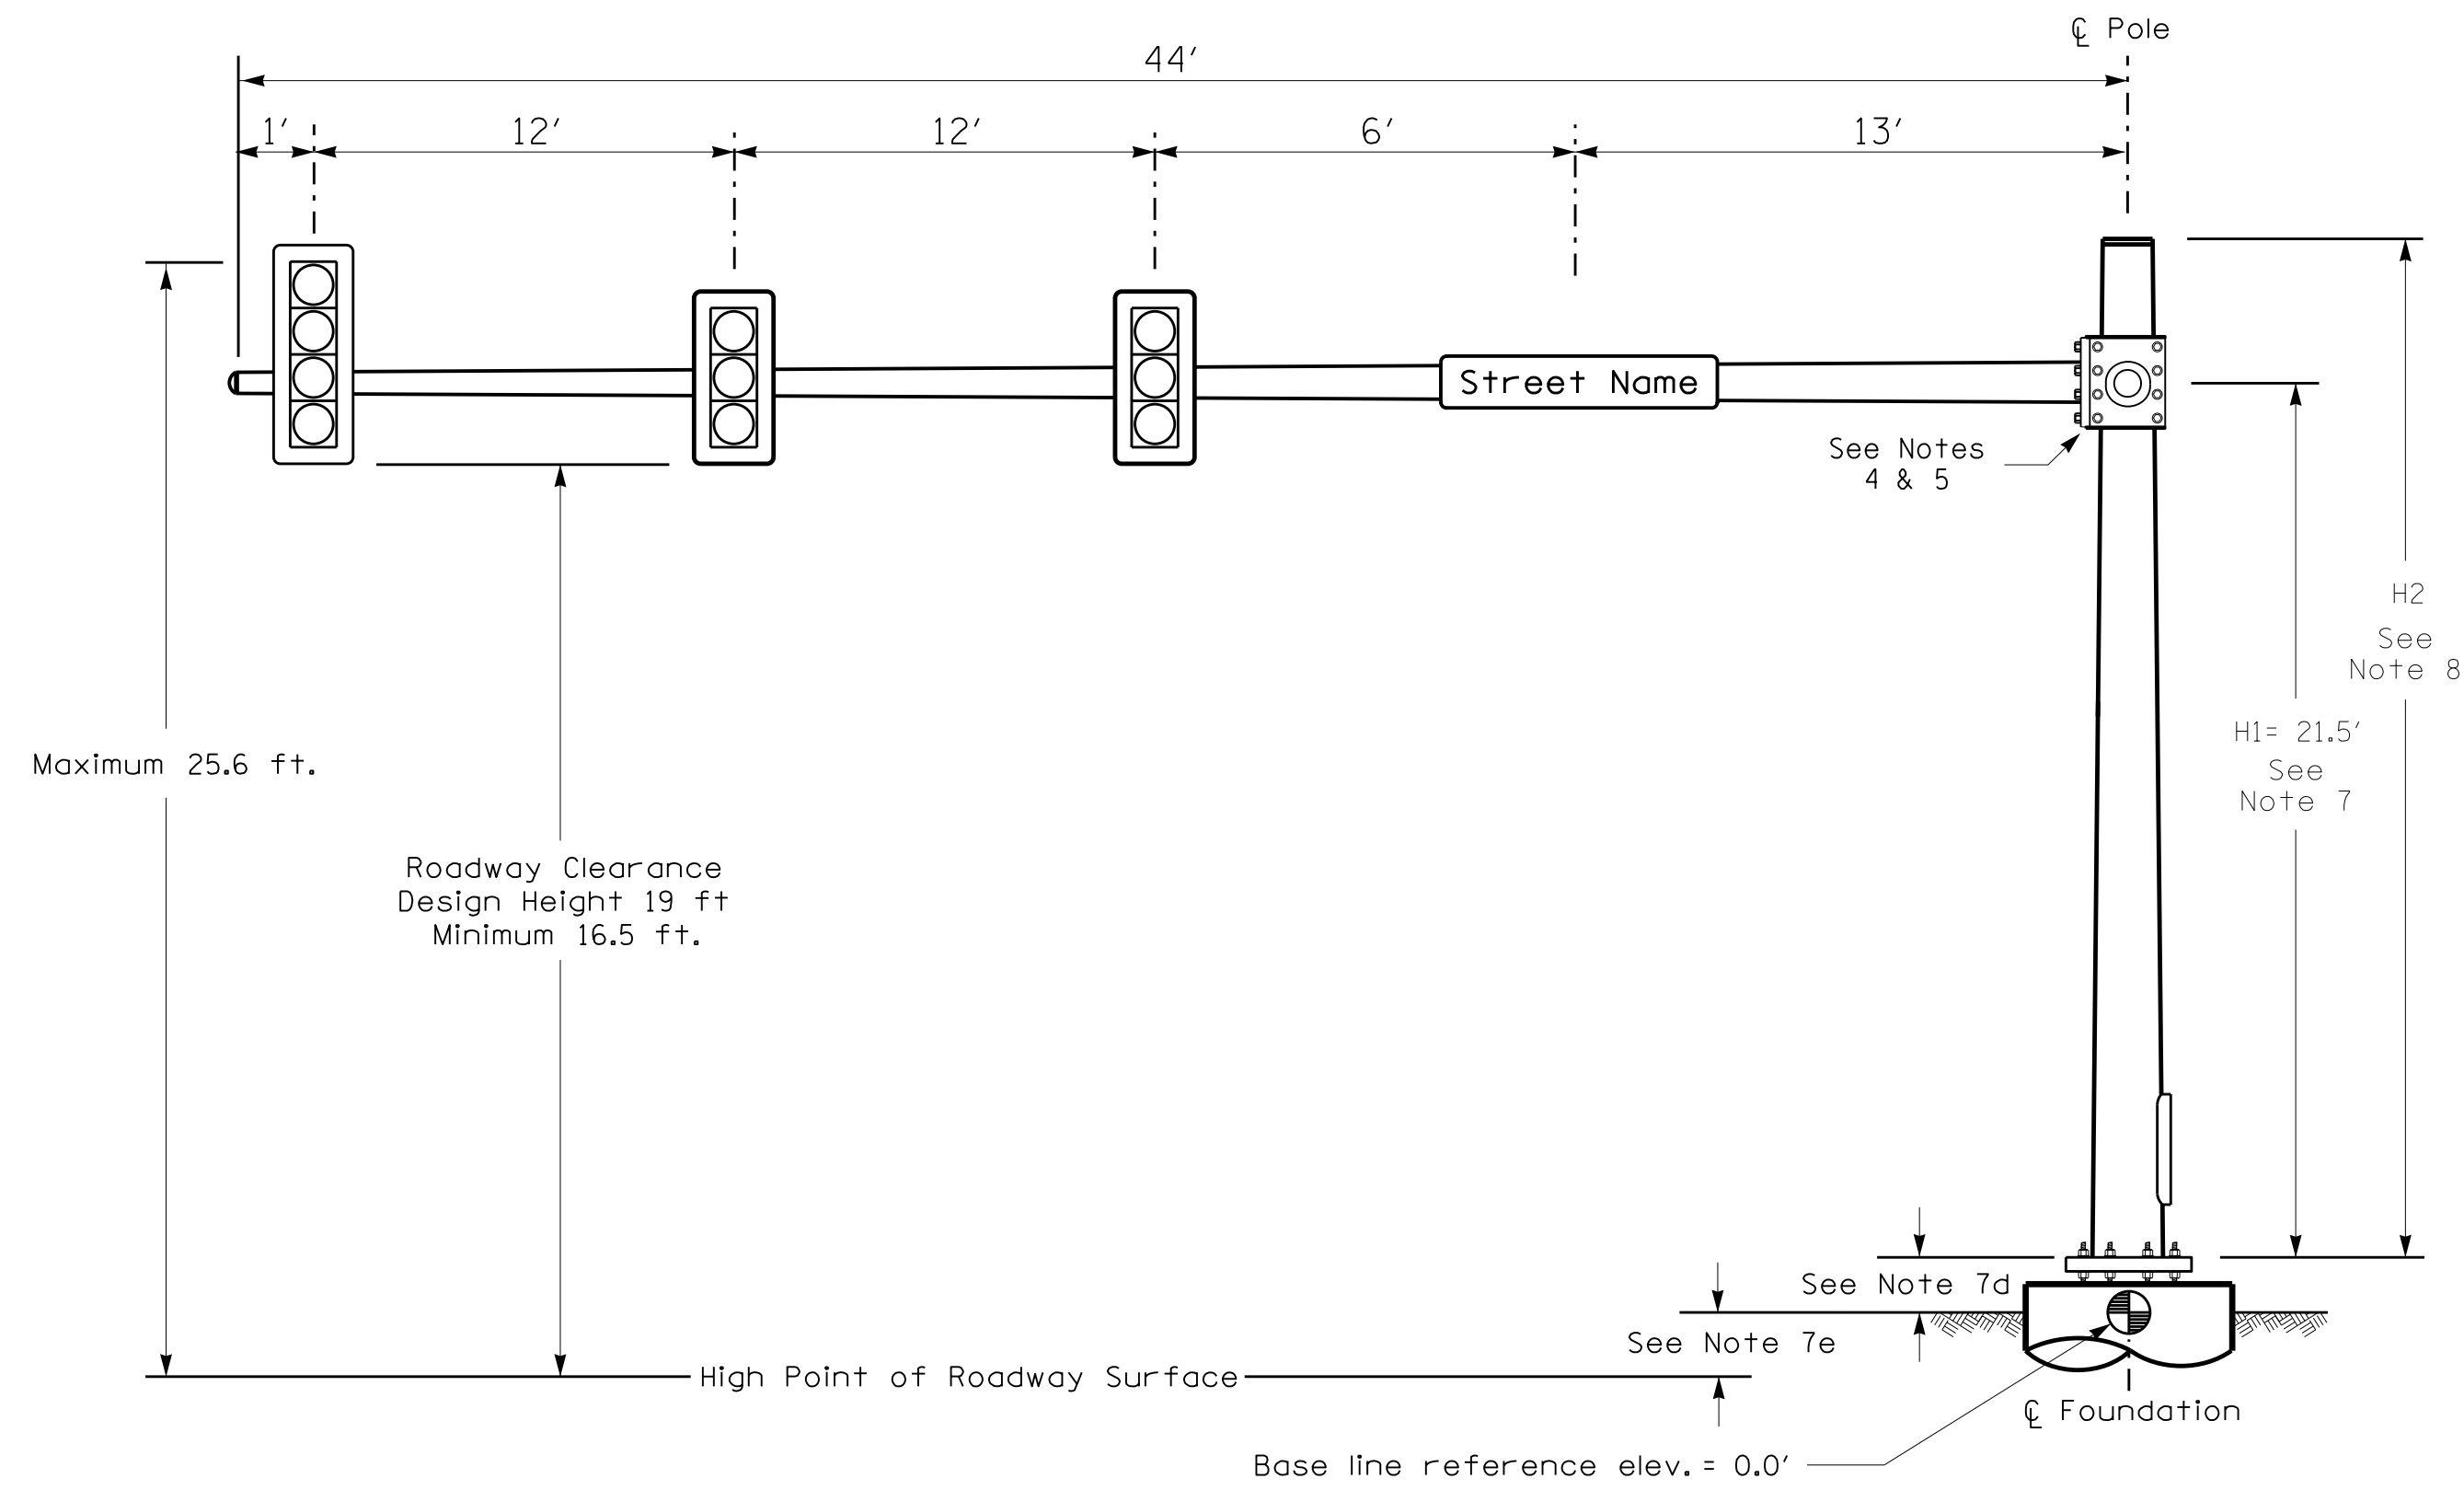

Elevation View @ 270°

SPECIAL NOTE

The contractor is responsible for verifying that the mast arm attachment height (H1) will provide the "Design Height" clearance from the roadway before submitting final shop drawings for approval. Verify elevation data below which was obtained by field measurement or from available project survey data.

Elevation Data for Mast Arm Attachment (H1)

Elevation Differences for:	Arm "A"	Arm "B"
Baseline reference point at $\odot$ Foundation @ ground level	0.0 ft.	0.0 ft.
Elevation difference at High point of roadway surface	+0.5 ft.	-0.7 ft.
Elevation difference at Edge of travelway or face of curb	N/A	N/A

MAST ARM LOADING SCHEDULE

LOADING SYMBOL	DESCRIPTION	AREA	SIZE	WEIGHT
	RIGID MOUNTED SIGNAL HEAD 12"-4 SECTION-WITH BACKPLATE	11.5 S.F.	25.5" W X 66.0" L	74 LBS
	RIGID MOUNTED SIGNAL HEAD 12"-3 SECTION-WITH BACKPLATE	9.3 S.F.	25.5" W X 52.5" L	60 LBS
	SIGN RIGID MOUNTED	7.5 S.F.	30.0" W X 36.0" L	14 LBS
	STREET NAME SIGN RIGID MOUNTED	16.0 S.F.	24.0" W X 96.0" L	36 LBS


NOTES

DESIGN REFERENCE MATERIAL

- Design the traffic signal structure and foundation in accordance with:
  - The 6th Edition 2013 AASHTO "Standard Specifications for Structural Supports for Highway Signs, Luminaires, and Traffic Signals, including all of the latest interim revisions.
  - The 2018 NCDOT "Standard Specifications for Roads and Structures." The latest addenda to the specifications can be found in the traffic signal project special provisions.
  - The 2018 NCDOT Roadway Standard Drawings.
  - The traffic signal project plans and special provisions.
  - The NCDOT "Metal Pole Standards" located at the following NCDOT website: <https://connect.ncdot.gov/resources/safety/Pages/ITS-Design-Resources.aspx>


DESIGN REQUIREMENTS

- Design the traffic signal structure using the loading conditions shown in the elevation views. These are anticipated worst case "design loads" and may not represent the actual loads that will be applied at the time of the installation. The contractor should refer to the traffic signal plans for the actual loads that will be applied at the time of the installation.
- Design all signal supports using stress ratios that do not exceed 0.9.
- The camber design for the mast arm deflection should provide an appearance of a low pitched arch where the tip or the free end of the mast arm does not deflect below horizontal when fully loaded.
- A clamp-type bolted mast arm-to-pole connection may be used instead of the welded ring stiffened box connection shown as long as the connection meets all of the design requirements. This requires staggering the connections. Use elevation data for each arm to determine appropriate arm connection points.
- Design base plate with 8 anchor bolt holes. Provide 2 inch x 60 inch anchor bolts.
- The mast arm attachment height (H1) shown is based on the following design assumptions:
  - Mast arm slope and deflection are not considered in determining the arm attachment height as they are assumed to offset each other.
  - Signal heads are rigidly mounted and vertically centered on the mast arm.
  - The roadway clearance height for design is as shown in the elevation views.
  - The top of the pole base plate is 0.75 feet above the ground elevation.
  - Refer to the Elevation Data Chart for the elevation differences between the proposed foundation ground level and the high point of the roadway.
- The pole manufacturer will determine the total height (H2) of each pole using the greater of the following:
  - Mast arm attachment height (H1) plus 2 feet, or
  - H1 plus 1/2 of the total height of the mast arm attachment assembly plus 1 foot.
- If pole location adjustments are required, the contractor must gain approval from the Engineer as this may affect the mast arm lengths and arm attachment heights. The contractor may contact the Signal Design Section Senior Structural Engineer for assistance at (919) 814-5000.
- The contractor is responsible for verifying that the mast arm length shown will allow proper positioning of the signal heads over the roadway.
- The contractor is responsible for providing soil penetration testing data (SPT) to the pole manufacturer so site specific foundations can be designed.

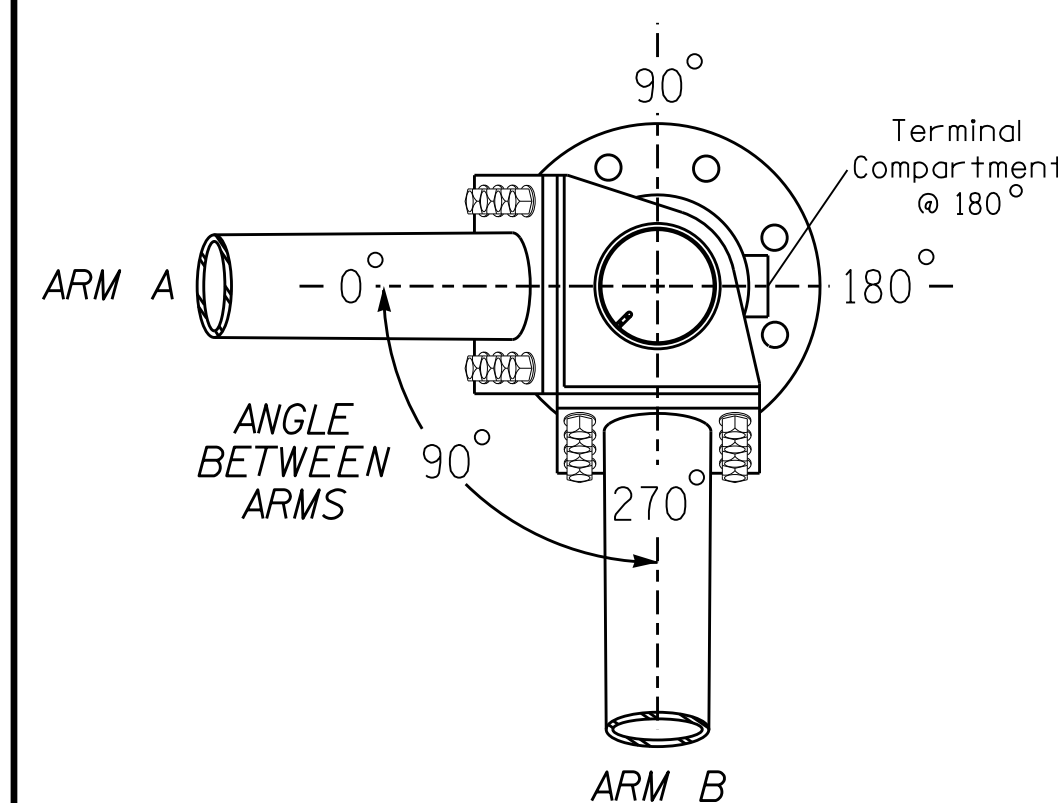


POLE RADIAL ORIENTATION

Design Loading for METAL POLE NO. 3, MAST ARM B

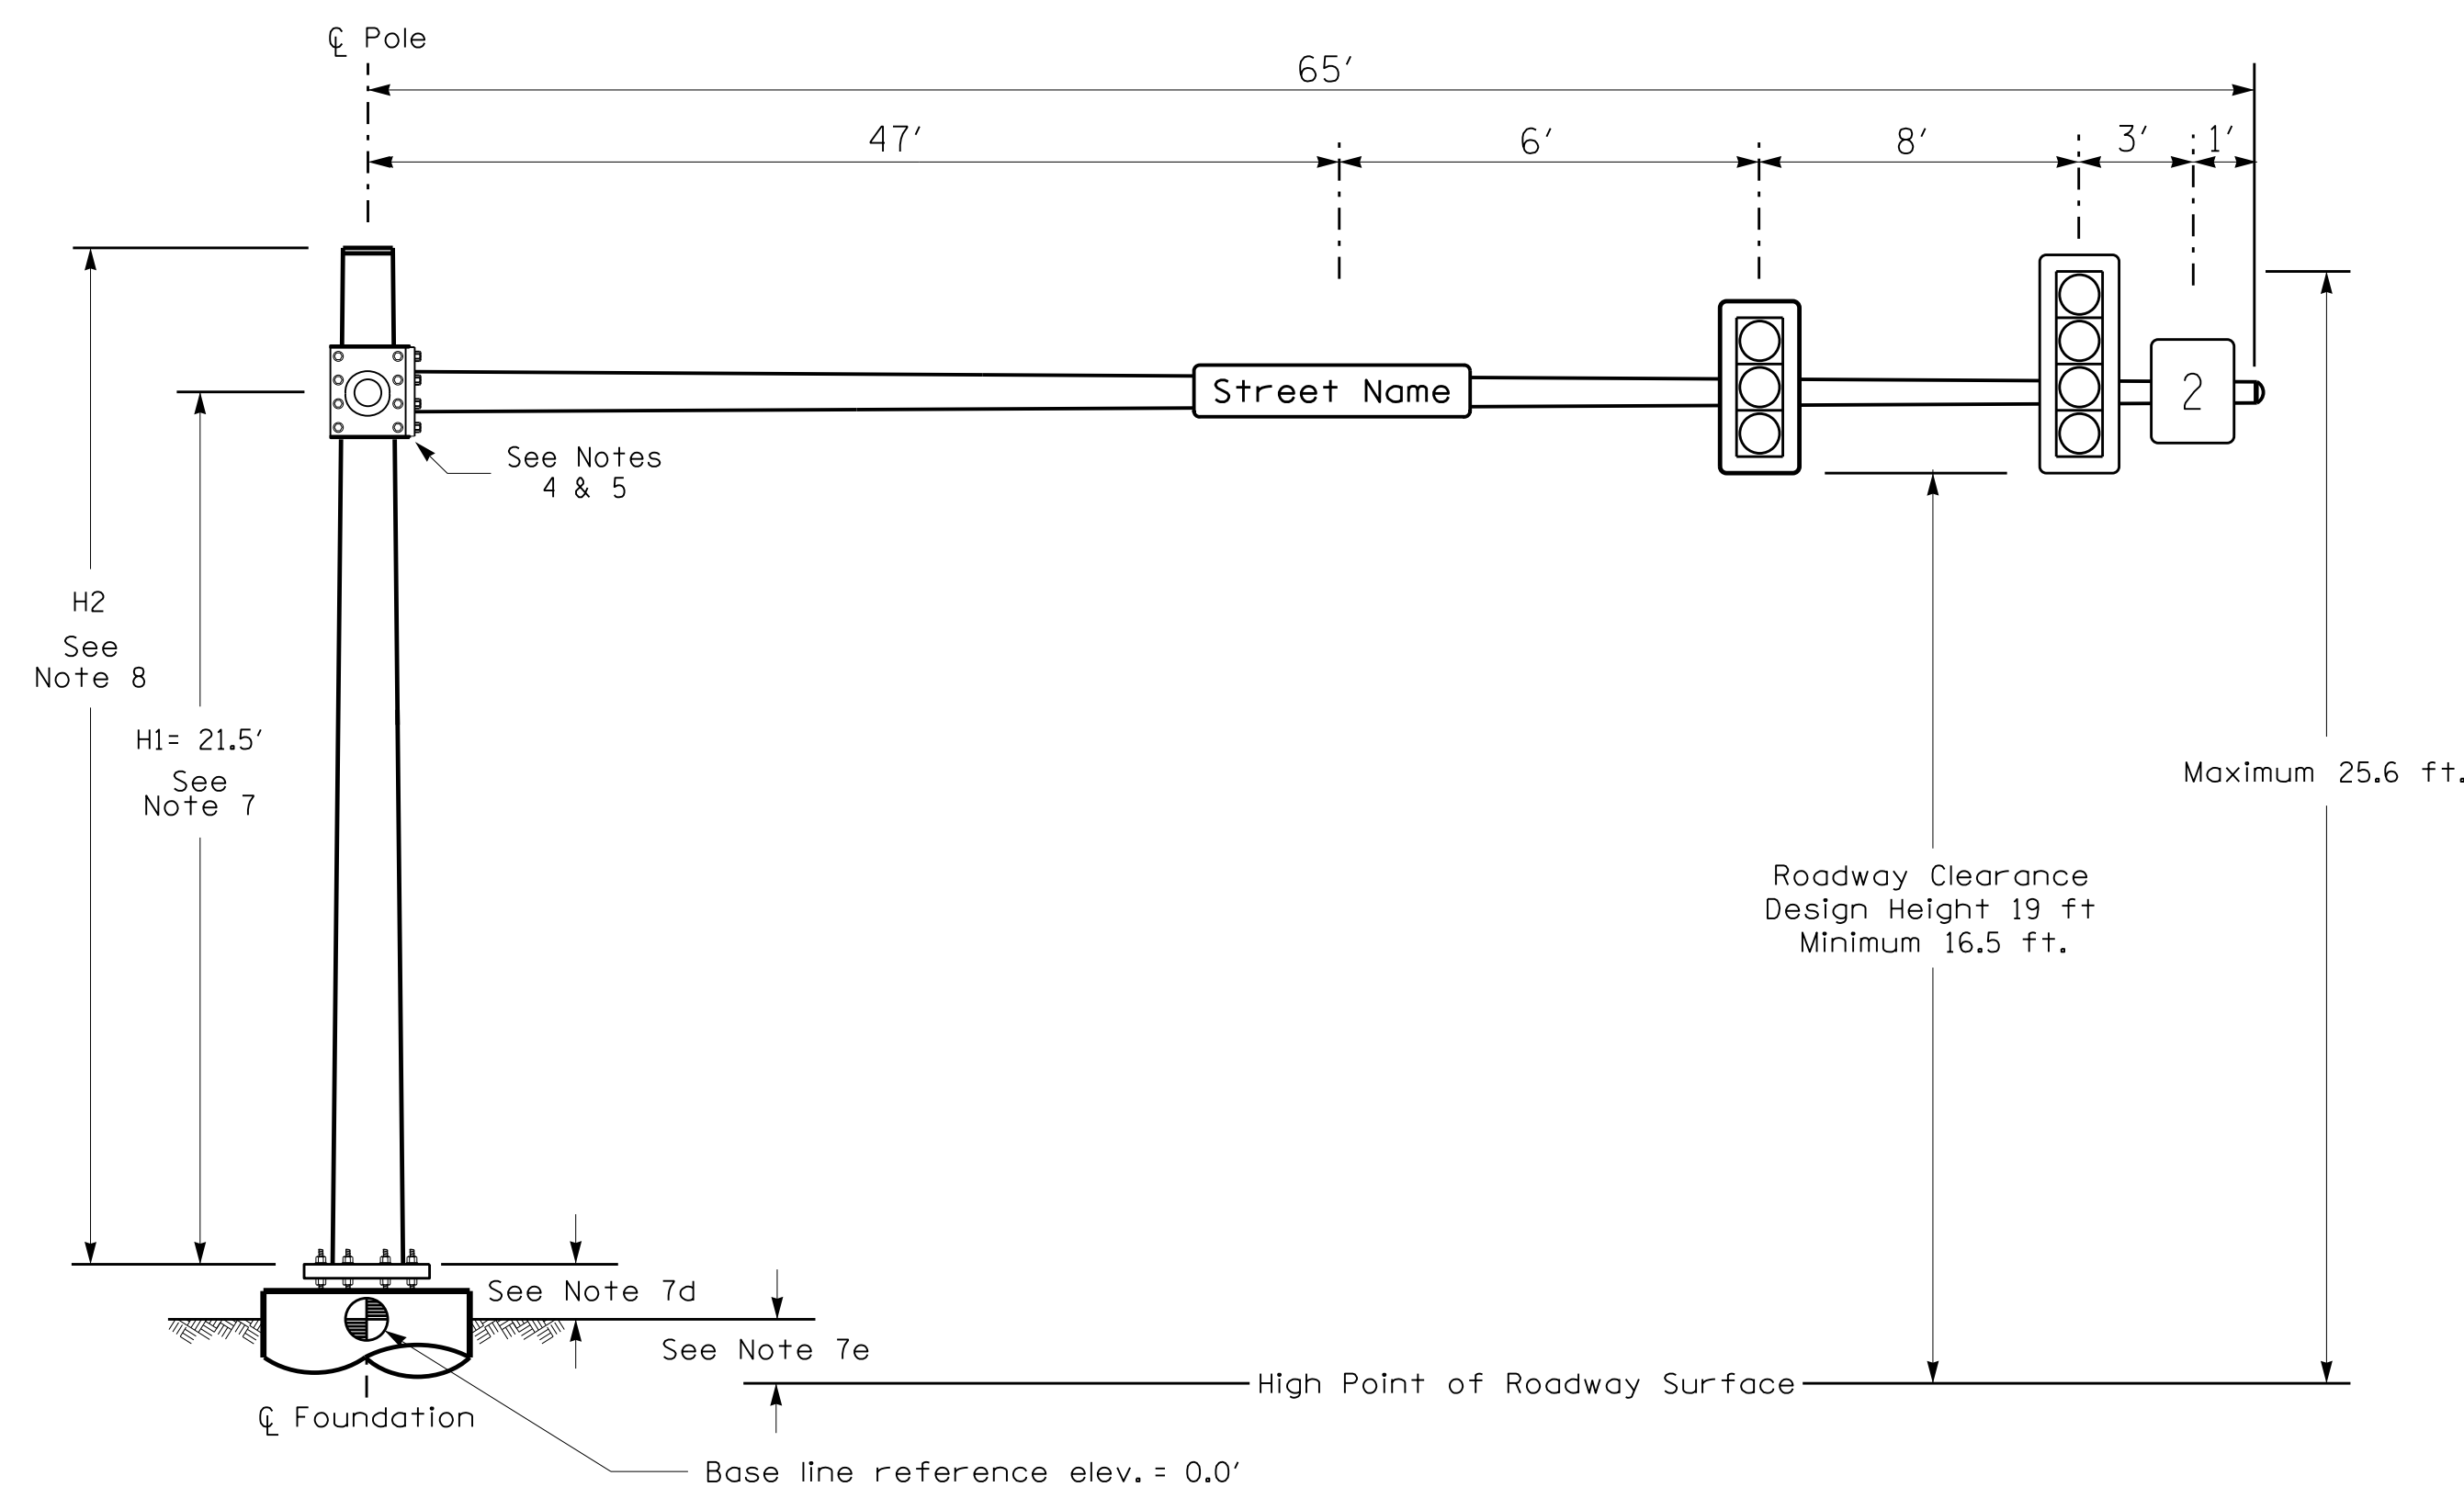


Elevation View @ 0°

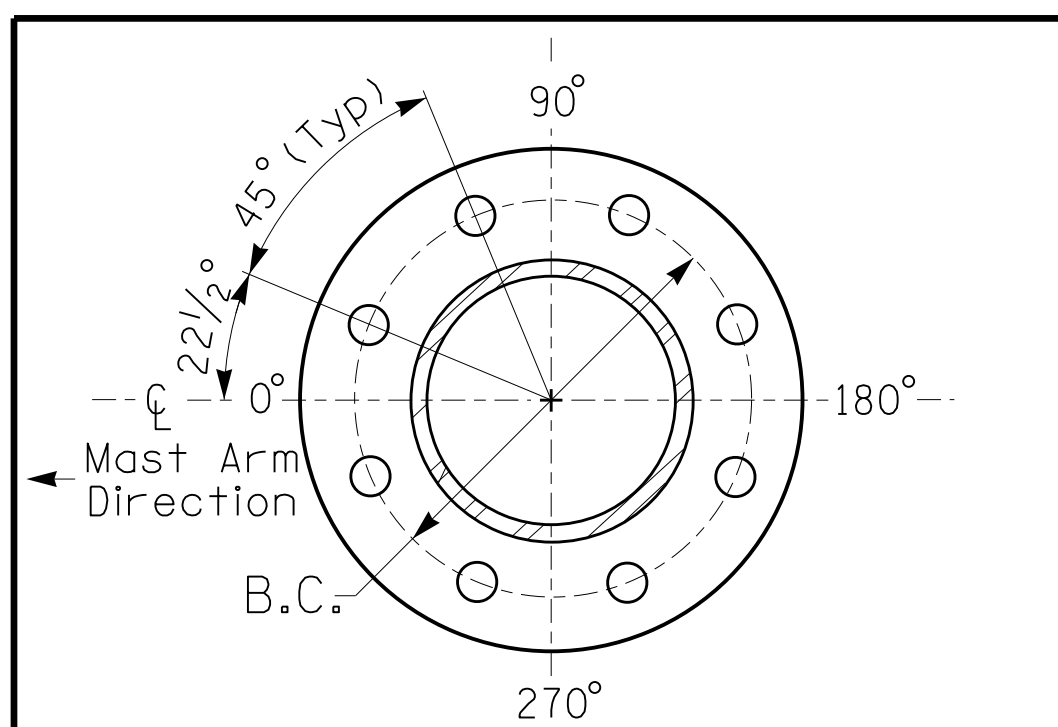

8 BOLT BASE PLATE DETAIL

See Note 6

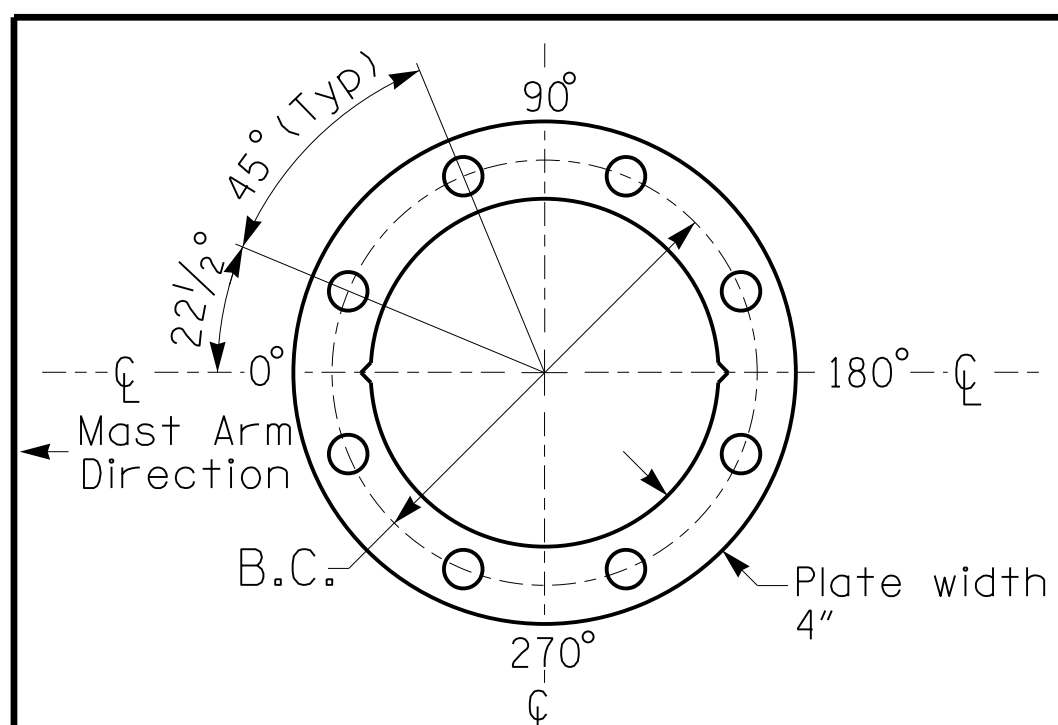

BASE PLATE TEMPLATE & ANCHOR BOLT LOCK PLATE DETAIL  
For 8 Bolt Base Plate

NCDOT Wind Zone 1 (140 mph)

	US 158 at Lake Drive		SEAL 
	Division 1 Dare County Kitty Hawk PLAN DATE: February 2022 REVIEWED BY: ZML PREPARED BY: JPG REVIEWED BY:	SCALE: 0 N/A REVISIONS: INIT. DATE	
SIGNATURE: Jason P. Gallaway DATE: 02/24/2022			SIG. INVENTORY NO. 01-0762




- 1 INSTALL COAX CABLE
- 2 INSTALL ETHERNET CABLE
- 3 EXISTING ETHERNET (OR COAX) CABLE
- 4 INSTALL SMFO CABLE
- 5 EXISTING SMFO CABLE
- 6 INSTALL FIBER OPTIC DROP CABLE
- 7 INSTALL TRACER WIRE
- 8 TRENCH
- 9 INSTALL PVC CONDUIT
- 10 INSTALL RIGID, GALVANIZED STEEL CONDUIT
- 11 INSTALL RIGID, GALVANIZED STEEL RISER WITH WEATHERHEAD
- 12 INSTALL RIGID, GALVANIZED STEEL RISER WITH FIBER OPTIC CABLE SEAL
- 13 INSTALL OUTER-DUCT POLYETHYLENE CONDUIT
- 14 INSTALL POLYETHYLENE CONDUIT
- 15 DIRECTIONAL DRILL CONDUIT
- 16 BORE AND JACK CONDUIT
- 17 INSTALL CABLE(S) IN EXISTING CONDUIT
- 18 INSTALL CABLE(S) IN NEW CONDUIT
- 19 INSTALL CABLE(S) IN EXISTING RISER
- 20 INSTALL CABLE(S) IN NEW RISER
- 21 INSTALL CABLE(S) IN EXISTING CONDUIT STUB-OUTS
- 22 INSTALL NEW CONDUIT INTO EXISTING CABINET BASE (USE EXISTING CONDUIT STUB-OUTS WHEN AVAILABLE)
- 23 INSTALL NEW RISER INTO EXISTING CABINET BASE (USE EXISTING CONDUIT STUB-OUTS WHEN AVAILABLE)
- 24 INSTALL NEW CONDUIT INTO EXISTING POLE MOUNTED CABINET
- 25 INSTALL NEW RISER INTO EXISTING POLE MOUNTED CABINET
- 26 INSTALL NEW ETHERNET EDGE SWITCH
- 27 INSTALL NEW FIBER OPTIC TRANSCEIVER
- 28 INSTALL INTERCONNECT CENTER, PATCH PANEL, JUMPERS AND FUSION SPLICE CABLE IN CABINET
- 29 INSTALL UNDERGROUND SPLICE ENCLOSURE
- 30 INSTALL AERIAL SPLICE ENCLOSURE
- 31 MODIFY EXISTING INTERCONNECT CENTER /SPLICE ENCLOSURE
- 32 INSTALL POLE MOUNTED SPLICE CABINET
- 33 INSTALL BASE MOUNTED SPLICE CABINET

- 34 INSTALL CABINET FOUNDATION
- 35 INSTALL CCTV CAMERA POLE MOUNTED CABINET
- 36 INSTALL CCTV CAMERA ASSEMBLY
- 37 INSTALL CCTV CAMERA WOOD POLE
- 38 INSTALL CCTV CAMERA METAL POLE AND FOUNDATION
- 39 INSTALL JUNCTION BOX
- 40A INSTALL OVERSIZED JUNCTION BOX
- 40B INSTALL SPECIAL OVERSIZED JUNCTION BOX (36" x 24" x 24")
- 41 REMOVE EXISTING JUNCTION BOX
- 42 INSTALL WOOD POLE
- 43 REMOVE EXISTING WOOD POLE
- 44 INSTALL AERIAL GUY ASSEMBLY
- 45 INSTALL STANDARD GUY ASSEMBLY
- 46 INSTALL SIDEWALK GUY ASSEMBLY
- 47 INSTALL MESSENGER CABLE
- 48A REMOVE EXISTING COMMUNICATIONS AND MESSENGER CABLE
- 48B REMOVE EXISTING COMMUNICATIONS CABLE
- 49 BACK PULL EXISTING COMMUNICATIONS CABLE
- 50 INSTALL CELL MODEM AND ANTENNA
- 51 INSTALL CABLE STORAGE RACKS (SNOW SHOES) AND STORE 100 FEET OF CABLE
- 52A INSTALL DELINEATOR MARKER
- 52B INSTALL JUNCTION BOX MARKER
- 53A STORE 20 FEET OF COMMUNICATIONS CABLE
- 53B STORE 50 FEET OF EACH COMMUNICATIONS CABLE
- 54 LASH CABLE(S) TO EXISTING COMMUNICATIONS CABLE
- 55 LASH CABLE(S) TO EXISTING MESSENGER CABLE
- 56 LASH CABLE(S) TO NEW MESSENGER CABLE
- 57 MODIFY EXISTING ELECTRICAL SERVICE
- 58 INSTALL NEW ELECTRICAL SERVICE
- 59 INSTALL NEW EQUIPMENT CABINET DISCONNECT
- 60 BOND TRACER WIRE TO EQUIPMENT GROUND BUS  
DO NOT BOND TRACER WIRE TO EQUIPMENT GROUND BUS
- 61 BOND RISER AND MESSENGER CABLE TO POLE GROUND
- 62 BOND RISER TO POLE GROUND
- 63 BOND MESSENGER CABLE TO POLE GROUND
- 64 INSTALL HEAT SHRINK TUBING RETROFIT KIT
- 65 INSTALL MOLDABLE DUCT SEAL
- 67 SLACK SPAN


**LEGEND**

	NEW FIBER OPTIC COMMUNICATIONS CABLE
	EXISTING COMMUNICATIONS CABLE
	EXISTING COMMUNICATIONS CABLE TO BE REMOVED
	NEW AERIAL GUY ASSEMBLY
	NEW CONDUIT
	EXISTING CONDUIT
	NEW DIRECTIONAL DRILLED CONDUIT

NEW		EXISTING
	OVERSIZED JUNCTION BOX	
	WOOD POLE	
	AERIAL SPLICE ENCLOSURE	
	UNDERGROUND SPLICE ENCLOSURE	
	METAL POLE	
	CCTV ASSEMBLY	
	STANDARD GUY ASSEMBLY	
	SIDEWALK GUY ASSEMBLY	
	CABLE STORAGE RACKS (SNOW SHOES)	
	SIGNAL/EQUIPMENT CABINET	
	SPLICE CABINET	
	FLAT PANEL ANTENNA (SINGLE)	
	YAGI ANTENNA (DOUBLE) FOR REPEATER OPERATION	
	YAGI ANTENNA (SINGLE)	
	OMNI ANTENNA	
	SIGNAL POLE	
	SIGNAL INVENTORY NUMBER	

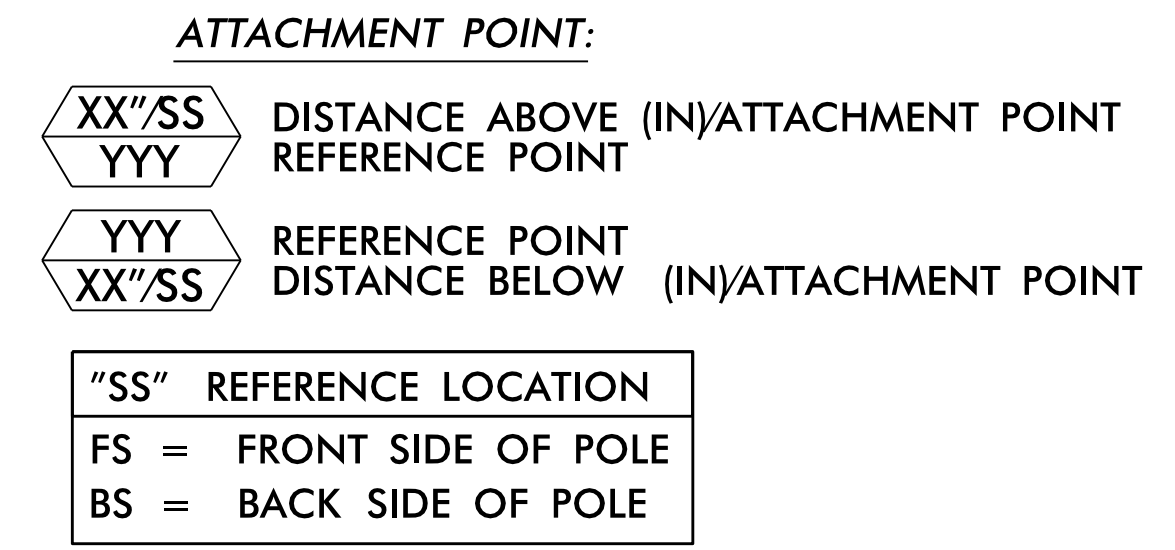


**CONSTRUCTION NOTE SYMBOLOGY KEY**

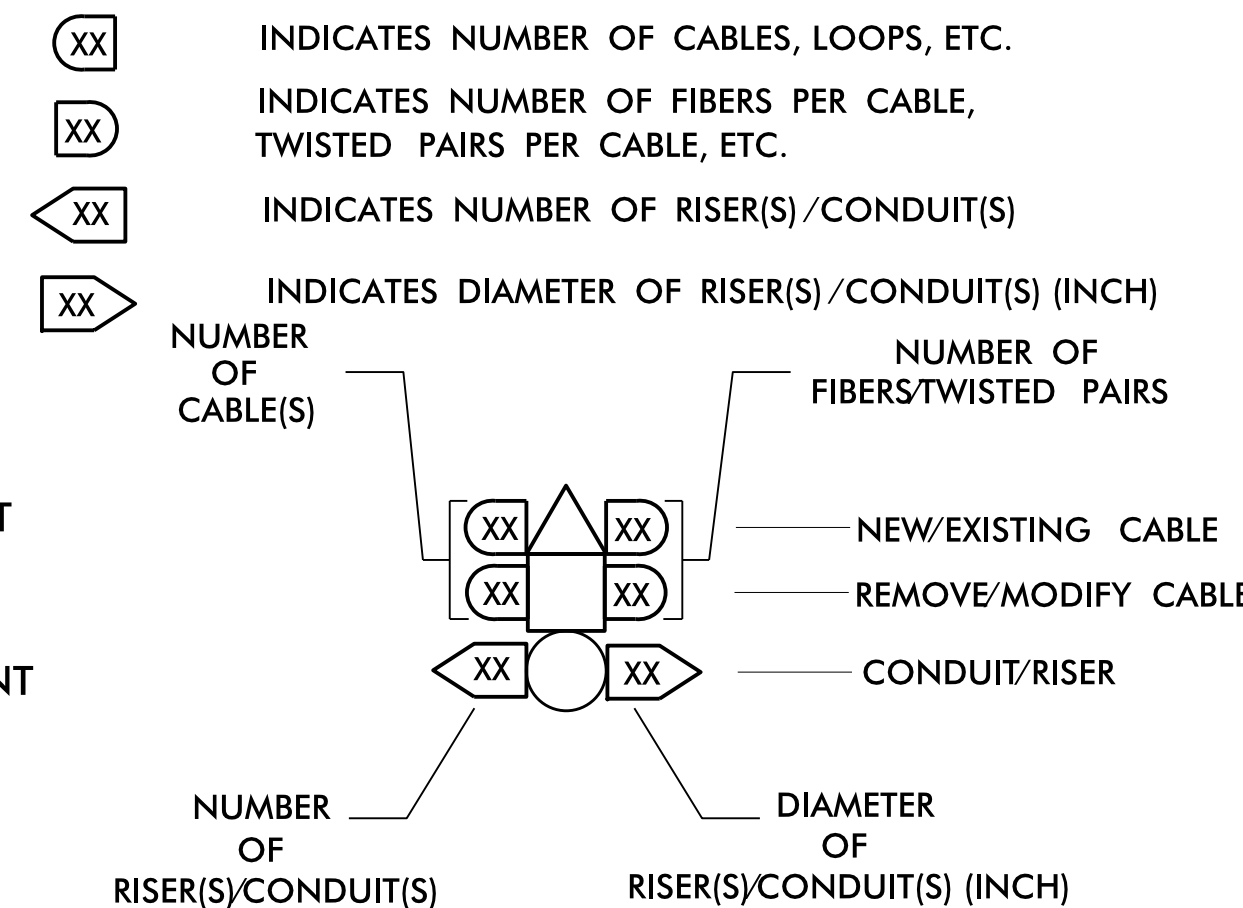

**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

	<b>CONSTRUCTION NOTES</b>		
	DIVISION 1    DARE CO.    KILL DEVIL HILLS PLAN DATE: MAY 2022    REVIEWED BY: <i>Greg Green</i> PREPARED BY: D.J. SONDERFAN	REVISIONS    INIT.    DATE	
SIGNATURE: <i>Matthew T. Carls</i> DATE: 05/10/2022			

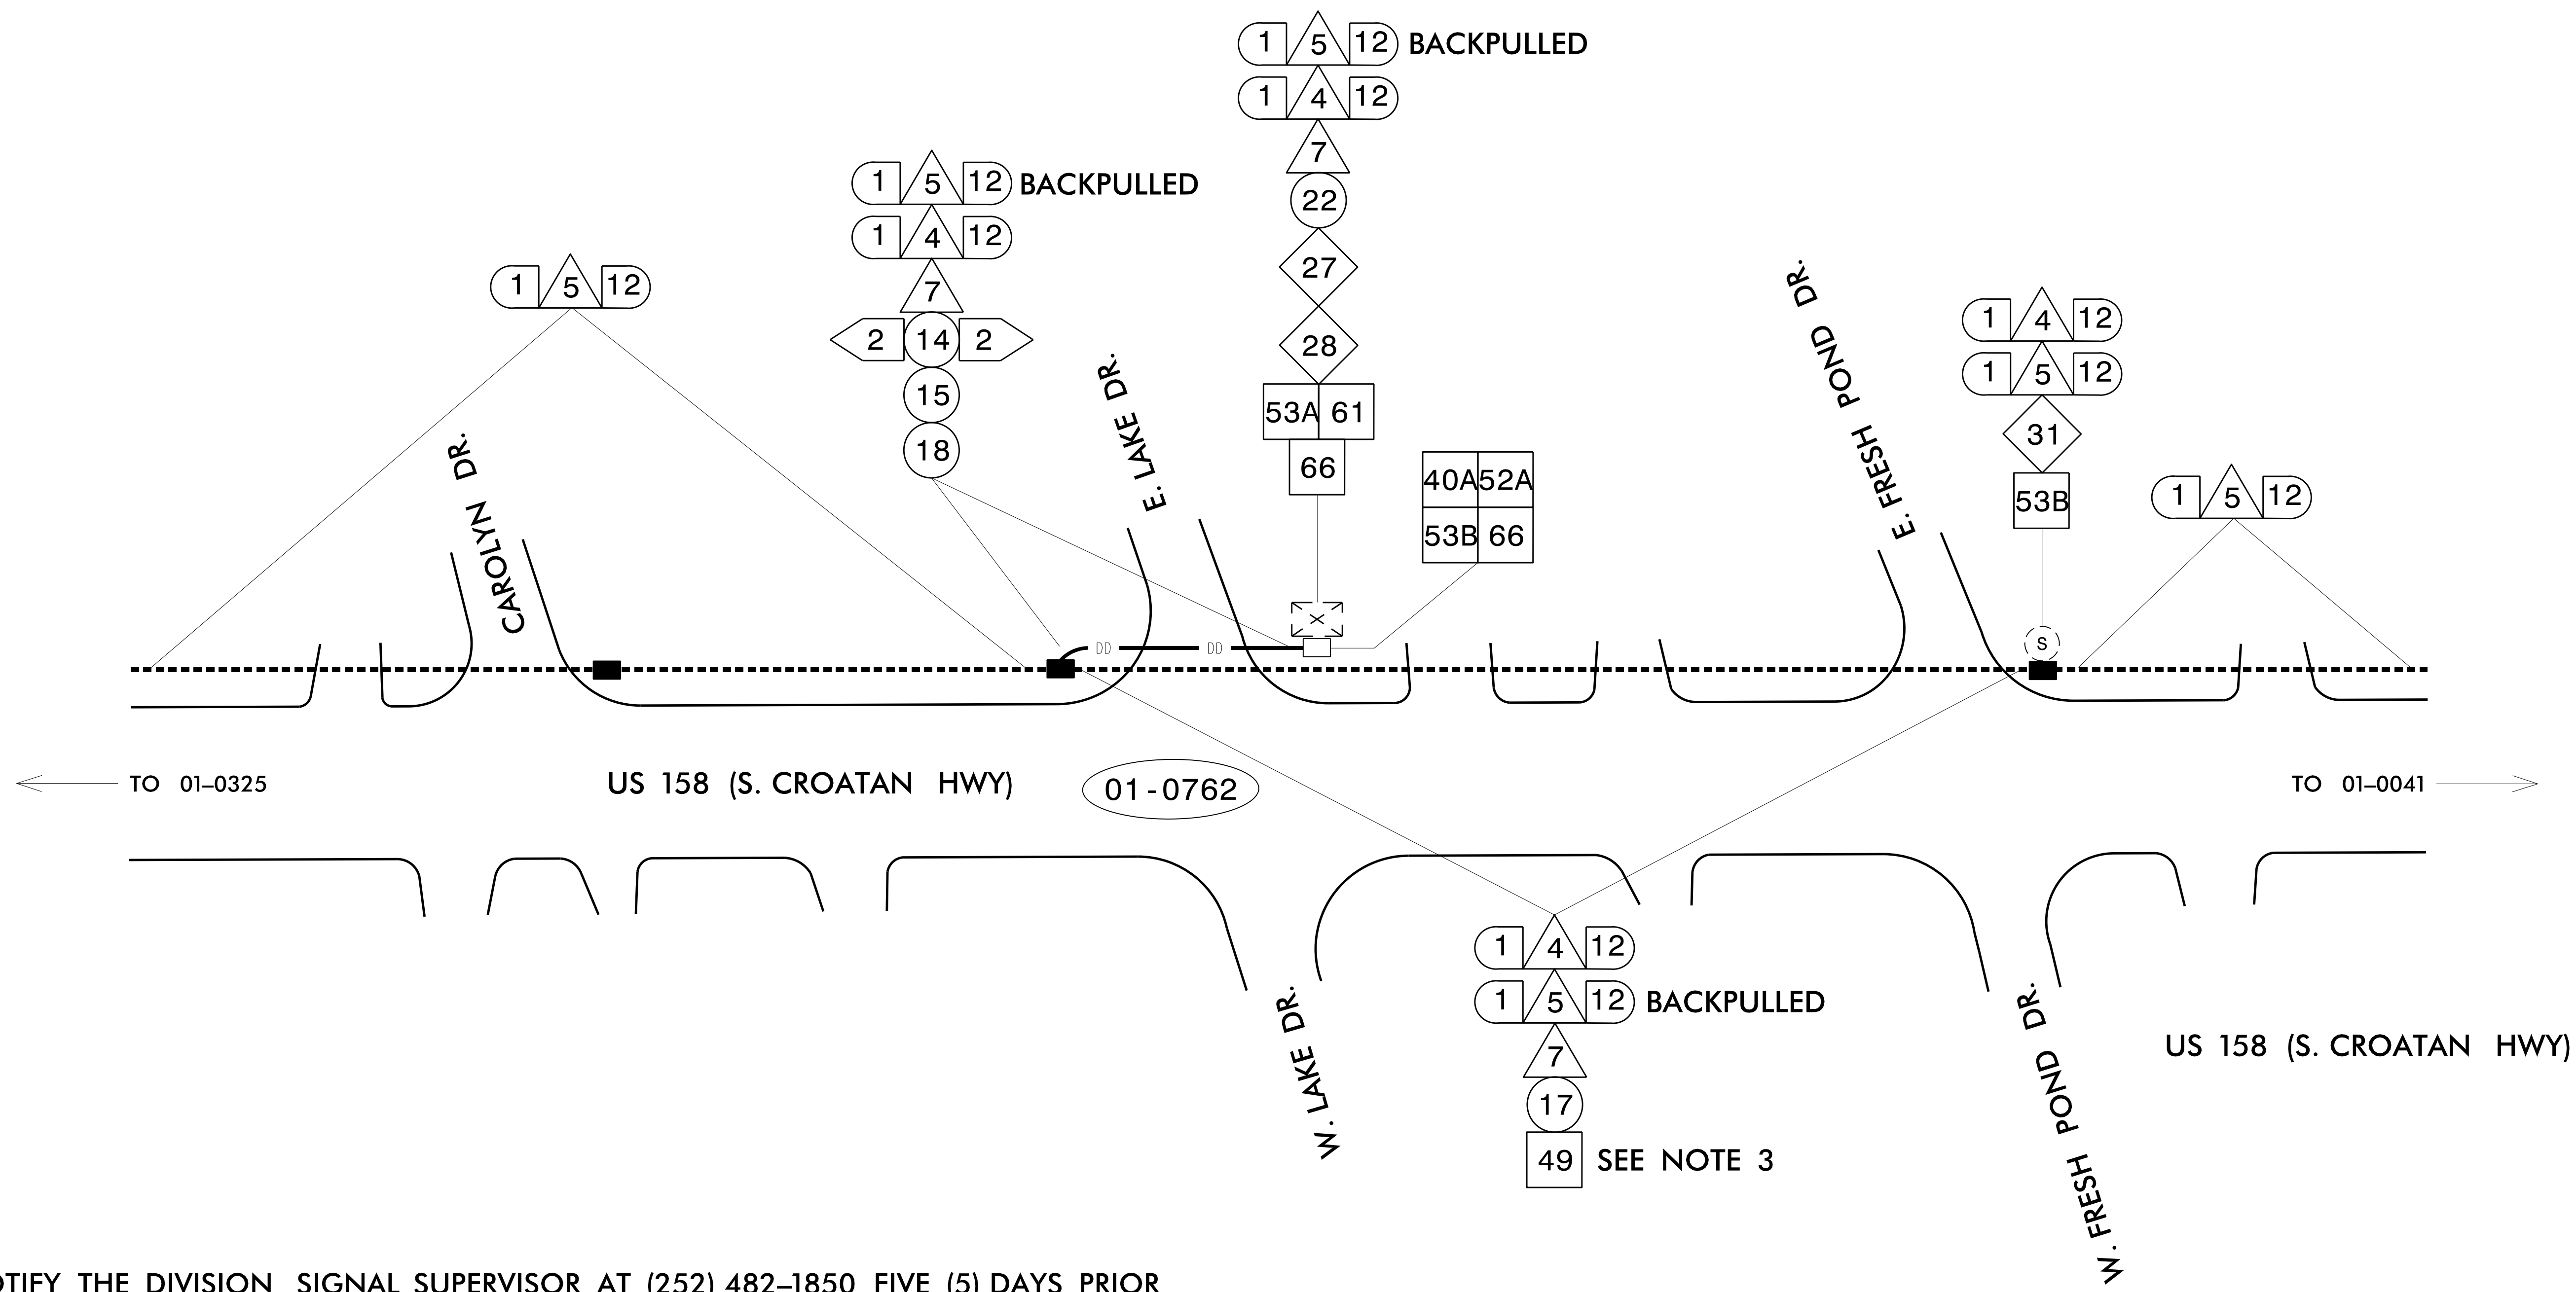

1. NOTIFY THE DIVISION SIGNAL SUPERVISOR AT (252) 482-1850 FIVE (5) DAYS PRIOR TO BEGINNING WORK ON SIGNAL SYSTEM COMMUNICATIONS CABLE. NOTIFY THE SIGNAL SUPERVISOR AFTER ALL WORK IS PERFORMED TO ENSURE THAT ALL FIBER CIRCUITS ARE FUNCTIONING PROPERLY. ALL WORK IS NOT COMPLETE UNTIL THE SIGNAL SYSTEM IS BACK UP AND OPERATIONAL.
2. CONTRACTOR TO RECORD EXISTING SPLICE ARRANGEMENT FOR COMPARISON TO THE SUPPLIED SPLICE DETAILS. IF DISCREPANCIES EXIST, CONTACT THE ENGINEER TO DETERMINE HOW TO PROCEED WITH RESPLICING. PROVIDE AS-BUILT PLANS TO THE ENGINEER IF FINAL SPLICE ARRANGEMENT DIFFERS FROM THE SUPPLIED SPLICE DETAILS.
3. BREAK EXISTING SPLICES AND BACKPULL EXISTING F.O. CABLE FROM EXISTING UNDERGROUND SPLICE ENCLOSURE SOUTH OF E. FRESH POND DR., THROUGH EXISTING JUNCTION BOX NORTH OF E. LAKE DR. AND ROUTE TO NEW CABINET 01-0762 THROUGH NEW DIRECTIONAL DRILL CONDUIT. STORE 50' OF BACKPULLED F.O. CABLE IN EXISTING JUNCTION BOX AND 20' OF BACKPULLED F.O. CABLE IN CABINET. CUT AND REMOVE EXCESS BACKPULLED F.O. CABLE.

**DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED**

	<b>SIGNAL SYSTEM D01-07 COMMUNICATIONS CABLE AND CONDUIT ROUTING PLANS</b>		
	DIVISION 1 DARE CO., KILL DEVIL HILLS PLAN DATE: MAY 2022 PREPARED BY: D.J. SONDERFAN	REVIEWED BY: <i>Erny Green</i> DATE:	
SIGNATURE: <i>Matthew T. Carlisle</i> DATE: 05/10/2022			

**NEW INTERCONNECT CENTER**  
 US 158 (CROATAN HWY) AT E. LAKE DR.  
 SIG. INV. # 01-0762

**Notes:**  
 Unused fibers left coiled and stored in splice tray.  
 Unused Buffer Tubes left coiled and stored in splice tray.

**LEGEND**


X = FUSION SPLICE  
 E = EXISTING SPLICE  
 C = CAP IN TRAY

**EXPRESS** = EXPRESS ALL FIBERS/  
 BUFFER TUBES

**SPLICE** = SPLICE ALL FIBERS/  
 BUFFER TUBES

**COLOR CODE**  
 TIA/EIA 598-A

(1) BLUE	(7) RED
(2) ORANGE	(8) BLACK
(3) GREEN	(9) YELLOW
(4) BROWN	(10) VIOLET
(5) SLATE	(11) ROSE
(6) WHITE	(12) AQUA

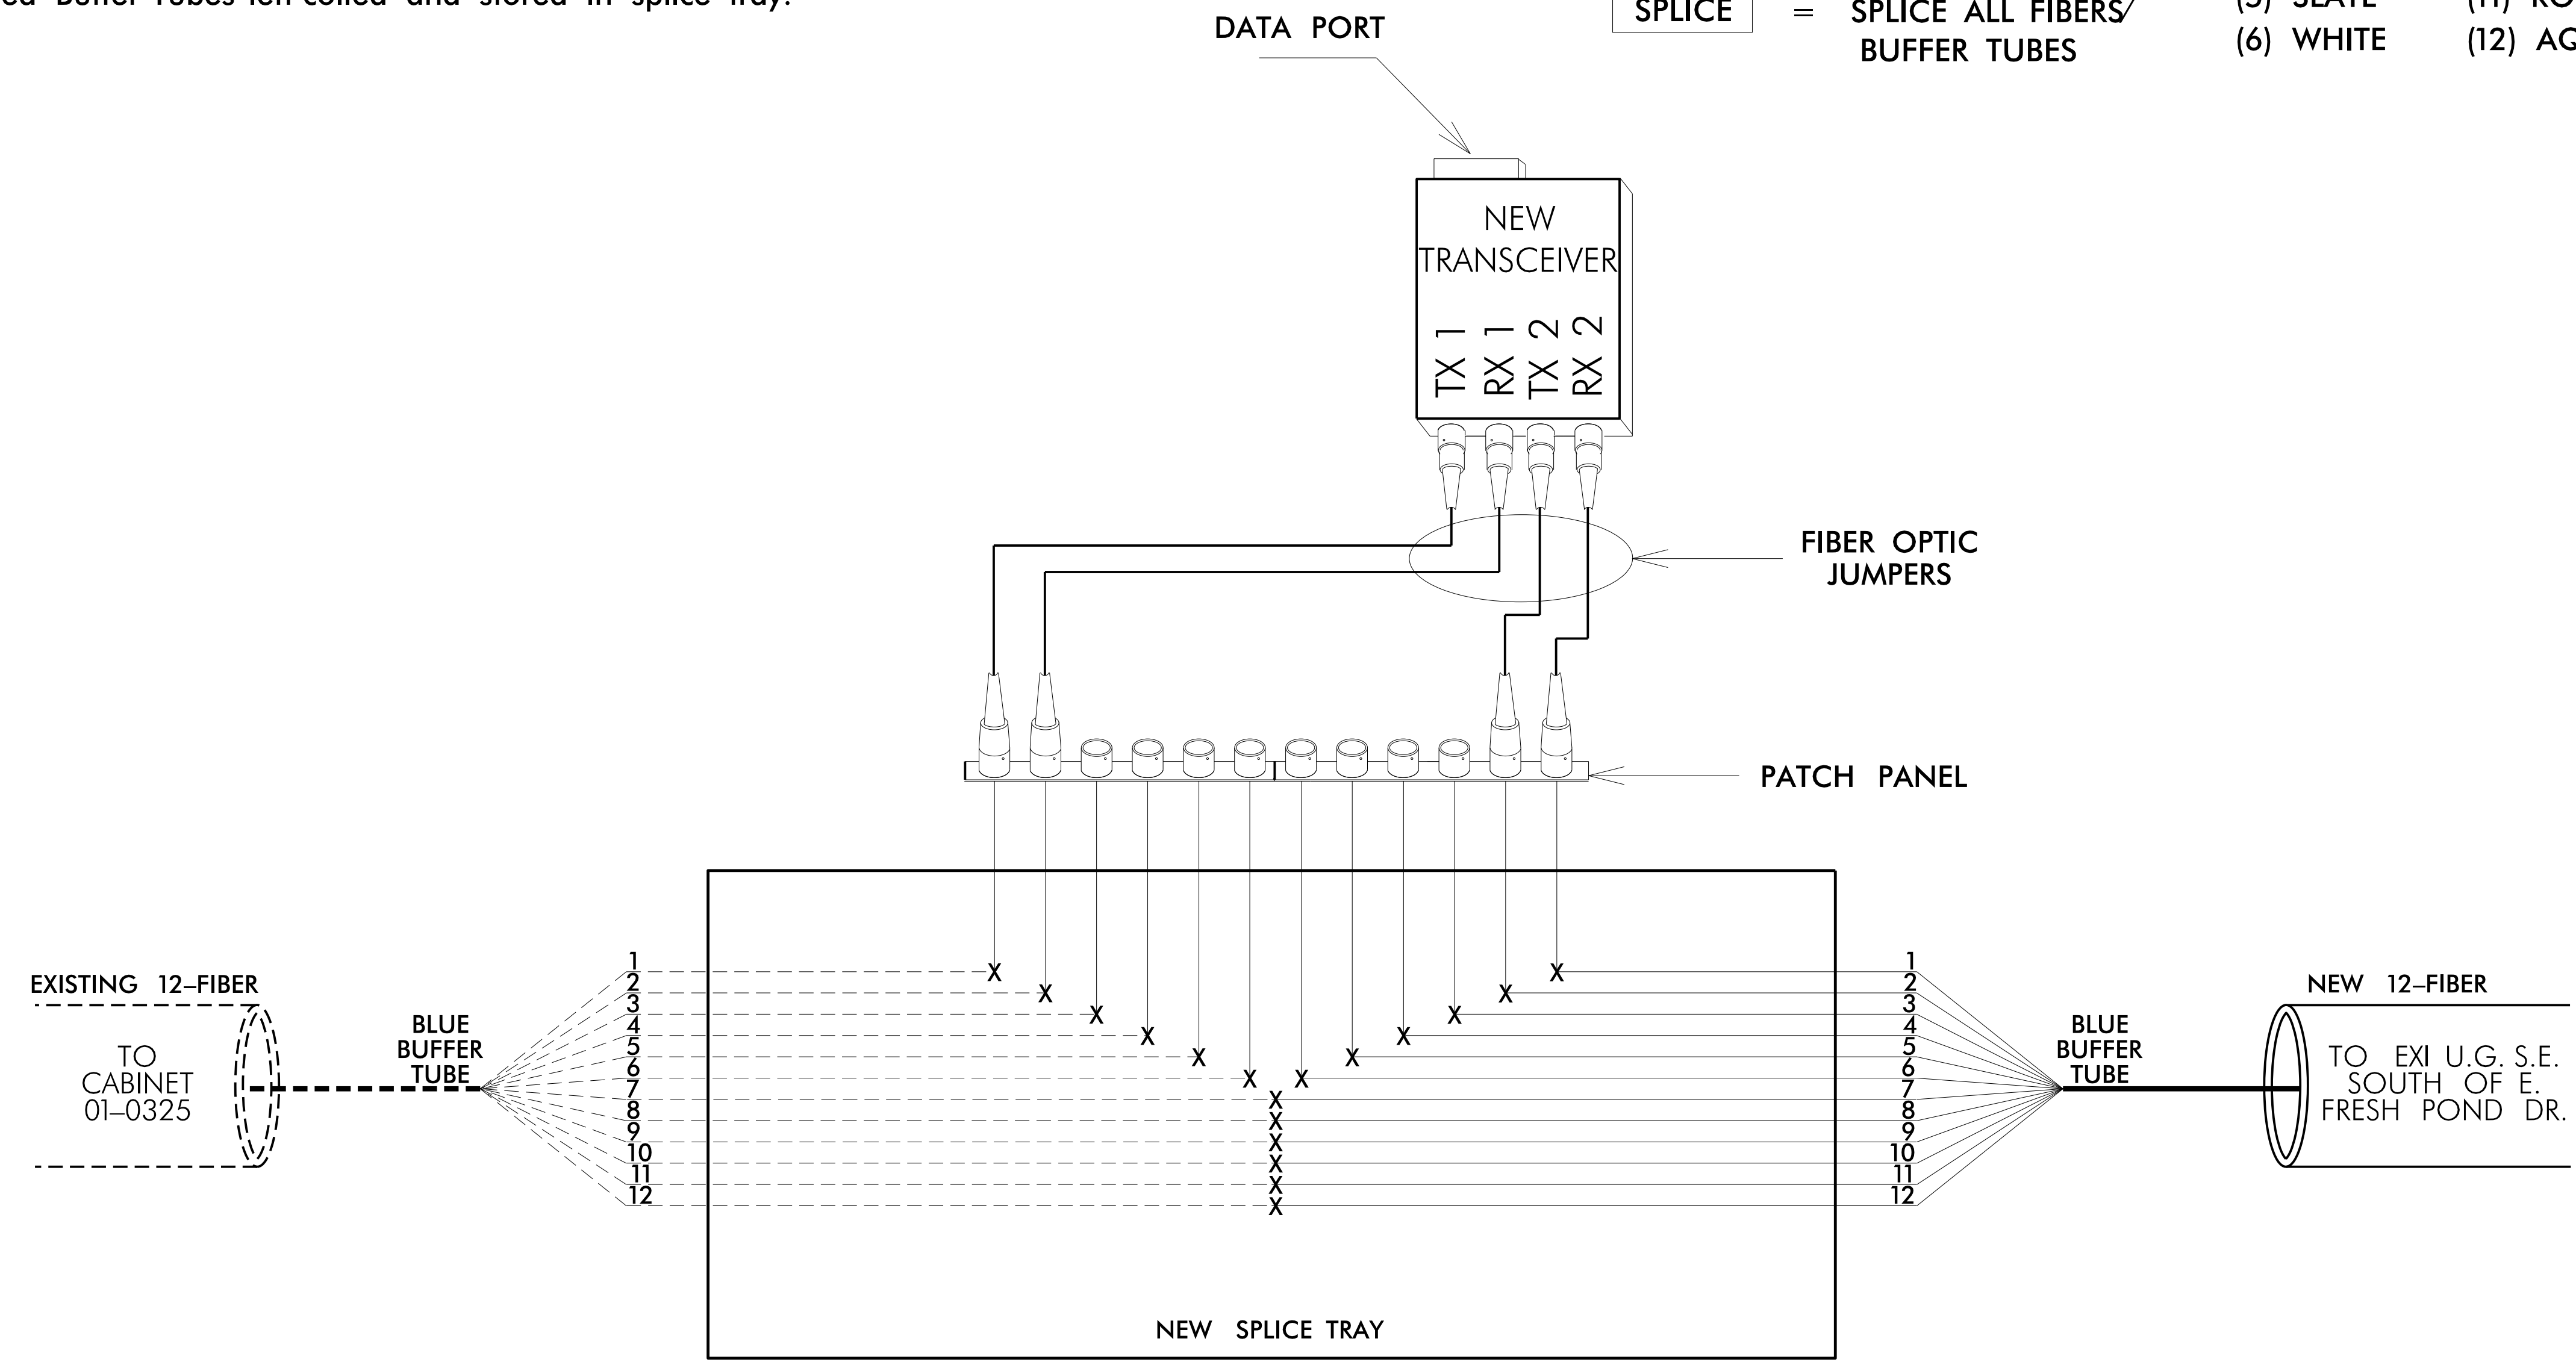

1. NOTIFY THE DIVISION SIGNAL SUPERVISOR AT (252) 482-1850 FIVE (5) DAYS PRIOR TO BEGINNING WORK ON SIGNAL SYSTEM COMMUNICATIONS CABLE. NOTIFY THE SIGNAL SUPERVISOR AFTER ALL WORK IS PERFORMED TO ENSURE THAT ALL FIBER CIRCUITS ARE FUNCTIONING PROPERLY. ALL WORK IS NOT COMPLETE UNTIL THE SIGNAL SYSTEM IS BACK UP AND OPERATIONAL.
2. CONTRACTOR TO RECORD EXISTING SPLICE ARRANGEMENT FOR COMPARISON TO THE SUPPLIED SPLICE DETAILS. IF DISCREPANCIES EXIST, CONTACT THE ENGINEER TO DETERMINE HOW TO PROCEED WITH RESPLICING. PROVIDE AS-BUILT PLANS TO THE ENGINEER IF FINAL SPLICE ARRANGEMENT DIFFERS FROM THE SUPPLIED SPLICE DETAILS.
3. TRANSCEIVER TERMINATION CONFIGURATIONS ARE GENERIC. CONTRACTOR IS RESPONSIBLE FOR DETERMINING \ ENSURING PROPER TERMINATIONS.
4. INCLUDE ON THE COVER OF EACH SPLICE TRAY THE FOLLOWING: REFERENCE SECTION 1731 "FIBER OPTIC SPLICE ENCLOSURE"
  - 1) SPLICE LOCATION
  - 2) DATE
  - 3) COMPANY NAME
  - 4) NAME OF INDIVIDUAL PERFORMING THE SPLICING

PRIOR TO INSTALLING THE COVER ON THE SPLICE TRAY TAKE A DIGITAL PHOTOGRAPH SHOWING THE SPLICE TRAY AND INFORMATION SHOWN ABOVE (1-4) AND SUBMIT PHOTOGRAPH ALONG WITH OTDR TEST RESULTS.


**DOCUMENT NOT CONSIDERED FINAL  
 UNLESS ALL SIGNATURES COMPLETED**

<p>250 N. Greenfield Place, Garner, NC 27529</p>	<b>SPLICE DETAIL</b>		
	DIVISION 1 DARE CO. KILL DEVIL HILLS PLAN DATE: MAY 2022 REVIEWED BY: <i>Erny Erny</i> PREPARED BY: D.J. SONDERFAN	REVISIONS INIT. DATE	

**EXISTING UNDERGROUND  
SPLICE ENCLOSURE SOUTH OF  
E. FRESH POND DR.**

Notes:  
 Unused fibers left coiled and stored in splice tray.  
 Unused Buffer Tubes left coiled and stored in splice tray.

<b>LEGEND</b>		<b>COLOR CODE TIA/EIA 598-A</b>	
X =	FUSION SPLICE	(1) BLUE	(7) RED
E =	EXISTING SPLICE	(2) ORANGE	(8) BLACK
C =	CAP IN TRAY	(3) GREEN	(9) YELLOW
<b>EXPRESS</b> =	EXPRESS ALL FIBERS/ BUFFER TUBES	(4) BROWN	(10) VIOLET
<b>SPLICE</b> =	SPLICE ALL FIBERS/ BUFFER TUBES	(5) SLATE	(11) ROSE
		(6) WHITE	(12) AQUA

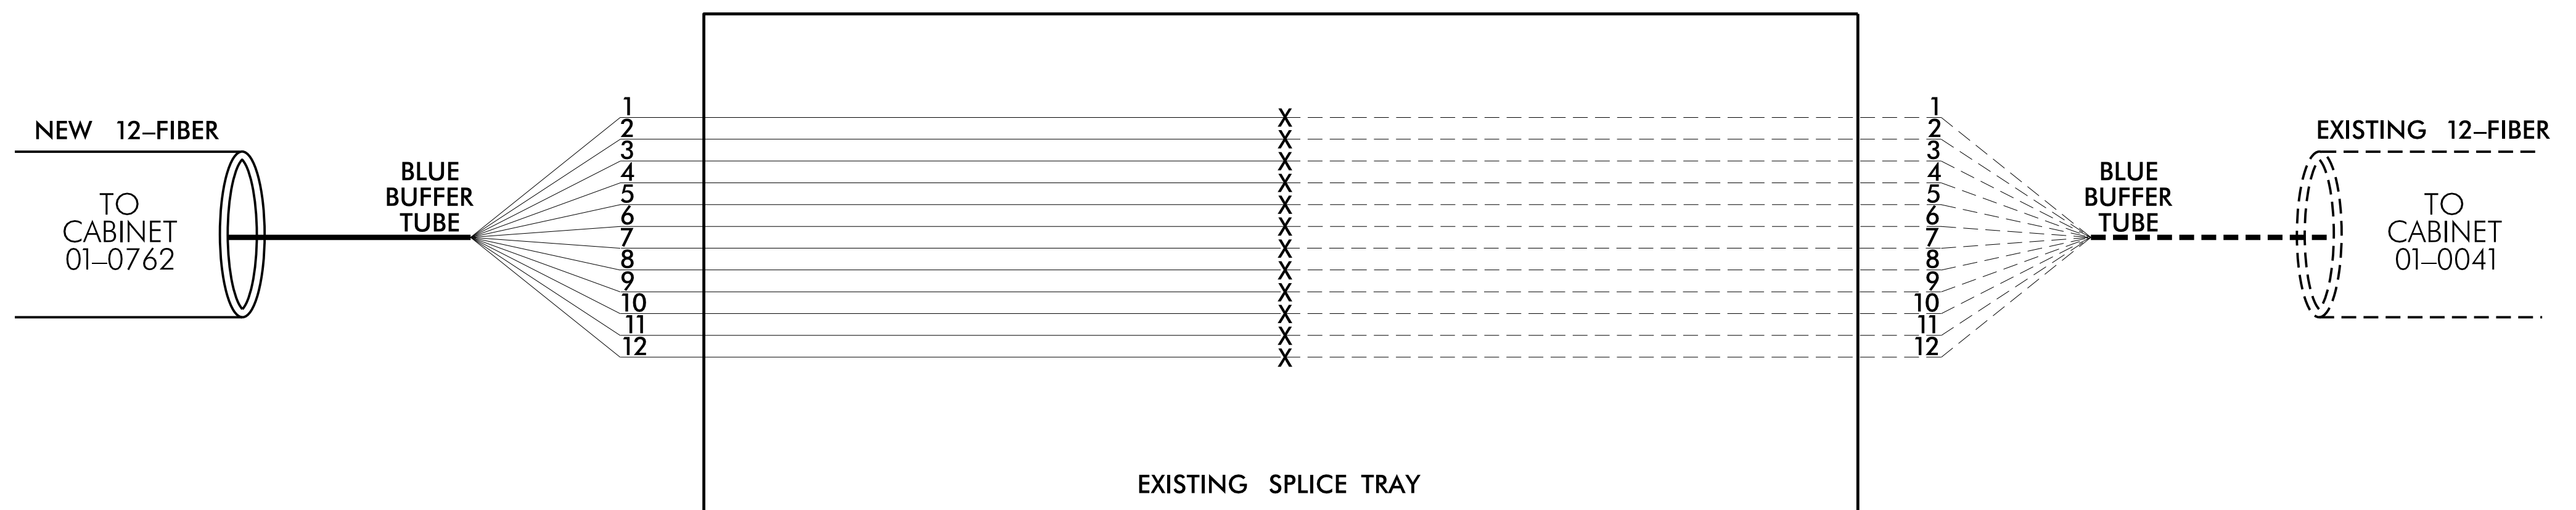

1. NOTIFY THE DIVISION SIGNAL SUPERVISOR AT (252) 482-1850 FIVE (5) DAYS PRIOR TO BEGINNING WORK ON SIGNAL SYSTEM COMMUNICATIONS CABLE. NOTIFY THE SIGNAL SUPERVISOR AFTER ALL WORK IS PERFORMED TO ENSURE THAT ALL FIBER CIRCUITS ARE FUNCTIONING PROPERLY. ALL WORK IS NOT COMPLETE UNTIL THE SIGNAL SYSTEM IS BACK UP AND OPERATIONAL.
2. CONTRACTOR TO RECORD EXISTING SPLICE ARRANGEMENT FOR COMPARISON TO THE SUPPLIED SPLICE DETAILS. IF DISCREPANCIES EXIST, CONTACT THE ENGINEER TO DETERMINE HOW TO PROCEED WITH RESPLICING. PROVIDE AS-BUILT PLANS TO THE ENGINEER IF FINAL SPLICE ARRANGEMENT DIFFERS FROM THE SUPPLIED SPLICE DETAILS.
3. TRANSCEIVER TERMINATION CONFIGURATIONS ARE GENERIC. CONTRACTOR IS RESPONSIBLE FOR DETERMINING \ ENSURING PROPER TERMINATIONS.
4. INCLUDE ON THE COVER OF EACH SPLICE TRAY THE FOLLOWING: REFERENCE SECTION 1731 "FIBER OPTIC SPLICE ENCLOSURE"
  - 1) SPLICE LOCATION
  - 2) DATE
  - 3) COMPANY NAME
  - 4) NAME OF INDIVIDUAL PERFORMING THE SPLICING

PRIOR TO INSTALLING THE COVER ON THE SPLICE TRAY TAKE A DIGITAL PHOTOGRAPH SHOWING THE SPLICE TRAY AND INFORMATION SHOWN ABOVE (1-4) AND SUBMIT PHOTOGRAPH ALONG WITH OTDR TEST RESULTS.

**DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED**

<p>250 N. Greenfield Place, Garner, NC 27529</p>	<b>SPLICE DETAIL</b>		
	DIVISION 1    DARE CO.    KILL DEVIL HILLS	PLAN DATE: MAY 2022    REVIEWED BY: <i>Erny Erny</i>	
PREPARED BY: D.J. SONDERFAN	REVISIONS	INIT.	DATE
SCALE: 0	SIGNATURE: <i>Matthew T. Carlisle</i>	DATE: 05/10/2022	