Project No.	Sheet No.
C-5199	Sig. 1

STATE OF NORTH CAROLINA
DIVISION OF HIGHWAYS

GRANVILLE COUNTY

LOCATION: NC 56 FROM SR 1215 (W. LYON STATION ROAD) TO SR 1108 (E. LYON STATION ROAD) IN BUTNER

TYPE OF WORK: TRAFFIC SIGNALS AND WIRELESS RADIO COMMUNICATIONS SYSTEM

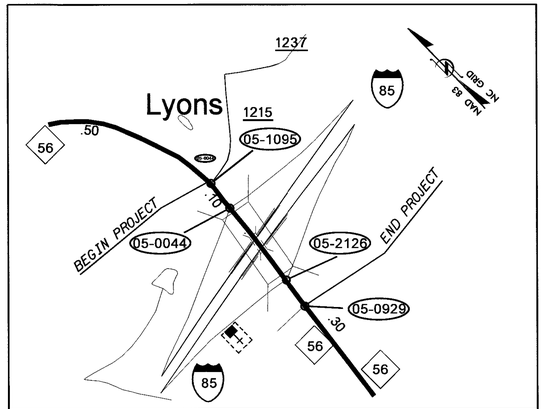

VICINITY MAP

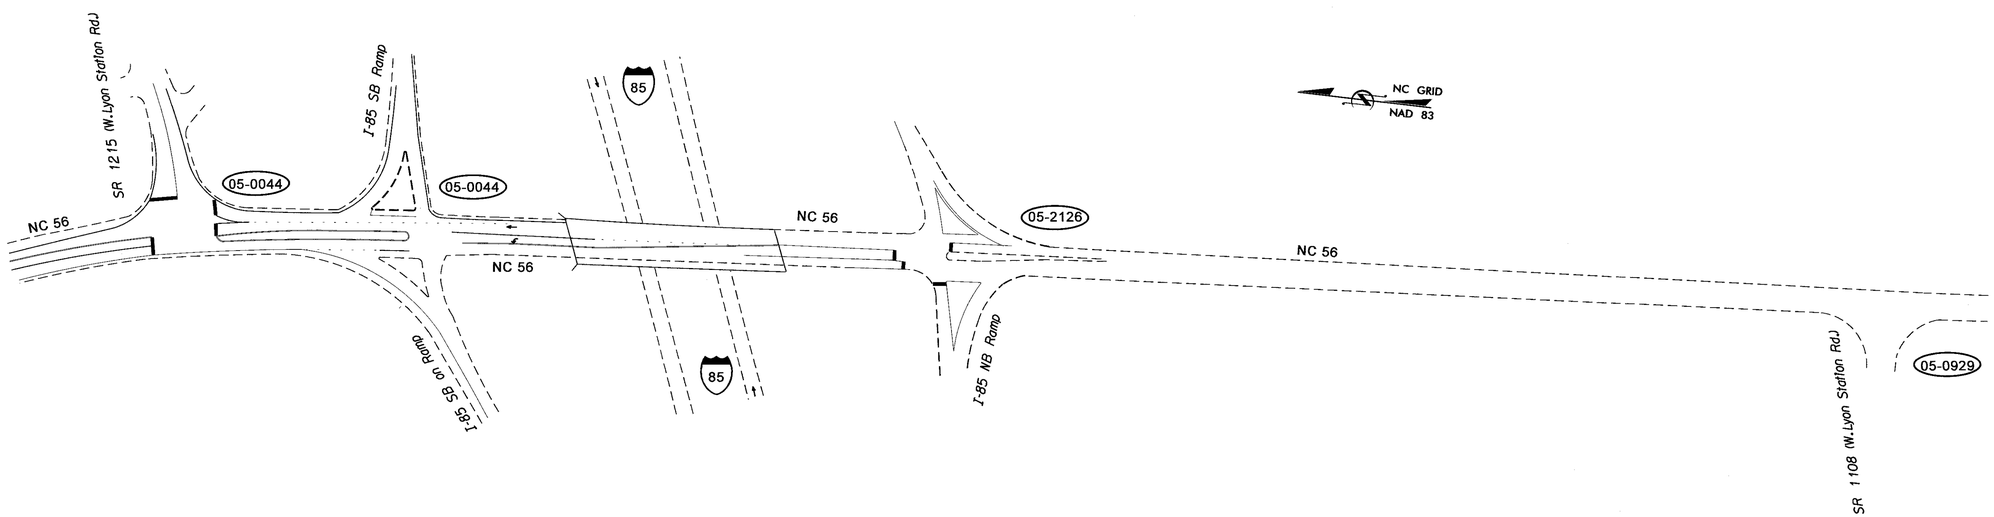

Refer to "Roadway Standard Drawings NCDOT" dated January 2012 and "Standard Specifications for Roads and Structures" dated January 2012.

Index of Plan Sheets

Sheet #	SIN	Location/Description
Sig. 1	N/A	Title Sheet
Sig. 2–3	05–1095	NC 56 @ SR 1215 (W. Lyon Station Road)
Sig. 4–6	05–0044	NC 56 @ I–85 Southbound Ramps
Sig. 7–10	05–2126	NC 56 @ I–85 Northboud Ramps
Sig. 11–12	05–0929	NC 56 @ SR 1108 (E. Lyon Station Road)
Sig. 13	N/A	Wireless Radio Communications Plans

INTELLIGENT TRANSPORTATION SYSTEMS AND SIGNALS UNIT

Contacts:

Robert J. Ziemba, PE – Central Region Signals Project Engineer
George C. Brown, PE – Signal Equipment Design Engineer
I. Neil Avery – Signal Communications Project Engineer

Prepared In the Office of:
DIVISION OF HIGHWAYS
TRANSPORTATION MOBILITY AND SAFETY DIVISION
Intelligent Transportation Systems & Signals Unit
750 N. Greenfield Parkway, Garner, NC 27529

Project: C-5199

Project: 46250.1.1

27-NOV-2012 17:09
S:\TPS&SO\ITS Signals\Signal Design Section\Central Region\Div 5\C-5199\c5199_sig_tsh.dgn

PROJECT REFERENCE NO.	SHEET NO.
C-5199	Sig. 2

PHASING DIAGRAM

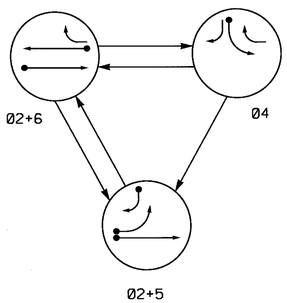

PHASING DIAGRAM DETECTION LEGEND

- DETECTED MOVEMENT
- UNDETECTED MOVEMENT (OVERLAP)
- UNSIGNALIZED MOVEMENT
- PEDESTRIAN MOVEMENT

TABLE OF OPERATION

SIGNAL FACE	PHASE 02+5	PHASE 02+6	PHASE 04	FLASH
21, 22	G	G	R	Y
41	R	R	G	R
42	R/→	R	G	R
51	←	~~R~~	~~R~~	~~R~~
61	R	G	R	Y
62	R	G	R/→	Y

SIGNAL FACE I.D.

All Heads L.E.D.

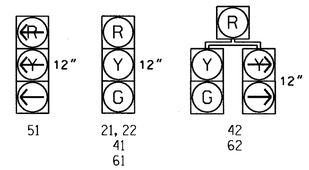

OASIS 2070L LOOP & DETECTOR INSTALLATION CHART

INDUCTIVE LOOPS					DETECTOR PROGRAMMING							
LOOP	SIZE (FT)	DISTANCE FROM STOPBAR (FT)	TURNS	NEW LOOP	PHASE	CALLING	EXTENSION	FULL TIME DELAY	STRETCH TIME	DELAY TIME	SYSTEM LOOP	NEW CARD
2A	6X6	70	Existing	-	2	Y	Y	-	-	-	-	-
4A	6X40	0	Existing	-	4	Y	Y	-	-	3	-	-
5A	6X60	0	Existing	-	5	Y	Y	-	-	-	-	-
5B	6X40	+8	Existing	-	5	Y	Y	-	-	15	-	-
6A	6X6	70	Existing	-	6	Y	Y	-	-	-	-	-
S1	6X6	+100	4	Y	-	-	-	-	-	-	Y	Y

3 Phase
Fully Actuated
NC 56 (Butner) CLS

NOTES

1. Refer to "Roadway Standard Drawings NCDOT" dated January 2012 and "Standard Specifications for Roads and Structures" dated January 2012.
2. Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
3. Phase 5 may be lagged.
4. Set all detector units to presence mode.
5. In the event of loop replacement, refer to the current ITS and Signals Design Manual and submit a Plan of Record to the Signal Design Section.
6. Existing Right Arrow "ONLY" sign (R3-5R) may be removed.
7. Pavement markings are existing.
8. Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
9. Closed loop system data:
   Controller Asset #: 1095.

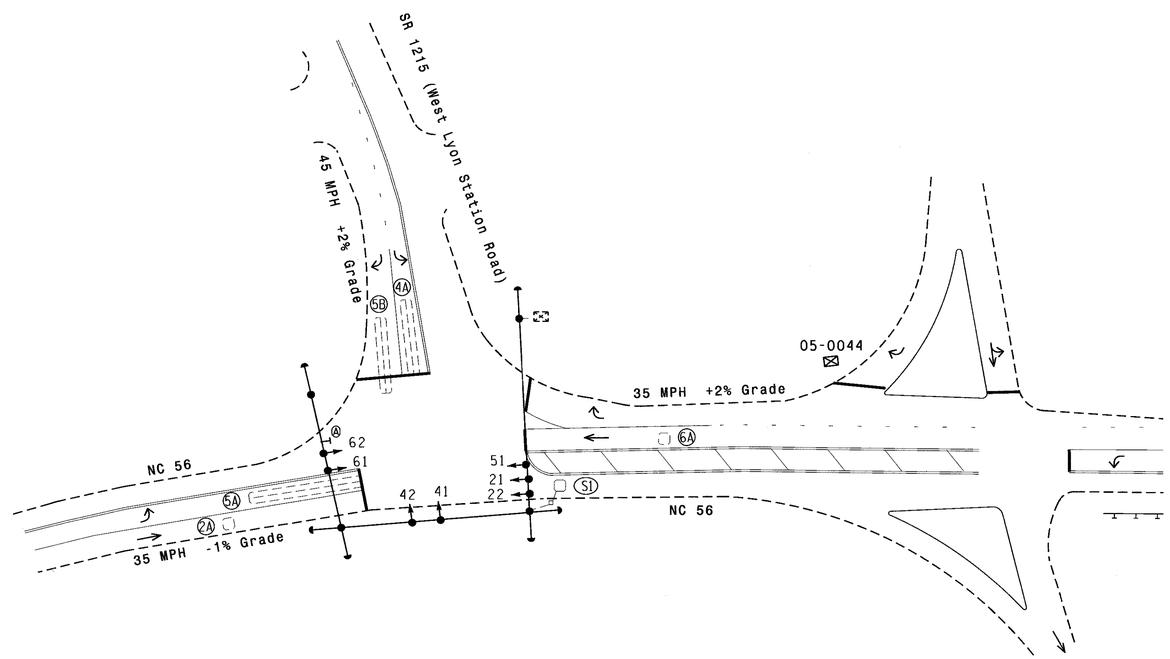

LEGEND

PROPOSED		EXISTING
	Traffic Signal Head	
	Modified Signal Head	N/A
	Sign	
	Pedestrian Signal Head With Push Button & Sign	
	Signal Pole with Guy	
	Signal Pole with Sidewalk Guy	
	Inductive Loop Detector	
	Controller & Cabinet	
	Junction Box	
	2-in Underground Conduit	
N/A	Right of Way	
	Directional Arrow	
Ⓐ	Right Arrow "ONLY" Sign (R3-5R)	Ⓐ

OASIS 2070L TIMING CHART

FEATURE	PHASE 2	PHASE 4	PHASE 5	PHASE 6
Min Green 1 *	10	7	7	10
Extension 1 *	3.0	2.0	2.0	3.0
Max Green 1 *	45	15	20	45
Yellow Clearance	3.7	3.0	3.0	4.0
Red Clearance	1.3	2.4	2.1	1.6
Walk 1 *	-	-	-	-
Don't Walk 1	-	-	-	-
Seconds Per Actuation *	-	-	-	-
Max Variable Initial *	-	-	-	-
Time Before Reduction *	-	-	-	-
Time To Reduce *	-	-	-	-
Minimum Gap	-	-	-	-
Recall Mode	MIN RECALL	-	-	MIN RECALL
Vehicle Call Memory	YELLOW	-	-	YELLOW
Dual Entry	-	-	-	-
Simultaneous Gap	ON	ON	ON	ON

* These values may be field adjusted. Do not adjust Min Green and Extension times for phases 2 and 6 lower than what is shown. Min Green for all other phases should not be lower than 4 seconds.

Signal Upgrade

Prepared in the Offices of:
Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
Signal Design Section
750 N.Greenfield Pkwy,Garner,NC 27529

SCALE 0 40 1"=40'

NC 56
at
SR 1215 (W. Lyon Station Road)

Dicision 5 Granville County Butner

PLAN DATE:	October 2012	REVIEWED BY:	
PREPARED BY:	M.Bazzarie	REVIEWED BY:	

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 026486 ENGINEER ROBERT J. ZIEMBA
SIGNATURE 10/24/12 DATE
SIG. INVENTORY NO. 05-1095

24-OCT-2012 12:49
S:\ITS\SDU\ITS Signals\Signal Design Section\Central Region\Div 5\C-5199\05-1095\05_1095_sig_dsn_20121024.dgn
S2_1095

PROJECT REFERENCE NO.	SHEET NO.
C-5199	Sig. 3

EDI MODEL 2010ECL-NC CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

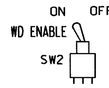

REMOVE DIODE JUMPERS 2-5 and 2-6.

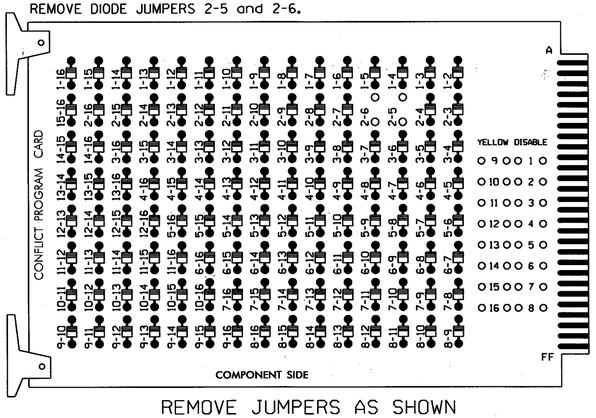

REMOVE JUMPERS AS SHOWN

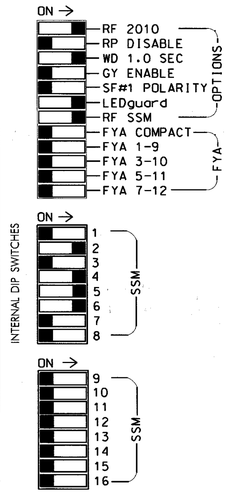

■ = DENOTES POSITION OF SWITCH

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Make sure jumpers SEL2-SEL5 are present on the monitor board.

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Ensure that Red Enable is active at all times during normal operation. To prevent Red Failures on unused monitor channels, tie unused red monitor inputs 1,3,7, 8,9,10,11,12,13,14,15 & 16 to load switch AC+ per the cabinet manufacturer's instructions.
3. Enable Simultaneous Gap-Out for all phases.
4. Program phases 2 and 6 for Start Up In Green.
5. Program phases 2 and 6 for Yellow Flash.
6. The cabinet and controller are part of the NC 56 (Butner) Closed Loop System.

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S2P	S3	S4		S4P	S5		S6	S6P	S7	S8	S8P	S9	S10	S11	S12	S13	S14
PHASE	1	2	2 PED	3	4		4 PED	5		6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	NU	21,22	NU	NU	41,42	62	NU	42	51	61,62	NU	NU	NU	NU	NU	NU	NU	NU	NU	NU
RED		128			101					134										
YELLOW		129			102					135										
GREEN		130			103					136										
RED ARROW									131											
YELLOW ARROW						102		132	132											
GREEN ARROW						103		133	133											
✋																				
🚶																				

NU = Not Used

EQUIPMENT INFORMATION

CONTROLLER.....2070L
CABINET 332
SOFTWARE .....ECONOLITE OASIS
CABINET MOUNT.....BASE
OUTPUT FILE POSITIONS..18 (12-STD, 6-AUX)
LOAD SWITCHES USED.....S2,S4,S5,S6
PHASES USED.....2,4,5,6
OVERLAPS.....NONE

INPUT FILE POSITION LAYOUT

(front view)

		1	2	3	4	5	6	7	8	9	10	11	12	13	14
FILE "I"	U	SLOT	ø5 5A	ø2 2A	SLOT	SLOT	ø4 4A	SLOT	SLOT	SYS. DET. S1	SLOT	SLOT	SLOT	SLOT	FS DC ISOLATOR
	L	EMPTY	ø5 5B	NOT USED	EMPTY	EMPTY	NOT USED	EMPTY	EMPTY	NOT USED	EMPTY	EMPTY	EMPTY	EMPTY	ST DC ISOLATOR
FILE "J"	U	SLOT	ø6 6A	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT
	L	EMPTY	NOT USED	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
5A	TB2-5,6	I2U	39	1	2	5	Y	Y			
5B	TB2-7,8	I2L	43	5	12	5	Y	Y			15
2A	TB2-9,10	I3U	63	25	32	2	Y	Y			
4A	TB4-9,10	I6U	41	3	4	4	Y	Y			3
* S1	TB6-9,10	I9U	60	22	11	SYS					
6A	TB3-5,6	J2U	40	2	6	6	Y	Y			

* System detector only. Remove the vehicle phase assigned to this detector in the default programming.

INPUT FILE POSITION LEGEND: J2L
FILE J
SLOT 2
LOWER

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 05-1095
DESIGNED: October 2012
SEALED: 10-24-12
REVISED: N/A

Signal Upgrade.

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared in the Offices of:
Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
Signal Management Section
750 N.Greenfield Pkwy,Garner,NC 27529

NC 56
at
SR 1215 (W. Lyon Station Road)

Division 5 Granville County Butner

PLAN DATE: 10-19-12	REVIEWED BY: T. Vaughn
PREPARED BY: D.H. Spaulding	REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 022013 ENGINEER GEORGE C. BROWN
SIGNATURE 11/1/12 DATE
SIG. INVENTORY NO. 05-1095

24-OCT-2012 14:23
S:\MTS\Shop\TS Signals\Work Groups\Sig Mgmt\Spaulding\In-progress\051095_sm_sig_2012xx.dgn
Spaulding

PROJECT REFERENCE NO.	SHEET NO.
C-5199	Sig. 4

PHASING DIAGRAM

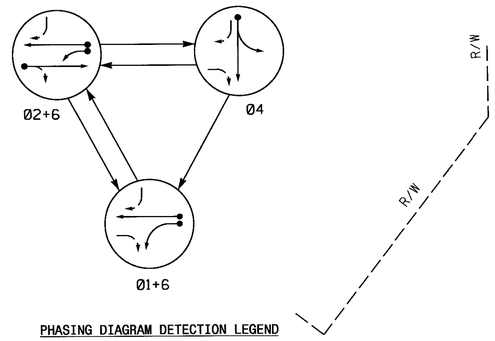

PHASING DIAGRAM DETECTION LEGEND

- DETECTED MOVEMENT
- UNDETECTED MOVEMENT (OVERLAP)
- UNSIGNALIZED MOVEMENT
- PEDESTRIAN MOVEMENT

TABLE OF OPERATION

SIGNAL FACE	PHASE 01+6	PHASE 02+6	PHASE 04	FLASH
11	←	F Y	R	Y
21, 22	R	G	R	Y
41, 42	R	R	G	R
61, 62	G	G	R	Y

SIGNAL FACE I.D.

All Heads L.E.D.

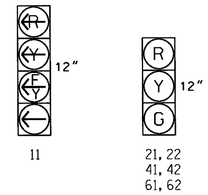

OASIS 2070L LOOP & DETECTOR INSTALLATION CHART

INDUCTIVE LOOPS					DETECTOR PROGRAMMING						
LOOP	SIZE (FT)	DISTANCE FROM STOPBAR (FT)	TURNS	NEW LOOP	PHASE	CALLING	EXTENSION	FULL TIME DELAY	STRETCH TIME	DELAY TIME	SYSTEM LOOP	NEW CARD
1A	6X40	0	2-4-2	Y	1	Y	Y	-	-	15	-	Y
					6	Y	Y	-	-	-	-	Y
2A	6X6	70	4	Y	2	Y	Y	-	-	-	-	Y
4A	6X40	0	2-4-2	Y	4	Y	Y	-	-	-	-	Y
6A	6X6	70	4	Y	6	Y	Y	-	-	-	-	Y
S2	6X6	+130	5	Y	-	-	-	-	-	-	Y	Y
S3	6X6	+70	5	Y	-	-	-	-	-	-	Y	Y

3 Phase
Fully Actuated
NC 56 (Butner) CLS

NOTES

1. Refer to "Roadway Standard Drawings NCDOT" dated January 2012 and "Standard Specifications for Roads and Structures" dated January 2012.
2. Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
3. Phase 1 may be lagged.
4. Set all detector units to presence mode.
5. Locate new cabinet so as not to obstruct sight distance of vehicles turning right on red.
6. Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
7. Closed loop system data:
   Controller Asset #: 0044.

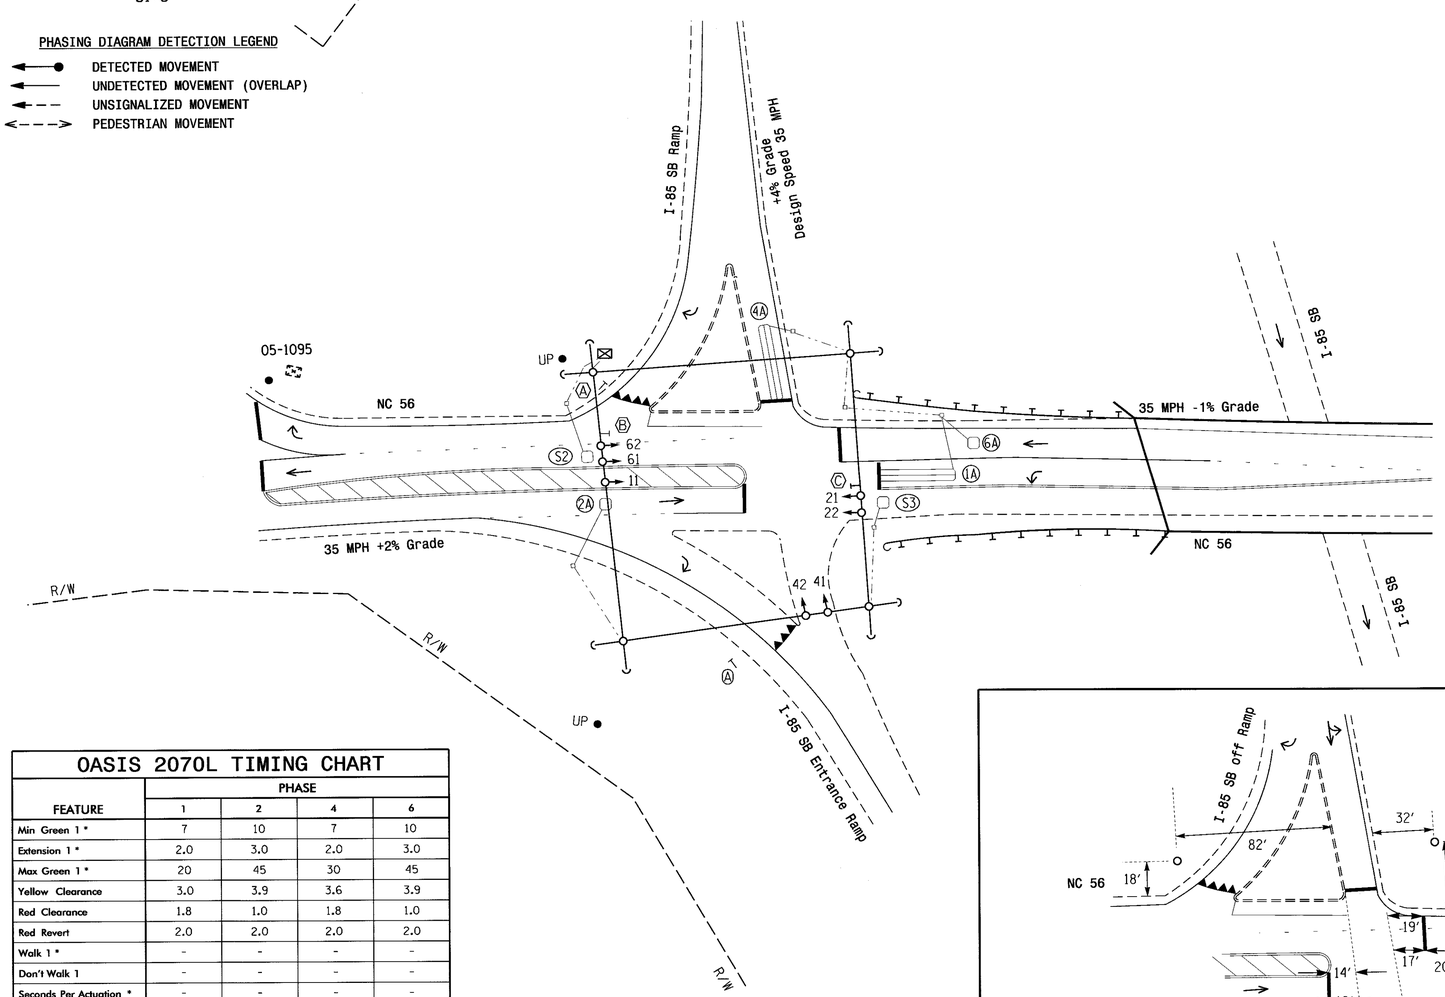

OASIS 2070L TIMING CHART

FEATURE	PHASE 1	PHASE 2	PHASE 4	PHASE 6
Min Green 1 *	7	10	7	10
Extension 1 *	2.0	3.0	2.0	3.0
Max Green 1 *	20	45	30	45
Yellow Clearance	3.0	3.9	3.6	3.9
Red Clearance	1.8	1.0	1.8	1.0
Red Revert	2.0	2.0	2.0	2.0
Walk 1 *	-	-	-	-
Don't Walk 1	-	-	-	-
Seconds Per Actuation *	-	-	-	-
Max Variable Initial *	-	-	-	-
Time Before Reduction *	-	-	-	-
Time To Reduce *	-	-	-	-
Minimum Gap	-	-	-	-
Recall Mode	-	MIN RECALL	-	MIN RECALL
Vehicle Call Memory	-	YELLOW	-	YELLOW
Dual Entry	-	-	-	-
Simultaneous Gap	ON	ON	ON	ON

* These values may be field adjusted. Do not adjust Min Green and Extension times for phases 2 and 6 lower than what is shown. Min Green for all other phases should not be lower than 4 seconds.

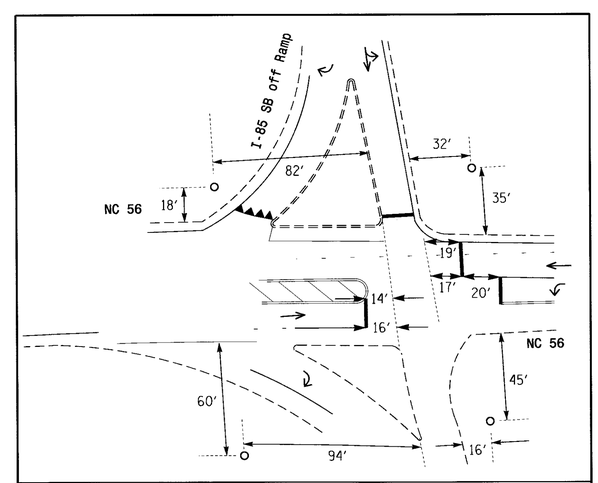

Proposed Stopbar and Wood Pole Locations

LEGEND

PROPOSED		EXISTING
	Traffic Signal Head	
	Modified Signal Head	N/A
	Sign	
	Pedestrian Signal Head With Push Button & Sign	
	Signal Pole with Guy	
	Signal Pole with Sidewalk Guy	
	Inductive Loop Detector	
	Controller & Cabinet	
	Junction Box	
	2-in Underground Conduit	
N/A	Right of Way	
	Directional Arrow	
N/A	Guardrail	
A	"YIELD" Sign (R1-2)	A
B	No Right Turn Sign (R3-1)	B
C	No Left Turn Sign (R3-2)	C

New Installation

Prepared In the Offices of:
Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
Signal Design Section
750 N.Greenfield Pkwy,Garner,NC 27529

SCALE 0 40 1'=40'

NC 56 at I-85 SB Ramps

Division 5 Granville County Butner

PLAN DATE: September 2012 REVIEWED BY:
PREPARED BY: M.Bazzarie REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 026486 ENGINEER ROBERT J. ZIEMBA
SIGNATURE 10/24/12 DATE
SIG. INVENTORY NO. 05-0044

27-NOV-2012 17:05
S:\TSGSL\TS Signals\Signal Design Section\Central Region\Div 5\C-5199\050044_sig_dgn_20121024.dgn
rzieMBA

PROJECT REFERENCE NO.	SHEET NO.
C-5199	Sig. 5

EDI MODEL 2018ECL-NC CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

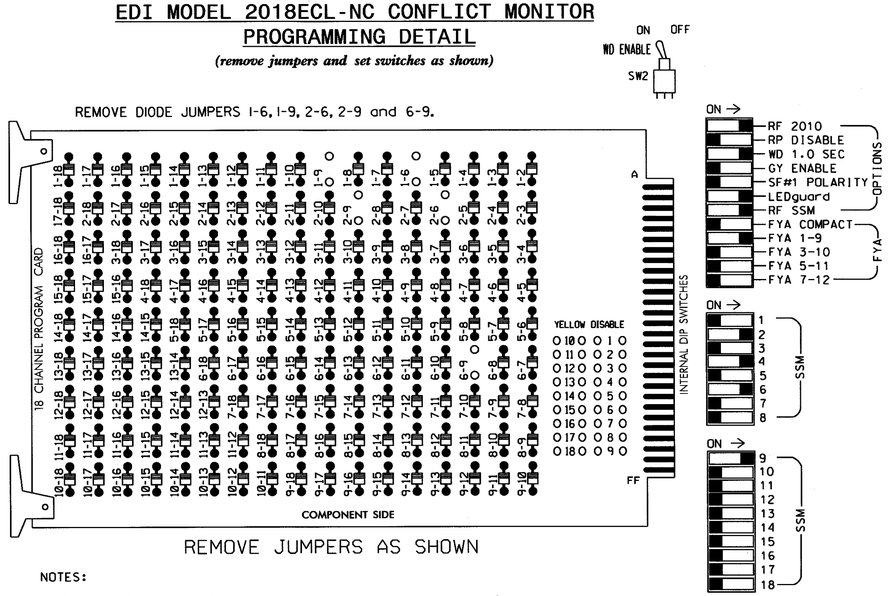

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that Red Enable is active at all times during normal operation.
4. Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

■ = DENOTES POSITION OF SWITCH

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Enable Simultaneous Gap-Out for all phases.
3. Program phases 2 and 6 for Start Up In Green.
4. Program phases 2 and 6 for Yellow Flash, and overlap 1 as Wag Overlaps.
5. The cabinet and controller are part of the NC 56 (Butner) Closed Loop System.

EQUIPMENT INFORMATION

CONTROLLER.....2070L
CABINET.....332 /W/ AUX
SOFTWARE.....ECONOLITE OASIS
CABINET MOUNT.....BASE
OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
LOAD SWITCHES USED.....S1,S2,S5,S8,AUX S1.
PHASES USED.....1,2,4,6.
OVERLAP "A".....1+2
OVERLAP "B".....NOT USED
OVERLAP "C".....NOT USED
OVERLAP "D".....NOT USED

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11★	21,22	NU	NU	41,42	NU	NU	61,62	NU	NU	NU	NU	11★	NU	NU	NU	NU	NU
RED		128			101			134										
YELLOW	✳	129			102			135										
GREEN		130			103			136										
RED ARROW													A121					
YELLOW ARROW													A122					
FLASHING YELLOW ARROW													A123					
GREEN ARROW	127																	

NU = Not Used

✳ Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail below.

4 SECTION FYA PPLT SIGNAL WIRING DETAIL

(wire signal heads as shown)

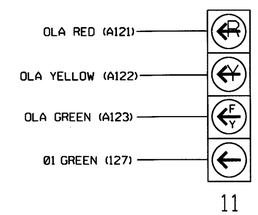

NOTE

1. The sequence display for this signal requires special logic programming. See sheet 2 of 2 for programming instructions.

INPUT FILE POSITION LAYOUT

(front view)

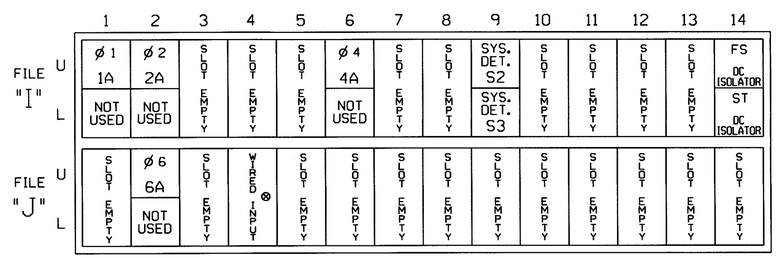

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A[1]	TB2-1.2	I1U	56	18	1	1	Y	Y			15
	-	J4U	48	10	26	6	Y	Y			
2A	TB2-5,6	I2U	39	1	2	2	Y	Y			
4A	TB4-9,10	I6U	41	3	4	4	Y	Y			
✳ S2	TB6-9,10	I9U	60	22	11	SYS					
✳ S3	TB6-11,12	I9L	62	24	13	SYS					
6A	TB3-5,6	J2U	40	2	6	6	Y	Y			

✳ System detector only. Remove the vehicle phase assigned to this detector in the default programming.

[1]Add jumper from I1-W to J4-W, on rear of input file.

LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown below)

ACCEPTABLE VALUES

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

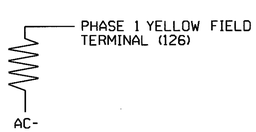

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 05-0044
DESIGNED: September 2012
SEALED: 10-24-12
REVISED: N/A

New Installation SHEET 1 OF 2

ELECTRICAL AND PROGRAMMING DETAILS FOR:

NC 56
at
I-85 SB Ramps

Division 05 Granville County Butner

PLAN DATE: 10-12-12 REVIEWED BY: T.J.G.
PREPARED BY: D.H. Spaulding REVIEWED BY:

REVISIONS	INIT.	DATE

Prepared in the Offices of:
Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
Signal Management Section
750 N.Greenfield Pkwy,Garner,NC 27529

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 022013 ENGINEER GEORGE C. BROWN
SIGNATURE DATE 10/1/12
SIG. INVENTORY NO. 05-0044

30-OCT-2012 10:42
S:\ITS&SM\ITS Signals\workgroups\Sig Mark\Spaulding\in-progress\050044_sm.sele.2012xx.dgn
dspaulding

PROJECT REFERENCE NO.	SHEET NO.
C-5199	Sig. 6

LOGICAL I/O PROCESSOR PROGRAMMING DETAIL
TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

1. FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2 AND 3.

2. FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

```
LOGICAL I/O COMMAND #1  (+/-COMMAND#)
IF  ACTIVE PHASE        #1  IS ON
AND RED CLEAR ON PHASE #1  IS ON

                SCROLL DOWN

THEN:
SET OUTPUT  ASSIGNMENT #50 ON
SET OUTPUT  ASSIGNMENT #51 OFF
```

NOTE: LOGIC FOR PHASE 1 RED CLEAR WHEN TRANSITIONING FROM PHASE 1 TO PHASE 2 (HEAD 11).

PRESS '+'

```
LOGICAL I/O COMMAND #2  (+/-COMMAND#)
IF  ACTIVE PHASE        #1  IS ON

                SCROLL DOWN

THEN:
SET OUTPUT  ASSIGNMENT #52 OFF
```

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 1 (HEAD 11).

PRESS '+'

```
LOGICAL I/O COMMAND #3  (+/-COMMAND#)
IF  YELLOW ON PHASE     #1  IS ON

                SCROLL DOWN

THEN:
SET OUTPUT  ASSIGNMENT #51 ON
```

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 1 (HEAD 11).

PROGRAMMING COMPLETE

OUTPUT REFERENCE SCHEDULE

OUTPUT 50 = Overlap A Red

OUTPUT 51 = Overlap A Yellow

OUTPUT 52 = Overlap A Green

OVERLAP PROGRAMMING DETAIL

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

```
PAGE 1: VEHICLE OVERLAP 'A' SETTINGS
PHASE:            ¦123456789101112131415 16
VEH OVL PARENTS:¦XX
VEH OVL NOT VEH:¦
VEH OVL NOT PED:¦
VEH OVL GRN EXT:¦
STARTUP COLOR: _ RED  _ YELLOW  _ GREEN
FLASH COLORS:  _ RED  _ YELLOW  X GREEN
SELECT VEHICLE OVERLAP OPTIONS:   (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC).........0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)..0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)....0
```

← NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 05-0044
DESIGNED: September 2012
SEALED: 10-24-12
REVISED: N/A

New Installation SHEET 2 OF 2

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared in the Offices of:

Transportation Mobility and Safety Division, Signal Management Section, Department of Transportation, State of North Carolina

750 N.Greenfield Pkwy,Garner,NC 27529

NC 56
at
I-85 SB Ramps

Division 05 Granville County Butner

PLAN DATE: 10-12-12 REVIEWED BY: T. Joyce

PREPARED BY: D.H. Spaulding REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL

NORTH CAROLINA PROFESSIONAL SEAL 022013 ENGINEER GEORGE C. BROWN

George C. Brown 11/1/12
SIGNATURE DATE

SIG. INVENTORY NO. 05-0044

24-OCT-2012 14:42
S:\TSS\STITS\Signals\Workgroups\Sig Mgmt\Spaulding\In-progress\050044_sm_ele_2012xx.dgn
dspaulding

PROJECT REFERENCE NO.	SHEET NO.
C-5199	Sig. 7

3 Phase
Fully Actuated
NC 56 (Butner) CLS

PHASING DIAGRAM

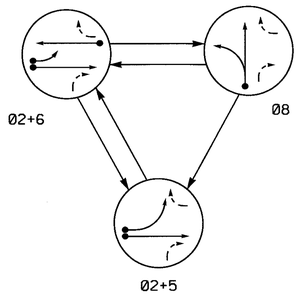

PHASING DIAGRAM DETECTION LEGEND

- DETECTED MOVEMENT
- UNDETECTED MOVEMENT (OVERLAP)
- UNSIGNALIZED MOVEMENT
- PEDESTRIAN MOVEMENT

TABLE OF OPERATION

SIGNAL FACE	PHASE 02+5	PHASE 02+6	PHASE 08	FLASH
21, 22	G	G	R	Y
51	←, F Y		R	Y
61, 62	R	G	R	Y
81, 82	R	R	G	R

SIGNAL FACE I.D.

All Heads L.E.D.

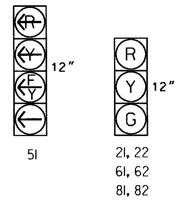

OASIS 2070L LOOP & DETECTOR INSTALLATION CHART

INDUCTIVE LOOPS					DETECTOR PROGRAMMING							
LOOP	SIZE (FT)	DISTANCE FROM STOPBAR (FT)	TURNS	NEW LOOP	PHASE	CALLING	EXTENSION	FULL TIME DELAY	STRETCH TIME	DELAY TIME	SYSTEM LOOP	NEW CARD
2A	6X6	70	Existing	-	2	Y	Y	-	-	-	-	-
5A	6X60	+5	2-4-2	-	5	Y	Y	-	-	15	-	-
					2	Y	Y	-	-	-	-	-
6A	6X6	70	Existing	-	6	Y	Y	-	-	-	-	-
8A	6X60	0	2-4-2	-	8	Y	Y	-	-	-	-	-
S4	6X6	+90	5	Y	-	-	-	-	-	-	Y	Y
S5	6X6	+120	4	Y	-	-	-	-	-	-	Y	Y

NOTES

1. Refer to "Roadway Standard Drawings NCDOT" dated January 2012 and "Standard Specifications for Roads and Structures" dated January 2012.
2. Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
3. Phase 5 may be lagged.
4. Set all detector units to presence mode.
5. In the event of loop replacement, refer to the current ITS and Signals Design Manual and submit a Plan of Record to the Signal Design Section.
6. Pavement markings are existing.
7. Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
8. Closed loop system data:
   Master Asset #: 10556,
   Controller Asset #: 2126.

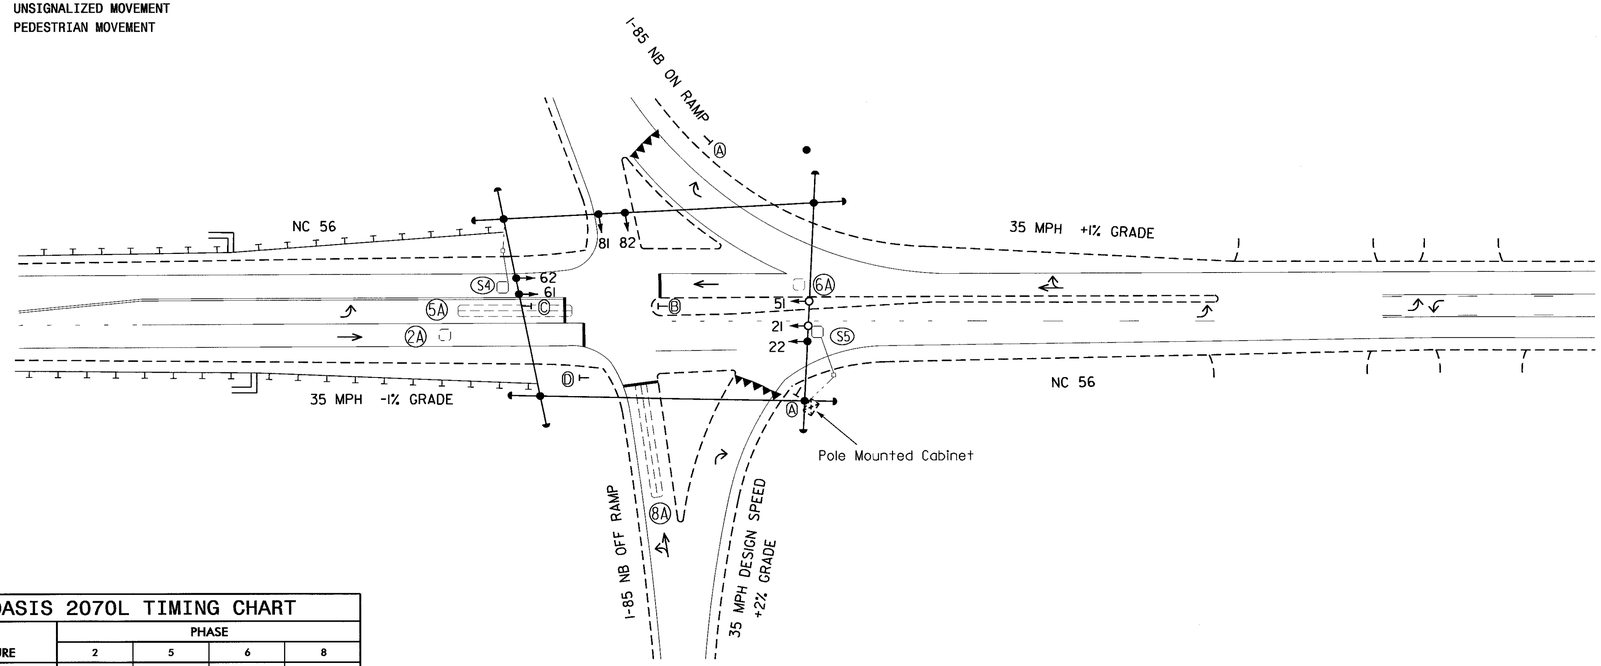

OASIS 2070L TIMING CHART

FEATURE	PHASE 2	PHASE 5	PHASE 6	PHASE 8
Min Green 1 *	10	7	10	7
Extension 1 *	3.0	1.0	3.0	1.0
Max Green 1 *	45	15	45	20
Yellow Clearance	3.9	3.0	3.9	3.7
Red Clearance	1.0	1.4	1.0	1.2
Red Revert	2.0	2.0	2.0	2.0
Walk 1 *	-	-	-	-
Don't Walk 1	-	-	-	-
Seconds Per Actuation *	-	-	-	-
Max Variable Initial *	-	-	-	-
Time Before Reduction *	-	-	-	-
Time To Reduce *	-	-	-	-
Minimum Gap	-	-	-	-
Recall Mode	MIN RECALL	-	MIN RECALL	-
Vehicle Call Memory	YELLOW	-	YELLOW	-
Dual Entry	-	-	-	-
Simultaneous Gap	ON	ON	ON	ON

* These values may be field adjusted. Do not adjust Min Green and Extension times for phases 2 and 6 lower than what is shown. Min Green for all other phases should not be lower than 4 seconds.

LEGEND

PROPOSED		EXISTING
	Traffic Signal Head	
	Modified Signal Head	N/A
	Sign	
	Pedestrian Signal Head With Push Button & Sign	
	Signal Pole with Guy	
	Signal Pole with Sidewalk Guy	
	Inductive Loop Detector	
	Controller & Cabinet	
	Junction Box	
	2-in Underground Conduit	
N/A	Right of Way	
	Directional Arrow	
N/A	Guardrail	
A	"YIELD" Sign (R1-2)	A
B	Keep Right Sign (R4-7)	B
C	No Left Turn/ No U-Turn Arrows Sign (R3-18)	C
D	No Right Turn Sign (R3-1)	D

Signal Upgrade

Prepared in the Offices of:
Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
Signal Design Section
750 N.Greenfield Pkwy,Garner,NC 27529

NC 56
at
I-85 NB Ramps

Division 5 Granville County Butner

PLAN DATE: October 2012 REVIEWED BY:
PREPARED BY: M.Bazzarie REVIEWED BY:

SCALE 0 40 1"=40'

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 026486 ENGINEER ROBERT J. ZIEMBA
SIGNATURE 10/24/12 DATE
SIG. INVENTORY NO. 05-2126

24-OCT-2012 12:41
r:\traffic\Signals\Signal Design Section\Central Region\Div 5\C-5199\05-2126\05126_sig_dsn_20121024.dgn
$$$$USER$$$$

PROJECT REFERENCE NO.	SHEET NO.
C-5199	Sig. 8

EDI MODEL 2010ECL-NC CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

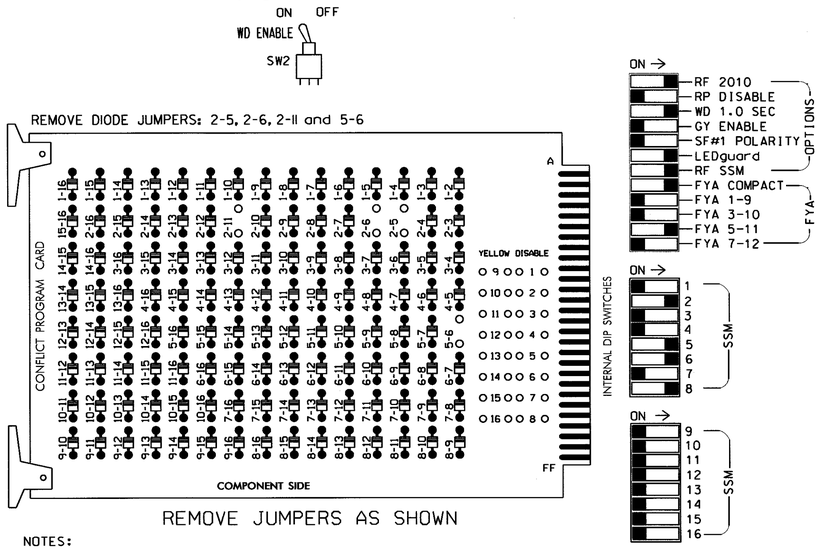

REMOVE JUMPERS AS SHOWN

■ = DENOTES POSITION OF SWITCH

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Make sure jumpers SEL2-SEL5 are present on the monitor board.
3. ! Special cabinet wiring is required to utilize FYA COMPACT mode. See Ped Yellow Conflict Monitor Wiring Detail on this sheet. !

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Ensure that Red Enable is active at all times during normal operation. To prevent Red Failures on unused monitor channels, tie unused red monitor inputs 1,3,4,7, 9,10,11,12,13,14,15 & 16 to load switch AC+ per the cabinet manufacturer's instructions.
3. Enable Simultaneous Gap-Out for all phases.
4. Program phases 2 and 6 for Start Up In Green.
5. Program phases 2 and 6 for Yellow Flash.
6. The cabinet and controller are part of the NC 56 (Butner) Closed Loop System.

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S2P	S3	S4	S4P	S5	S6	S6P		S7	S8	S8P
PHASE	1	2	2 PED	3	4	4 PED	OLC	6	5	6 PED	7	8	8 PED
SIGNAL HEAD NO.	NU	21,22	NU	NU	NU	NU	51★	61,62	51★	NU	NU	81,82	NU
RED		128						134				107	
YELLOW		129						135				108	
GREEN		130						136				109	
RED ARROW							131						
YELLOW ARROW							132						
FLASHING YELLOW ARROW							133						
✋													
GREEN ARROW									120				
🚶										*			

NU = Not Used

* Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail below.

NOTE: Load Switches S5, S6P require output remapping. See sheet 3 of 3 of this electrical detail for instructions.

EQUIPMENT INFORMATION

CONTROLLER.....2070L
CABINET.....336
SOFTWARE.....ECONOLITE OASIS
CABINET MOUNT.....POLE
OUTPUT FILE POSITIONS...12
LOAD SWITCHES USED.....S2,S5,S6,S6P,S8
PHASES USED.....2,5,6,8
OVERLAP "A".....NOT USED
OVERLAP "B".....NOT USED
OVERLAP "C".....5+6
OVERLAP "D".....NOT USED

4 SECTION FYA PPLT SIGNAL WIRING DETAIL

(wire signal head as shown)

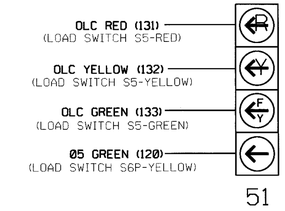

NOTE

1. The sequence display for this signal requires special logic and output remapping. See sheet 2 of 3 for programming instructions.

INPUT FILE POSITION LAYOUT

(front view)

FILE "I"	1	2	3	4	5	6	7	8	9	10	11	12	13	14
U	SLOT EMPTY	Ø2 2A	SLOT EMPTY	SYS. DET. S4	Ø5 5A	Ø6 6A	SLOT EMPTY	Ø8 8A	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	FS DC ISOLATOR
L		NOT USED		SYS. DET. S5	⊗ WIRED INPUT	NOT USED		NOT USED						ST DC ISOLATOR

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

⊗ Wired Input - turn off Channel 2.

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
2A	TB21-3,4	I2U	39	1	2	2	Y	Y			
* S4	TB21-7,8	I4U	41	3	4	SYS					
* S5	TB23-7,8	I4L	45	7	14	SYS					
5A[1]	TB21-9,10	I5U	55	17	5	5	Y	Y			15
	-	I5L	48	10	26	2	Y	Y			
6A	TB21-11,12	I6U	40	2	6	6	Y	Y			
8A	TB22-1,2	I8U	42	4	8	8	Y	Y			

* System detector only. Remove the vehicle phase assigned to this detector in the default programming.

[1] Add jumper from I5-F to I5-W on rear of input file.

INPUT FILE POSITION LEGEND: I2L
FILE I
SLOT 2
LOWER

PED YELLOW CONFLICT MONITOR WIRING DETAIL

(make cabinet wiring changes as shown below)

In order to use FYA COMPACT mode on the 2010ECL-NC Monitor, the cabinet must be wired such that the (unused) Ped Yellow load switch output is wired to the conflict monitor as follows: From 6 PY (field term. 120) to chan. 10 green (monitor pin R).

Follow the instructions below to make the appropriate connections:

STEP 1: Fold down rear panel of output file.

STEP 2: Find unused wiring harness from conflict monitor card edge connector (which should be tied and bundled together).

STEP 3: Find the conductors that correspond to the following conflict monitor card edge pins and solder wire to the appropriate terminal on the rear of the output file as shown below:

CMU-R ———————— 6PY (term. 120)

NOTE: Some cabinet manufacturers use a molex plug to accomplish this wiring configuration. If connectors are used, simply plug the two connectors together that are labeled with the pin-out as shown above.

LOAD RESISTOR INSTALLATION DETAIL

(install resistor as shown below)

ACCEPTABLE VALUES

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

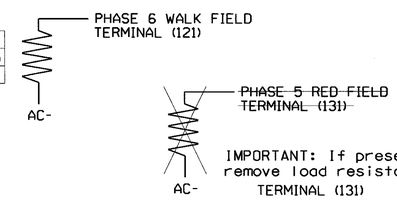

Signal Upgrade Sheeet 1 of 3

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 05-2126
DESIGNED: October 2012
SEALED: 10-24-12
REVISED: N/A

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared in the Offices of:
Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
Signals Management Section
750 N.Greenfield Pkwy,Garner,NC 27529

NC 56
at
I-85 NB Ramp

Division 5 Granville County Butner

PLAN DATE: October 2012 REVIEWED BY: T. Jones
PREPARED BY: D.H. Spaulding REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 022013 ENGINEER GEORGE C. BROWN

George Brown 11/1/12
SIGNATURE DATE

SIG. INVENTORY NO. 05-2126

24-OCT-2012 14:59
S:\ATS\Traffic Signals\Workgroups\Sig Mgmt\Spaulding\In-progress\052126_sheets_2012xx.dgn
Spaulding

PROJECT REFERENCE NO.	SHEET NO.
C-5199	Sig. 9

LOGICAL I/O PROCESSOR PROGRAMMING DETAIL
TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

1. FROM MAIN MENU PRESS '2' (PHASE CONTROL). THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2 AND 3.

2. FROM MAIN MENU PRESS '6' (OUTPUTS). THEN '3' (LOGICAL I/O PROCESSOR).

```
LOGICAL I/O COMMAND #1  (+/-COMMAND#)
IF  ACTIVE PHASE        #5  IS ON
AND RED CLEAR ON PHASE #5  IS ON

              SCROLL DOWN

THEN:
SET OUTPUT  ASSIGNMENT #30 ON
SET OUTPUT  ASSIGNMENT #31 OFF
```

NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

PRESS '+'

```
LOGICAL I/O COMMAND #2  (+/-COMMAND#)
IF  ACTIVE PHASE        #5  IS ON

              SCROLL DOWN

THEN:
SET OUTPUT  ASSIGNMENT #32 OFF
```

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).

PRESS '+'

```
LOGICAL I/O COMMAND #3  (+/-COMMAND#)
IF  YELLOW ON PHASE     #5  IS ON

              SCROLL DOWN

THEN:
SET OUTPUT  ASSIGNMENT #31 ON
```

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE

OUTPUT REFERENCE SCHEDULE

OUTPUT 30 = Overlap C Red
OUTPUT 31 = Overlap C Yellow
OUTPUT 32 = Overlap C Green
OUTPUT 34 = Phase 5 Green

Note: All outputs shown above have been remapped. See sheet 3 of this electrical detail.

OVERLAP PROGRAMMING DETAIL

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS). THEN '1' (VEHICLE OVERLAP SETTINGS).

PRESS '+' TWICE

```
PAGE 1: VEHICLE OVERLAP 'C' SETTINGS
PHASE:          :123456789101112131415 16
VEH OVL PARENTS::    XX
VEH OVL NOT VEH::
VEH OVL NOT PED::
VEH OVL GRN EXT::
STARTUP COLOR: _ RED  _ YELLOW  _ GREEN
FLASH COLORS:  _ RED  _ YELLOW  X GREEN
SELECT VEHICLE OVERLAP OPTIONS:   (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC).........0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)..0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)....0
```

← NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 05-2126
DESIGNED: October 2012
SEALED: 10-24-12
REVISED: N/A

Signal Upgrade Sheeet 2 of 3

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared in the Offices of:
Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA
DEPARTMENT OF TRANSPORTATION
Signal Management Section
750 N.Greenfield Pkwy,Garner,NC 27529

NC 56
at
I-85 NB Ramp

Division 5 Granville County Butner

PLAN DATE: October 2012	REVIEWED BY: T.J.K.		
PREPARED BY: D.H. Spaulding	REVIEWED BY:		
REVISIONS		INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 022013 ENGINEER GEORGE C. BROWN

George C. Brown 11/1/12
SIGNATURE DATE

SIG. INVENTORY NO. 05-2126

30-OCT-2012 10:33
S:\TSA&SU\TS Signals\workgroups\Sig Mgmt\Spaulding\in-progress\52126_sm_ele_2012xx.dgn
dspaulding

PROJECT REFERENCE NO.	SHEET NO.
C-5199	Sig. 10

FYA SIGNAL OUTPUT REMAPPING ASSIGNMENT PROGRAMMING DETAIL FOR SIGNAL HEAD 51

(program controller as shown below)

STEP 1

FROM MAIN MENU PRESS '6' (OUTPUTS). THEN
'1' (OUTPUT ASSIGNMENTS).
WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION. ENTER "30"

```
PAGE:1  C1 PIN:32  VEHICLE PHASE
OUTPUT ASSIGNMENT #.................30
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID.1=FLASH)..............0
SELECT ASSIGNMENT:
NOT ENABLED.........................
VEHICLE PHASE.......................Y
PEDESTRIAN PHASE....................
VEHICLE OVERLAP.....................Y
PEDESTRIAN OVERLAP..................
WATCHDOG............................
DETECTOR RESET......................
ADVANCE BEACON......................
OUT OF PHASE FLASHER................
CONTROLLER FLASH....................
RUN FREE............................
RESERVED............................
PREEMPT.............................
SOFT PREEMPT........................
ANY PREEMPT.........................
COORDINATION PLAN...................
OFFSET..............................
PHASE CHECK.........................
PHASE ON............................
PHASE NEXT..........................
```

THE OUPUT IS SET AS A VEHICLE PHASE BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1  C1 PIN:32  VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1.P=16)...3
SELECT COLOR(0=RED.1=YEL.2=GRN).....0
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'
THE SCREEN SHOWN ABOVE WILL APPEAR.
ENTER DATA AS SHOWN.

PRESS THE 'ENT' KEY AFTER INPUTTING DATA.
THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1  C1 PIN:32  VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.................30
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID.1=FLASH)..............0
SELECT ASSIGNMENT:
NOT ENABLED.........................
VEHICLE PHASE.......................
PEDESTRIAN PHASE....................
VEHICLE OVERLAP.....................Y
PEDESTRIAN OVERLAP..................
WATCHDOG............................
DETECTOR RESET......................
ADVANCE BEACON......................
OUT OF PHASE FLASHER................
CONTROLLER FLASH....................
RUN FREE............................
RESERVED............................
PREEMPT.............................
SOFT PREEMPT........................
ANY PREEMPT.........................
COORDINATION PLAN...................
OFFSET..............................
PHASE CHECK.........................
PHASE ON............................
PHASE NEXT..........................
```

PRESS "+" KEY FOR OUTPUT 31

STEP 2

```
PAGE:1  C1 PIN:33  VEHICLE PHASE
OUTPUT ASSIGNMENT #.................31
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID.1=FLASH)..............0
SELECT ASSIGNMENT:
NOT ENABLED.........................
VEHICLE PHASE.......................Y
PEDESTRIAN PHASE....................
VEHICLE OVERLAP.....................Y
PEDESTRIAN OVERLAP..................
WATCHDOG............................
DETECTOR RESET......................
ADVANCE BEACON......................
OUT OF PHASE FLASHER................
CONTROLLER FLASH....................
RUN FREE............................
RESERVED............................
PREEMPT.............................
SOFT PREEMPT........................
ANY PREEMPT.........................
COORDINATION PLAN...................
OFFSET..............................
PHASE CHECK.........................
PHASE ON............................
PHASE NEXT..........................
```

THE OUPUT IS SET AS A VEHICLE PHASE BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1  C1 PIN:33  VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1.P=16)...3
SELECT COLOR(0=RED.1=YEL.2=GRN).....1
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'
THE SCREEN SHOWN ABOVE WILL APPEAR.
ENTER DATA AS SHOWN.

PRESS THE 'ENT' KEY AFTER INPUTTING DATA.
THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1  C1 PIN:33  VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.................31
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID.1=FLASH)..............0
SELECT ASSIGNMENT:
NOT ENABLED.........................
VEHICLE PHASE.......................
PEDESTRIAN PHASE....................
VEHICLE OVERLAP.....................Y
PEDESTRIAN OVERLAP..................
WATCHDOG............................
DETECTOR RESET......................
ADVANCE BEACON......................
OUT OF PHASE FLASHER................
CONTROLLER FLASH....................
RUN FREE............................
RESERVED............................
PREEMPT.............................
SOFT PREEMPT........................
ANY PREEMPT.........................
COORDINATION PLAN...................
OFFSET..............................
PHASE CHECK.........................
PHASE ON............................
PHASE NEXT..........................
```

PRESS "+" KEY FOR OUTPUT 32

STEP 3

```
PAGE:1  C1 PIN:34  VEHICLE PHASE
OUTPUT ASSIGNMENT #.................32
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID.1=FLASH)..............0
SELECT ASSIGNMENT:
NOT ENABLED.........................
VEHICLE PHASE.......................Y
PEDESTRIAN PHASE....................
VEHICLE OVERLAP.....................Y
PEDESTRIAN OVERLAP..................
WATCHDOG............................
DETECTOR RESET......................
ADVANCE BEACON......................
OUT OF PHASE FLASHER................
CONTROLLER FLASH....................
RUN FREE............................
RESERVED............................
PREEMPT.............................
SOFT PREEMPT........................
ANY PREEMPT.........................
COORDINATION PLAN...................
OFFSET..............................
PHASE CHECK.........................
PHASE ON............................
PHASE NEXT..........................
```

THE OUPUT IS SET AS A VEHICLE PHASE BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1  C1 PIN:34  VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1.P=16)...3
SELECT COLOR(0=RED.1=YEL.2=GRN).....2
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'
THE SCREEN SHOWN ABOVE WILL APPEAR.
ENTER DATA AS SHOWN.

PRESS THE 'ENT' KEY AFTER INPUTTING DATA.
THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1  C1 PIN:34  VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.................32
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID.1=FLASH)..............0
SELECT ASSIGNMENT:
NOT ENABLED.........................
VEHICLE PHASE.......................
PEDESTRIAN PHASE....................
VEHICLE OVERLAP.....................Y
PEDESTRIAN OVERLAP..................
WATCHDOG............................
DETECTOR RESET......................
ADVANCE BEACON......................
OUT OF PHASE FLASHER................
CONTROLLER FLASH....................
RUN FREE............................
RESERVED............................
PREEMPT.............................
SOFT PREEMPT........................
ANY PREEMPT.........................
COORDINATION PLAN...................
OFFSET..............................
PHASE CHECK.........................
PHASE ON............................
PHASE NEXT..........................
```

PRESS "+" TWICE TO
REACH OUTPUT 34.

STEP 4

```
PAGE:1  C1 PIN:36  NOT ENABLED
OUTPUT ASSIGNMENT #.................34
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID.1=FLASH)..............0
SELECT ASSIGNMENT:
NOT ENABLED.........................Y
VEHICLE PHASE.......................Y
PEDESTRIAN PHASE....................
VEHICLE OVERLAP.....................
PEDESTRIAN OVERLAP..................
WATCHDOG............................
DETECTOR RESET......................
ADVANCE BEACON......................
OUT OF PHASE FLASHER................
CONTROLLER FLASH....................
RUN FREE............................
RESERVED............................
PREEMPT.............................
SOFT PREEMPT........................
ANY PREEMPT.........................
COORDINATION PLAN...................
OFFSET..............................
PHASE CHECK.........................
PHASE ON............................
PHASE NEXT..........................
```

THE OUPUT IS SET AS "NOT ENABLED" BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE PHASE.

```
PAGE:1  C1 PIN:36  NOT ENABLED
SELECT VEHICLE PHASE (1-16).........5
SELECT COLOR(0=RED.1=YEL.2=GRN).....2
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE PHASE'
THE SCREEN SHOWN ABOVE WILL APPEAR.
ENTER DATA AS SHOWN.

PRESS THE 'ENT' KEY AFTER INPUTING DATA.
THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT
ASSIGNED AS 'VEHICLE PHASE' AS SHOWN BELOW.

```
PAGE:1  C1 PIN:36  VEHICLE PHASE
OUTPUT ASSIGNMENT #.................34
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID.1=FLASH)..............0
SELECT ASSIGNMENT:
NOT ENABLED.........................
VEHICLE PHASE.......................Y
PEDESTRIAN PHASE....................
VEHICLE OVERLAP.....................
PEDESTRIAN OVERLAP..................
WATCHDOG............................
DETECTOR RESET......................
ADVANCE BEACON......................
OUT OF PHASE FLASHER................
CONTROLLER FLASH....................
RUN FREE............................
RESERVED............................
PREEMPT.............................
SOFT PREEMPT........................
ANY PREEMPT.........................
COORDINATION PLAN...................
OFFSET..............................
PHASE CHECK.........................
PHASE ON............................
PHASE NEXT..........................
```

OUTPUT PROGRAMMING FOR HEAD 51 COMPLETE

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 05-2126
DESIGNED: October 2012
SEALED: 10-24-12
REVISED: N/A

Signal Upgrade Sheeet 3 of 3

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared in the Offices of:

Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
Signals Management Section

750 N.Greenfield Pkwy,Garner,NC 27529

NC 56 at I-85 NB Ramp

Division 5 Granville County Butner

PLAN DATE: October 2012	REVIEWED BY:		
PREPARED BY: D.H. Spaulding	REVIEWED BY:		
		INIT.	DATE

SEAL

NORTH CAROLINA PROFESSIONAL SEAL 022013 ENGINEER GEORGE C. BROWN

SIGNATURE DATE 11/1/12

SIG. INVENTORY NO. 05-2126

30-OCT-2012 10:32
S:#ITSASU#ITS Signals#Workgroups#Sig Man#Spaulding#in-progress#052126_smu.le.2012xx.dgn
dspaulding

PROJECT REFERENCE NO.	SHEET NO.
C-5199	Sig. 11

PHASING DIAGRAM

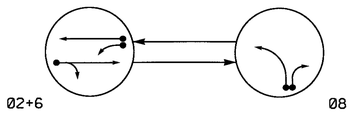

PHASING DIAGRAM DETECTION LEGEND

- DETECTED MOVEMENT
- UNDETECTED MOVEMENT (OVERLAP)
- UNSIGNALIZED MOVEMENT
- PEDESTRIAN MOVEMENT

TABLE OF OPERATION

SIGNAL FACE	PHASE Ø2+6	PHASE Ø8	FLASH
21, 22	G	R	Y
61, 62	G	R	Y
81, 82	R	G	R

SIGNAL FACE I.D.

All Heads L.E.D.

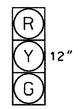

21, 22
61, 62
81, 82

OASIS 2070L LOOP & DETECTOR INSTALLATION CHART

INDUCTIVE LOOPS					DETECTOR PROGRAMMING							
LOOP	SIZE (FT)	DISTANCE FROM STOPBAR (FT)	TURNS	NEW LOOP	PHASE	CALLING	EXTENSION	FULL TIME DELAY	STRETCH TIME	DELAY TIME	SYSTEM LOOP	NEW CARD
2A	6X6	70	Exist.	-	2	Y	Y	-	-	-	-	-
6A	6X6	70	Exist.	-	6	Y	Y	-	-	-	-	-
6B	6X6	0	2-4-2	-	6	Y	Y	-	-	-	-	-
8A	6X40	0	2-4-2	-	8	Y	Y	-	-	3	-	-
8B	6X40	0	2-4-2	-	8	Y	Y	-	-	10	-	-
8C	6X15	0	2-4-2	-	8	Y	Y	-	-	15	-	-
S6	6X6	+120'	5	Y	-	-	-	-	-	-	Y	Y

2 Phase
Fully Actuated
NC 56 (Butner) CLS

NOTES

1. Refer to "Roadway Standard Drawings NCDOT" dated January 2012 and "Standard Specifications for Roads and Structures" dated January 2012.
2. Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
3. Set all detector units to presence mode.
4. Pavement markings are existing.
5. Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
6. Closed loop system data:
   Controller Asset #: 0929.

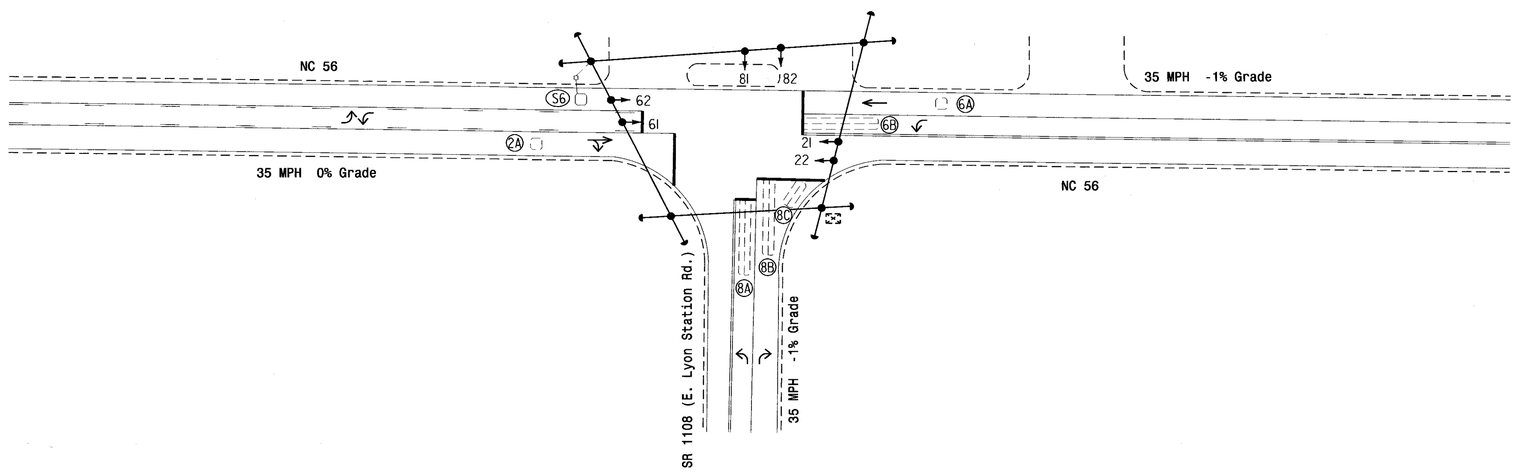

LEGEND

PROPOSED		EXISTING
	Traffic Signal Head	
	Modified Signal Head	N/A
	Sign	
	Pedestrian Signal Head With Push Button & Sign	
	Signal Pole with Guy	
	Signal Pole with Sidewalk Guy	
	Inductive Loop Detector	
	Controller & Cabinet	
	Junction Box	
	2-in Underground Conduit	
N/A	Right of Way	
	Directional Arrow	

OASIS 2070L TIMING CHART

FEATURE	PHASE 2	PHASE 6	PHASE 8
Min Green 1 *	10	10	7
Extension 1 *	3.0	3.0	2.0
Max Green 1 *	45	45	20
Yellow Clearance	3.8	3.9	3.0
Red Clearance	1.2	1.0	1.9
Walk 1 *	-	-	-
Don't Walk 1	-	-	-
Seconds Per Actuation *	-	-	-
Max Variable Initial *	-	-	-
Time Before Reduction *	-	-	-
Time To Reduce *	-	-	-
Minimum Gap	-	-	-
Recall Mode	MIN RECALL	MIN RECALL	-
Vehicle Call Memory	YELLOW	YELLOW	-
Dual Entry	-	-	-
Simultaneous Gap	ON	ON	ON

* These values may be field adjusted. Do not adjust Min Green and Extension times for phases 2 and 6 lower than what is shown. Min Green for all other phases should not be lower than 4 seconds.

24-OCT-2012 12:38
s:\ITS&SU\ITS Signals\Signal Design Section\Central Region\Div 5\C-5199\05-0929\05929_sig_dsn_20121024.dgn
zziemba

Signal Upgrade

Prepared in the Offices of:
Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
Signal Design Section
750 N.Greenfield Pkwy,Garner,NC 27529

SCALE 0 40 1"=40'

NC 56
at
SR 1108 (E. Lyon Station Road)

Division 5 Granville County Butner

PLAN DATE: October 2012 REVIEWED BY:
PREPARED BY: W.Bazzarie REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 026486 ENGINEER ROBERT J. ZIEMBA
SIGNATURE 10/24/12 DATE
SIG. INVENTORY NO. 05-0929

PROJECT REFERENCE NO.	SHEET NO.
C-5199	Sig. 12

EDI MODEL 2010ECL-NC CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumper and set switches as shown)

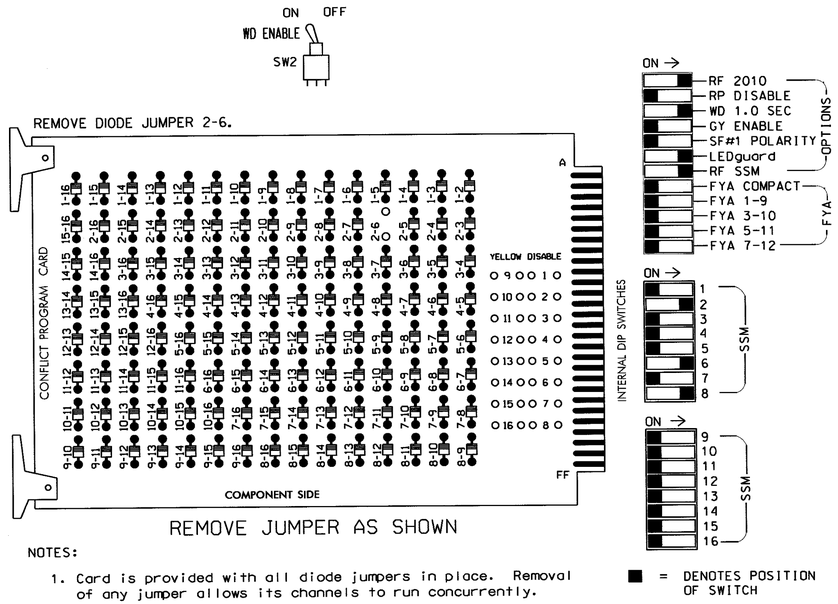

■ = DENOTES POSITION OF SWITCH

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Make sure jumpers SEL2-SEL5 are present on the monitor board.

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Ensure that Red Enable is active at all times during normal operation. To prevent Red Failures on unused monitor channels, tie unused red monitor inputs 1,3,4,5,7,9, 10,11,12,13,14,15 & 16 to load switch AC+ per the cabinet manufacturer's instructions.
3. Enable Simultaneous Gap-Out for all phases.
4. Program phases 2 and 6 for Start Up In Green.
5. Program phases 2 and 6 for Yellow Flash.
6. The cabinet and controller are part of the NC 56 (Butner) Closed Loop System.

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S2P	S3	S4	S4P	S5	S6	S6P	S7	S8	S8P	S9	S10	S11	S12	S13	S14
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	NU	21,22	NU	NU	NU	NU	NU	61,62	NU	NU	81,82	NU	NU	NU	NU	NU	NU	NU
RED		128						134			107							
YELLOW		129						135			108							
GREEN		130						136			109							
RED ARROW																		
YELLOW ARROW																		
GREEN ARROW																		
✋																		
🚶																		

NU = Not Used

EQUIPMENT INFORMATION

CONTROLLER.....2070L
CABINET.....332
SOFTWARE.....ECONOLITE OASIS
CABINET MOUNT.....BASE
OUTPUT FILE POSITIONS..18 (12-STD, 6-AUX)
LOAD SWITCHES USED.....S2,S6,S8
PHASES USED.....2,6,8
OVERLAPS.....NONE

INPUT FILE POSITION LAYOUT

(front view)

		1	2	3	4	5	6	7	8	9	10	11	12	13	14
FILE "I"	U	SLOT EMPTY	ø2 2A	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	FS DC ISOLATOR
	L		NOT USED												ST DC ISOLATOR
FILE "J"	U	SLOT EMPTY	ø6 6A	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	ø8 8A	ø8 8C	SLOT EMPTY	SYS. DET. S6	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY
	L		ø6 6B				ø8 8B	NOT USED		NOT USED					

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
2A	TB2-5,6	I2U	39	1	2	2	Y	Y			
6A	TB3-5,6	J2U	40	2	6	6	Y	Y			
6B	TB3-7,8	J2L	44	6	16	6	Y	Y			
8A	TB5-9,10	J6U	42	4	8	8	Y	Y			3
8B	TB5-11,12	J6L	46	8	18	8	Y	Y			10
8C	TB7-1,2	J7U	66	28	38	8	Y	Y			15
* S6	TB7-9,10	J9U	59	21	15	SYS					

* System detector only. Remove the vehicle phase assigned to this detector in the default programming.

INPUT FILE POSITION LEGEND: J2L
FILE J
SLOT 2
LOWER

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 05-0929
DESIGNED: October 2012
SEALED: 10-24-12
REVISED: N/A

Signal Upgrade

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared in the Offices of:
Transportation Mobility and Safety Division
Traffic Engineering Branch
Signals Management Section
750 N.Greenfield Pkwy,Garner,NC 27529

NC 56
at
SR 1108 (E. Lyon Station Road)

Division 05 Granville County Butner

PLAN DATE: 10-17-12 REVIEWED BY: TWH
PREPARED BY: D.H. Spaulding REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 022013 ENGINEER GEORGE C. BROWN

SIGNATURE DATE 11/1/12
SIG. INVENTORY NO. 05-0929

30-OCT-2012 10:48
S:*ITSAS1*ITS Signals*Workgroups*Sig Mgmt*Spaulding*in-progress*050929_smart_2012xx.dgn
dspaulding

PROJECT REFERENCE NO.	SHEET NO.
C-5199	SIG. 13

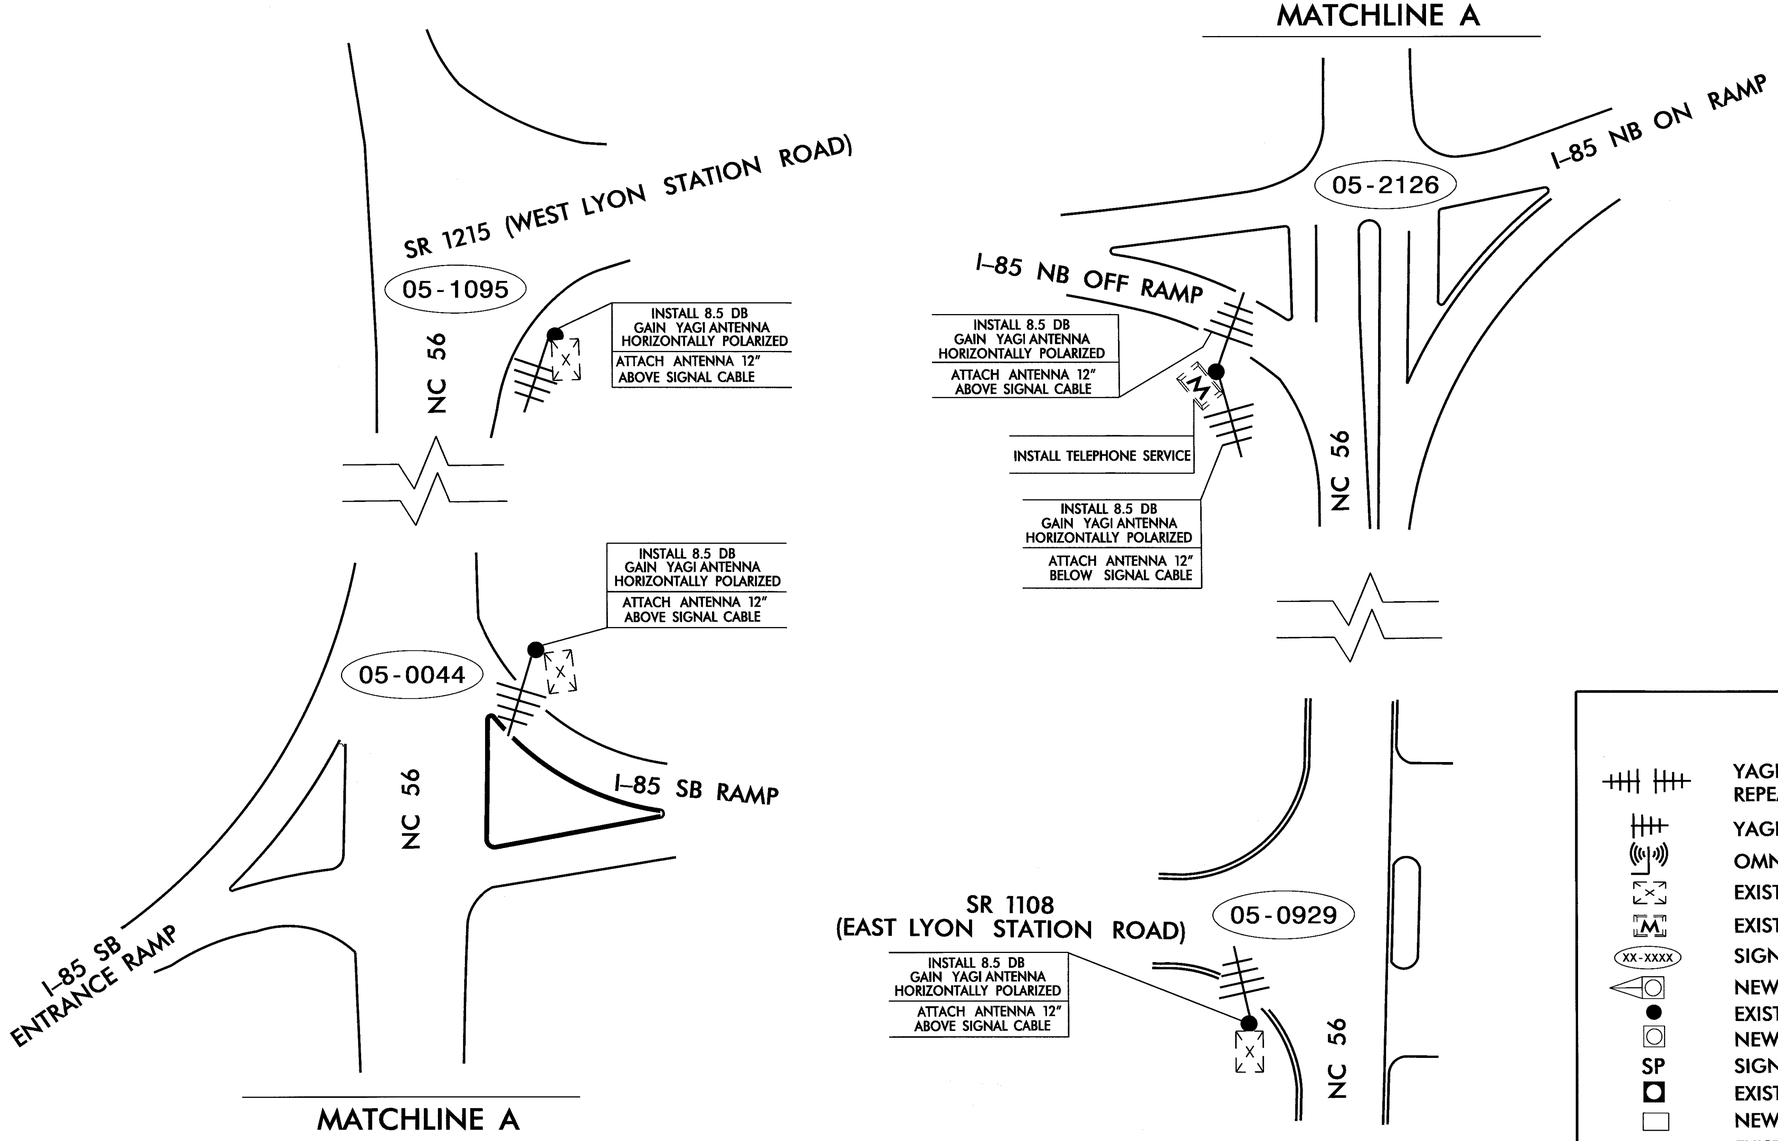

LEGEND

- YAGI ANTENNA (DOUBLE) FOR REPEATOR OPERATION
- YAGI ANTENNA (SINGLE)
- OMNI ANTENNA
- EXISTING CONTROLLER AND CABINET
- EXISTING MASTER CONTROLLER AND CABINET
- XX-XXXX SIGNAL INVENTORY NUMBER
- NEW METAL POLE W/MAST ARM
- EXISTING WOOD POLE
- NEW METAL POLE
- SP SIGNAL POLE
- EXISTING METAL POLE
- NEW OVERSIZED JUNCTION BOX
- EXISTING OVERSIZED JUNCTION BOX
- EXISTING CONDUIT
- EXI EXISTING COMMUNICATIONS CABLE

NOTES FOR WIRELESS COMMUNICATIONS:

1. INSTALL COAXIAL CABLE:
   A. ON WOOD POLES, REQUIRING A NEW RIGID GALVANIZED STEEL RISER, INSTALL A 2" RISER WITH WEATHERHEAD AND ROUTE THE COAXIAL CABLE TO THE ANTENNA.
   B. ON METAL POLES WITH MAST ARMS, RUN COAXIAL CABLE UP THROUGH THE POLE AND OUT THE MAST ARM; FIELD DRILL A 1/2" HOLE UP THROUGH THE BOTTOM OF MAST ARM FOR INSTALLATION OF THE COAXIAL CABLE TO THE ANTENNA.
   C. ON METAL STRAIN POLES, RUN COAXIAL CABLE UP THROUGH THE POLE AND OUT THE WEATHERHEAD AND ROUTE THE COAXIAL CABLE TO THE ANTENNA.
   D. BETWEEN THE POINT OF EXITING THE RISER, METAL POLE OR MAST ARM AND THE ANTENNA, SECURE THE COAXIAL CABLE TO THE STRUCTURE USING 3/4" STAINLESS STEEL STRAPS EVERY 12".
2. IF AN EXISTING 2" SPARE RIGID GALVANIZED STEEL RISER IS AVAILABLE, INSTALL THE COAXIAL CABLE IN THE SPARE RISER.
3. INSTALL WIRELESS ANTENNA ON POLE WITH RF WARNING SIGN.
   (NOTE: RF WARNING SIGN NOT REQUIRED WHEN ANTENNA IS INSTALLED ON AN NCDOT-OWNED POLE.)
4. MAINTAIN PROPER CLEARANCE FROM ALL UTILITIES PER THE NATIONAL ELECTRICAL SAFETY CODE.
5. INSTALL WIRELESS SERIAL RADIO MODEM WITH EXTERIOR DISCONNECT SWITCH LOCATED ON CABINET.
   (NOTE: RF ANTENNA DISCONNECT SWITCH AND DECAL ARE NOT REQUIRED WHEN THE ANTENNA IS INSTALLED ON AN NCDOT-OWNED POLE.)
6. REFERENCE "WIRELESS RADIO ANTENNA TYPICAL DETAILS."

Prepared in the Offices of:
Transportation Mobility and Safety Division
Intelligent Transportation Systems Section
750 N. Greenfield Pkwy., Garner, NC 27529

SCALE 0

WIRELESS PLAN ALONG NC 56 FROM WEST LYON STATION ROAD TO EAST LYON STATION ROAD

DIVISION 05 GRANVILLE CO. BUTNER

PLAN DATE:	NOVEMBER 2012	REVIEWED BY:	I.N. AVERY
PREPARED BY:	H.T. BERGGREN	REVIEWED BY:	G.A.FULLER, PE

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 023919 ENGINEER GREGORY A. FULLER

Gregory A. Fuller 11-27-12
SIGNATURE DATE

CADD Filename:

PROJ. REFERENCE NO.	SHEET NO.
C-5199	PM_1

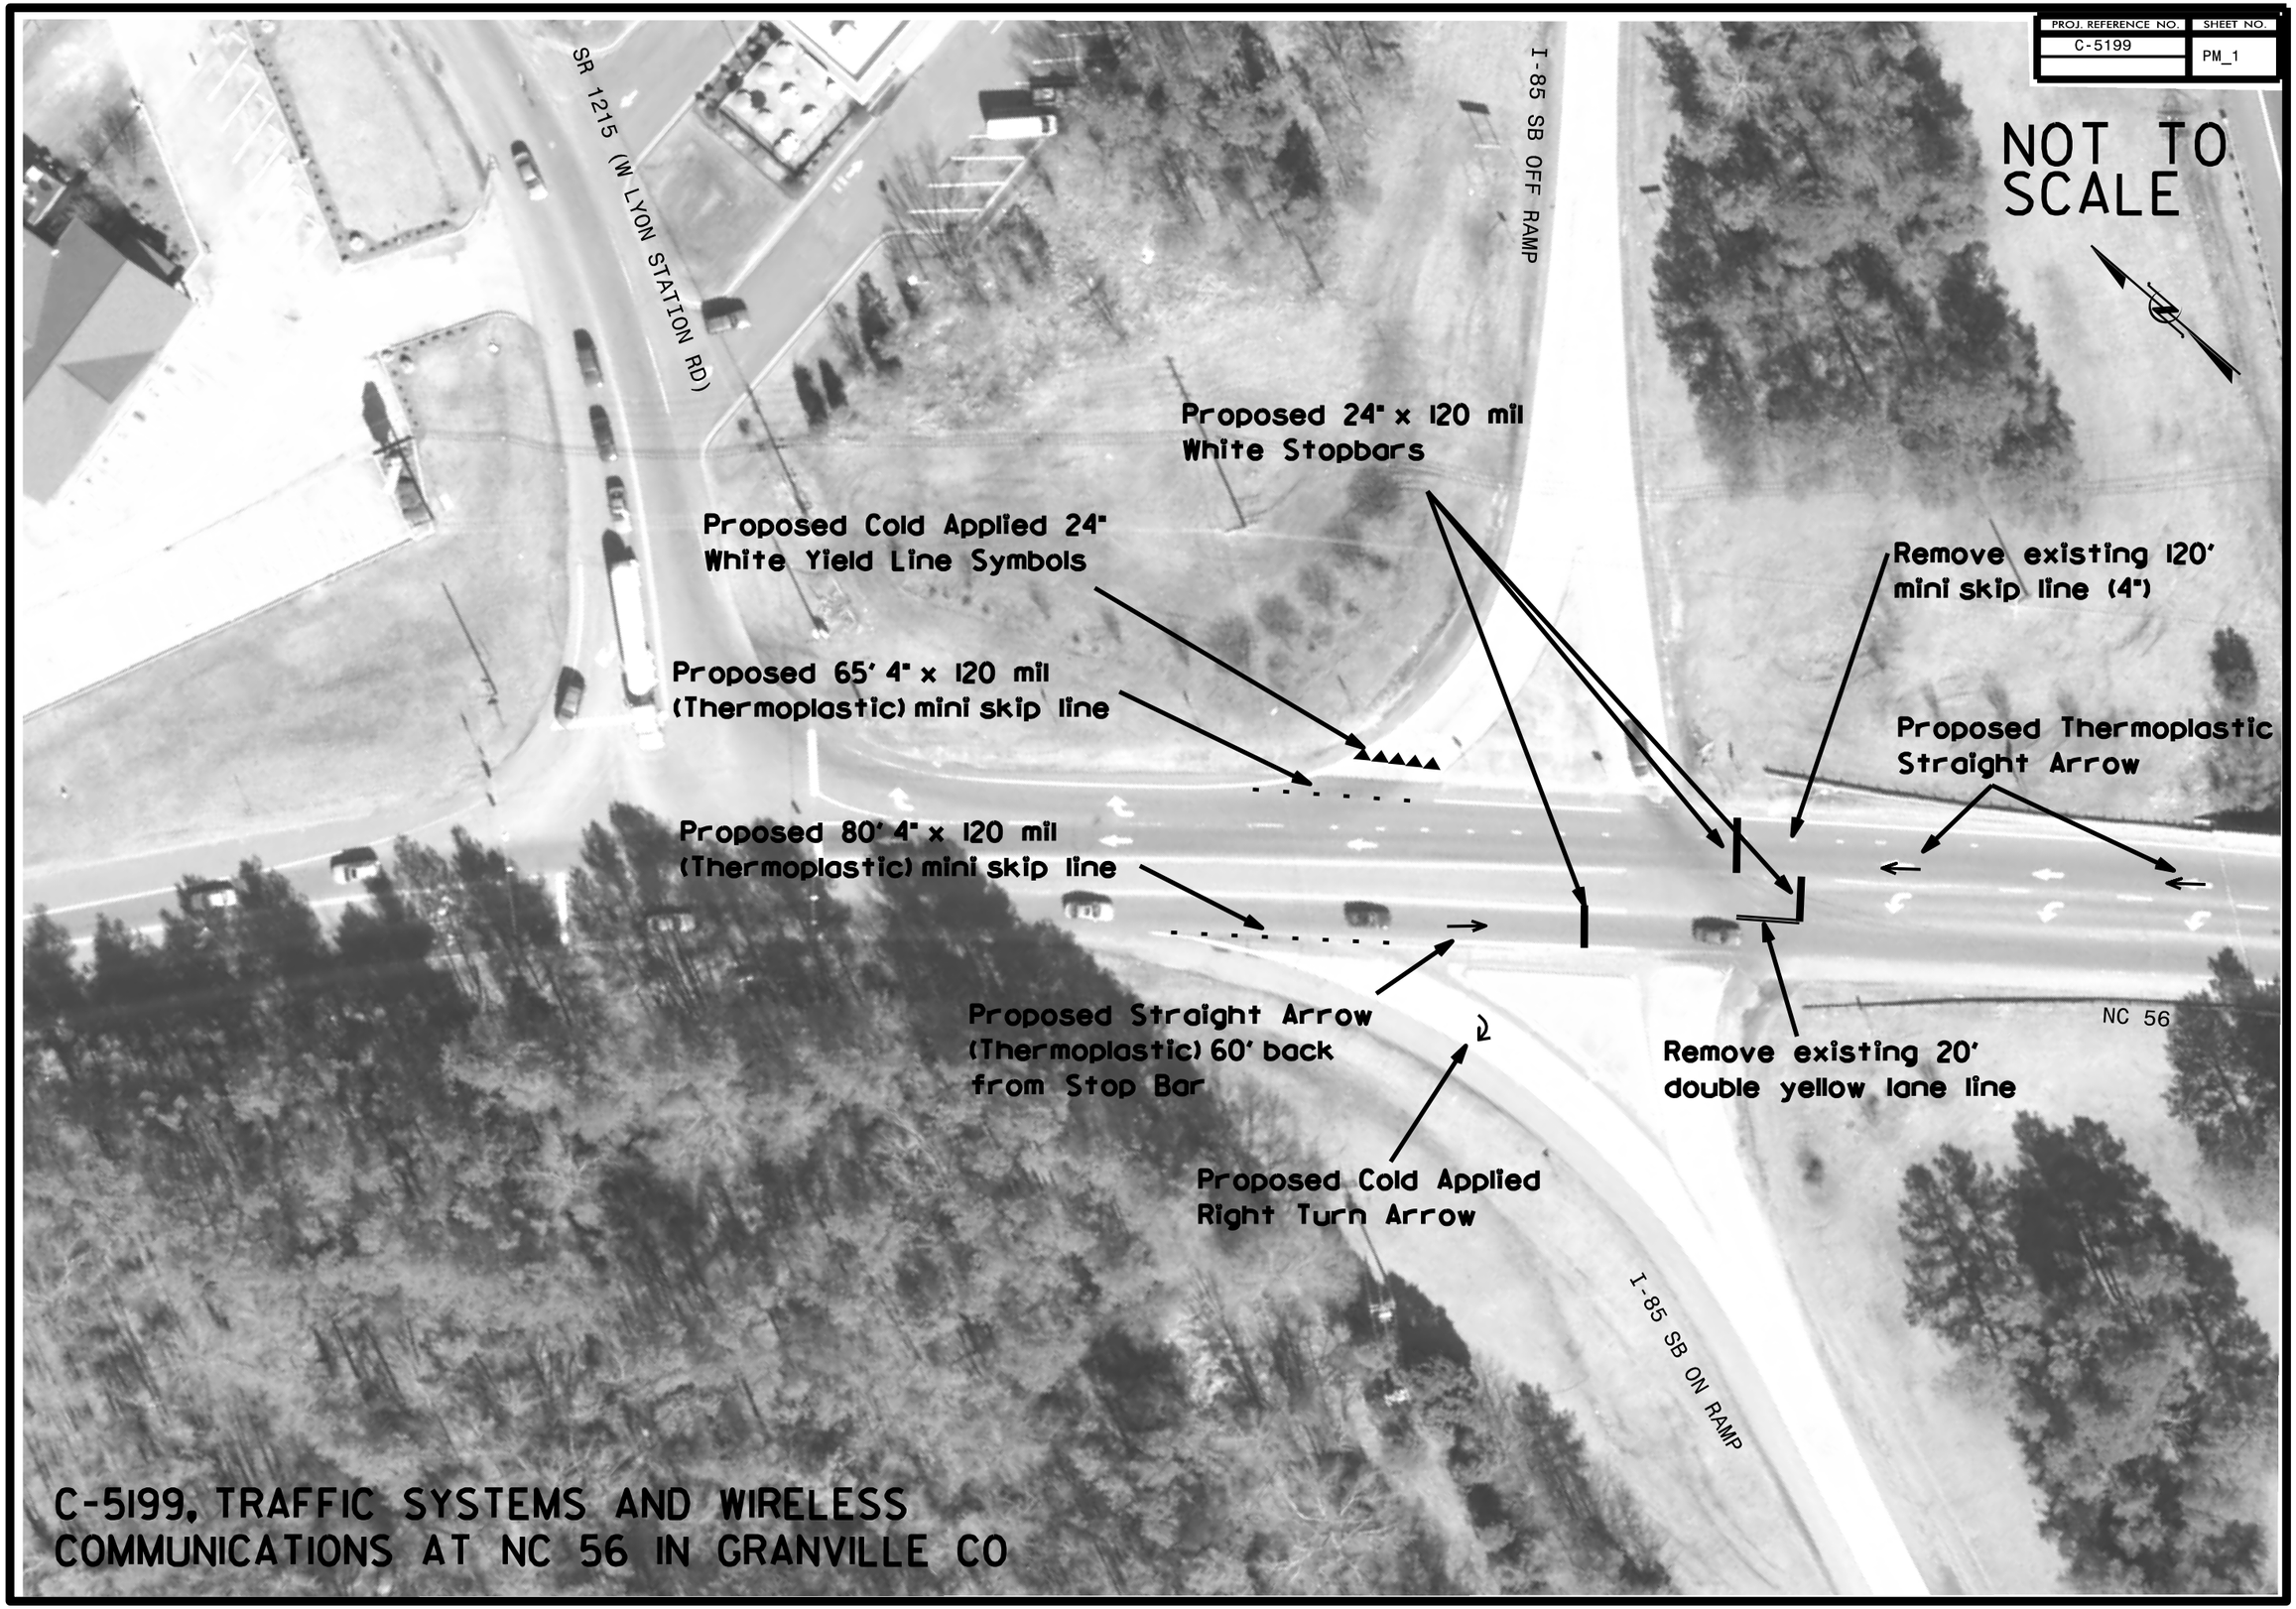

C-5199, TRAFFIC SYSTEMS AND WIRELESS COMMUNICATIONS AT NC 56 IN GRANVILLE CO

PROJ. REFERENCE NO.	SHEET NO.
C-5199	SIGN_1

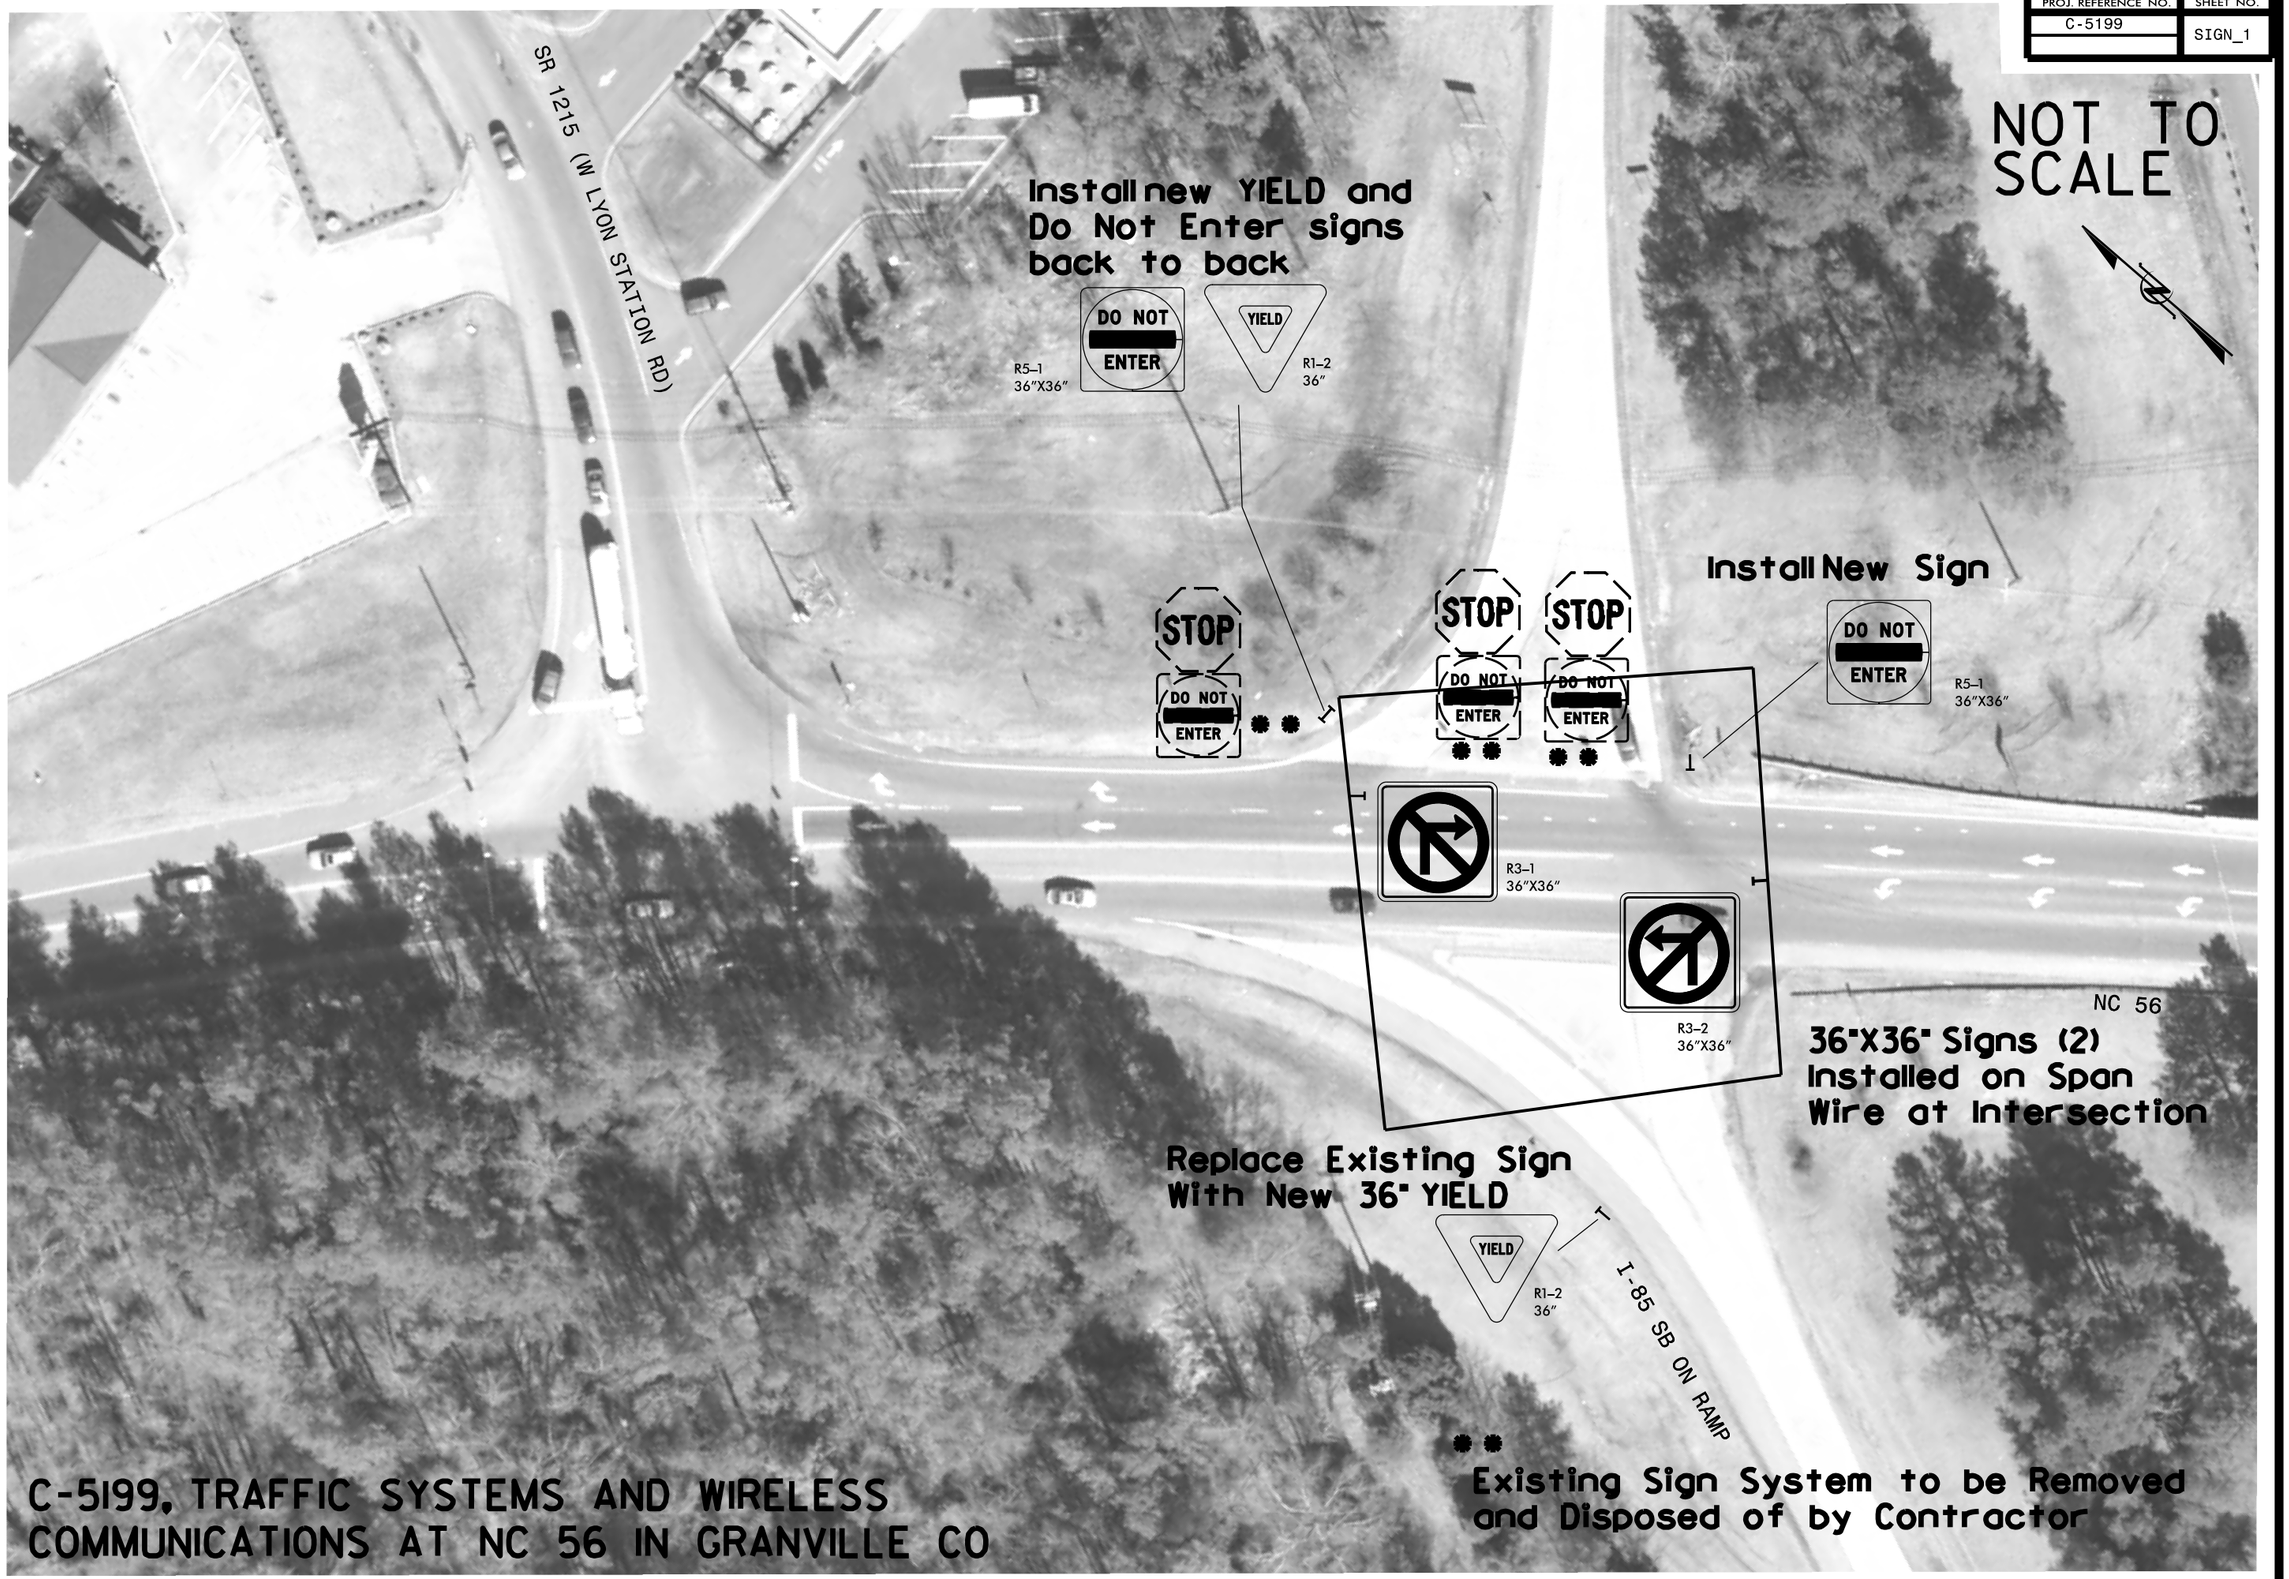

C-5199, TRAFFIC SYSTEMS AND WIRELESS COMMUNICATIONS AT NC 56 IN GRANVILLE CO