



336S CABINET
FRONT VIEW

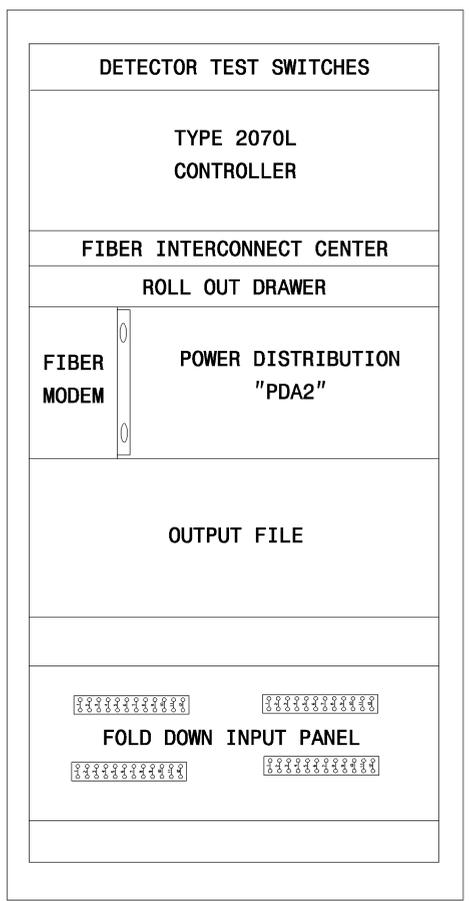

336S CABINET
REAR VIEW

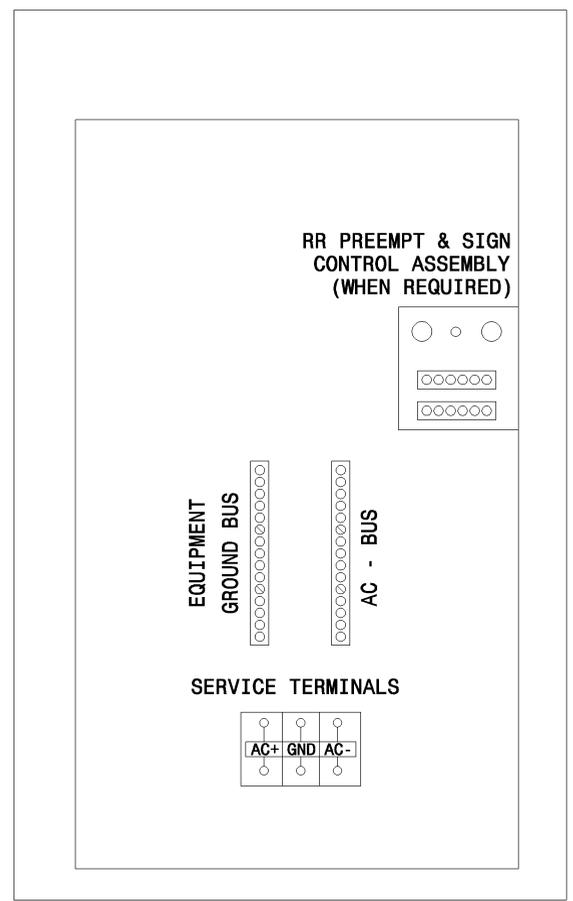

336S CABINET
RIGHT SIDE
REAR VIEW

NOTES

1. PROVIDE 2" SPACE BETWEEN CONTROLLER AND ROLL OUT DRAWER TO ACCOMMODATE FIBER INTERCONNECT CENTER.
2. INSTALL POWER LINE SURGE PROTECTION INSIDE POWER DISTRIBUTION ASSEMBLY.