
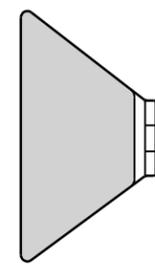
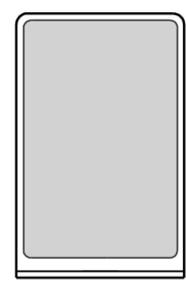


7-06

7-06



TYPICAL DELINEATORS

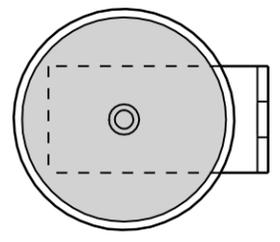


GENERAL NOTES

- 1- USE A MINIMUM 4516 SQ. mm REFLECTIVE AREA FOR SIDE MOUNTED DELINEATORS.
- 2- USE A MINIMUM 18,000 SQ. mm REFLECTIVE AREA FOR TOP MOUNTED BARRIER DELINEATORS.
- 3- USE A MINIMUM 4516 SQ. mm REFLECTIVE AREA FOR TOP MOUNTED GUARDRAIL DELINEATORS.
- 4- USE ADHESIVE, CLIP ON GUARDRAIL POST, GUARDRAIL BOLTS, POWER DRIVEN FASTENERS, OR OTHER MOUNTING METHODS RECOMMENDED BY THE MANUFACTURER AS APPROVED BY THE ENGINEER.

MOUNTING DETAILS

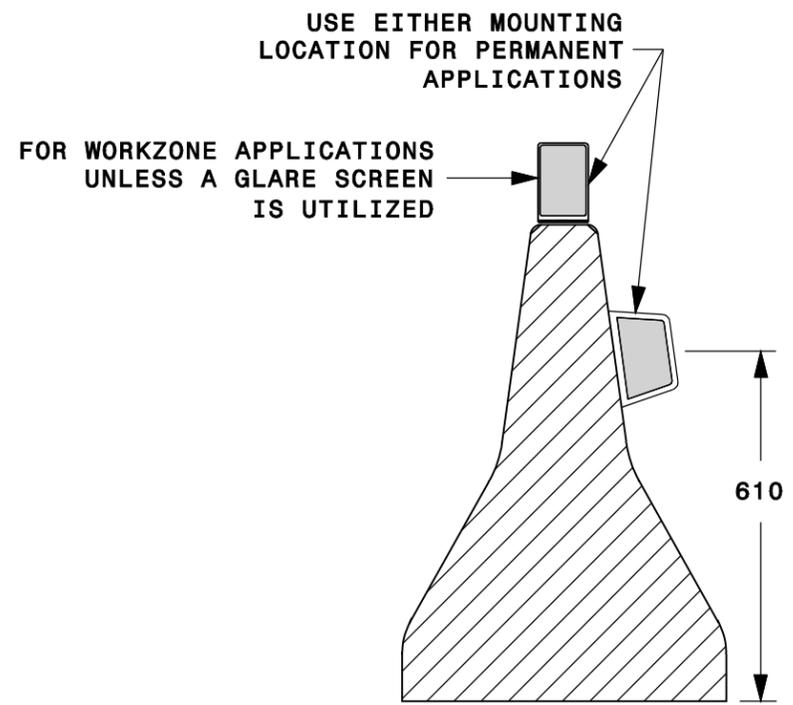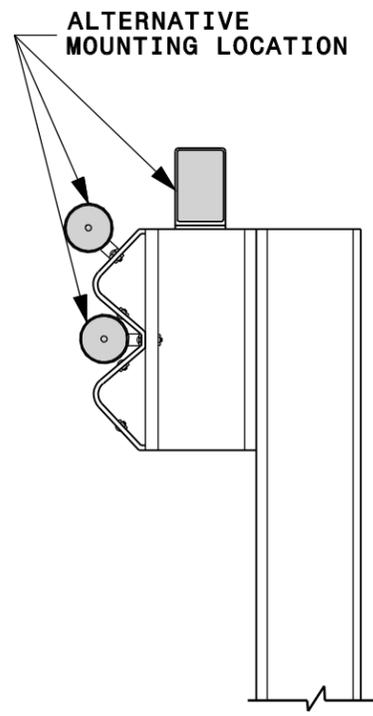

TYPICAL POWER DRIVEN FASTENER INSTALLATION FOR BARRIER

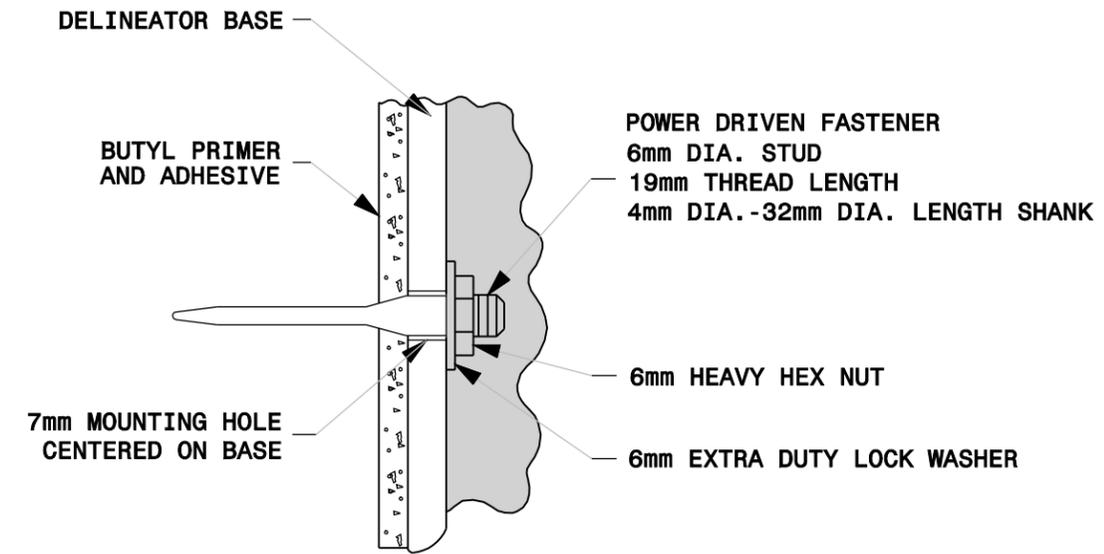

PAINT THE EXPOSED PORTIONS OF THE NUT, LOCK WASHER, AND POWER DRIVEN FASTENERS WITH ZINC-RICH PAINT TO MEET THE ENGINEER'S APPROVAL AFTER INSTALLATION OF THE ASSEMBLY.

NOTE:
THIS DRAWING IS DIMENSIONED IN MILLIMETERS UNLESS OTHERWISE DEPICTED WITHIN THE DRAWING.