



TRANSVERSE CONTRACTION JOINT

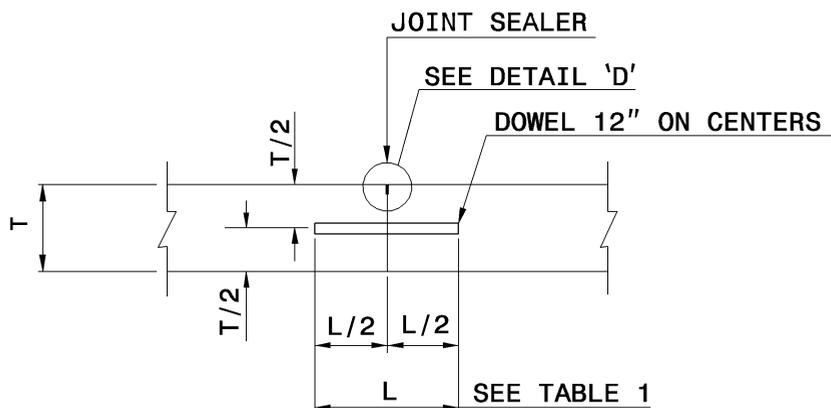


PLANNED TRANSVERSE CONSTRUCTION JOINT

GENERAL NOTES:

- FORM TRANSVERSE CONTRACTION JOINTS BY SAWING WITH APPROVED EQUIPMENT.
- SPACE TRANSVERSE CONTRACTION JOINTS AT INTERVALS OF 15'.
- USE A DOWEL ASSEMBLY OR OTHER APPROVED DOWEL INSERTION TECHNIQUE IN ALL TRANSVERSE CONTRACTION JOINTS. DOWEL ASSEMBLIES ARE COVERED IN DETAIL 700D03.
- PROVIDE SMOOTH DOWEL BARS. PROVIDE DEFORMED TIE BARS.
- WHEN UTILIZING AN EARLY ENTRY SAW, CUT THE JOINT TO A MINIMUM DEPTH OF 4".

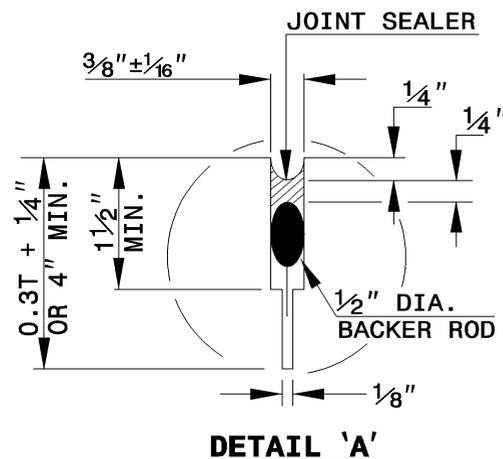

DETAIL 'A'

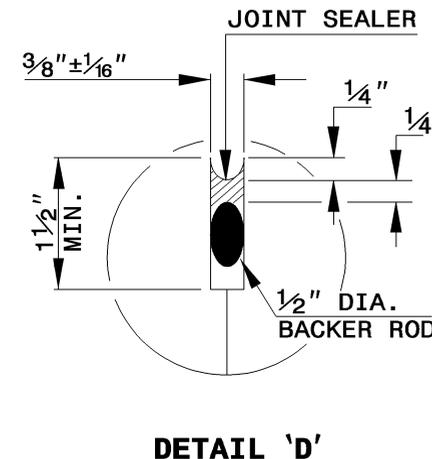

DETAIL 'D'

TABLE I - DOWEL BARS		
SLAB THICKNESS	DOWEL BAR "D"	DOWEL LENGTH "L"
8" OR LESS	1"	14"
8 1/2" TO 9 1/2"	1 1/8"	16"
10" TO 10 1/2"	1 1/4"	18"
11" AND ABOVE	1 1/2"	18"