


ELEVATION

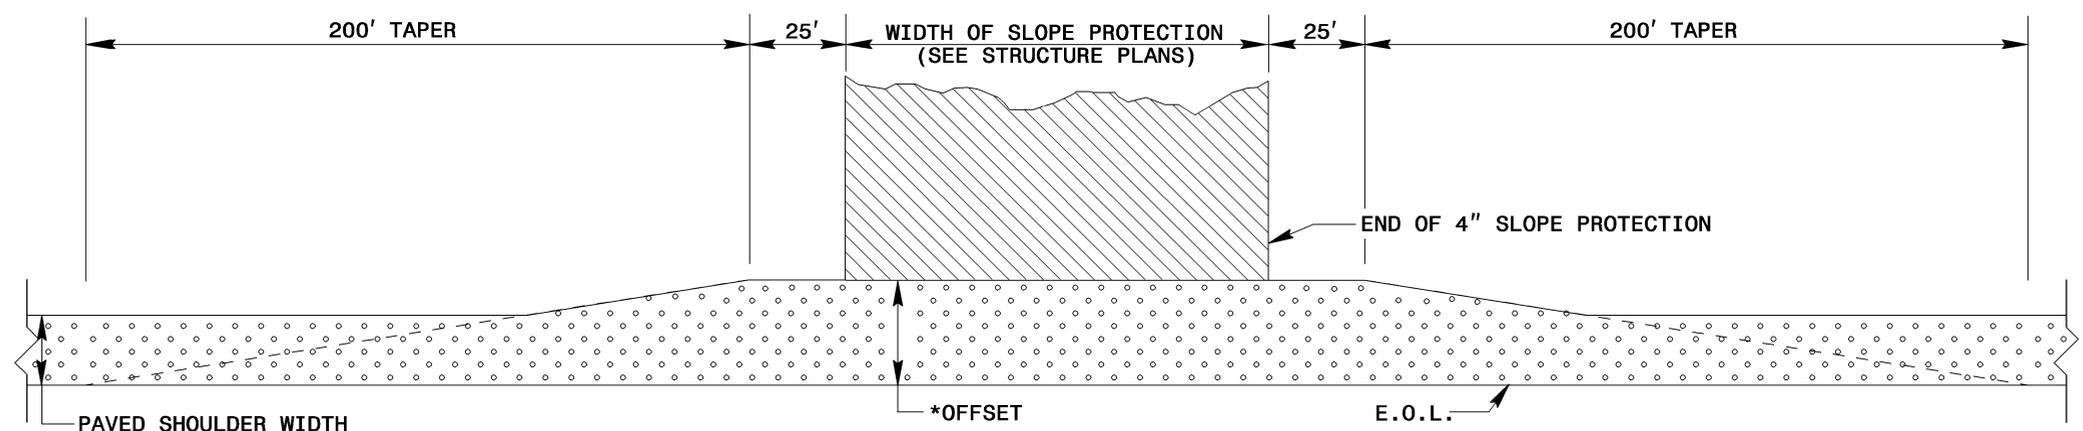

PLAN

NOTES:
PAVE THE FULL WIDTH OF THE SHOULDER AS SHOWN WITH SHOULDER PAVEMENT MATERIAL AS SHOWN ON PLANS.
*OFFSET BASED ON STRUCTURE POLICY (SEE STRUCTURE PLANS).
PROTECT SLOPE WITH REINFORCED CONCRETE PAVING. CONCRETE BLOCK PAVING WILL NOT BE PERMITTED.