



PLAN
DETAIL OF DRIVEWAY

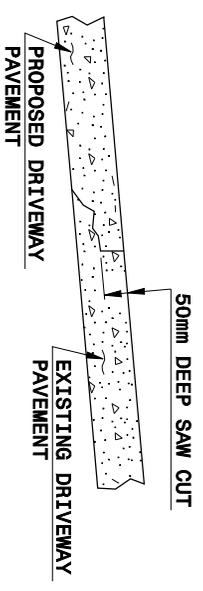

METHOD OF TIE IN

WHEN EXISTING DRIVEWAY PAVEMENT IS CONCRETE, SAW CUT 50mm DEEP JOINT AT THE POINT OF TIE-IN. SAW JOINT PERPENDICULAR TO EDGE OF EXISTING DRIVEWAY PAVEMENT.

Note:
This drawing is dimensioned in millimeters unless otherwise depicted within the drawing.

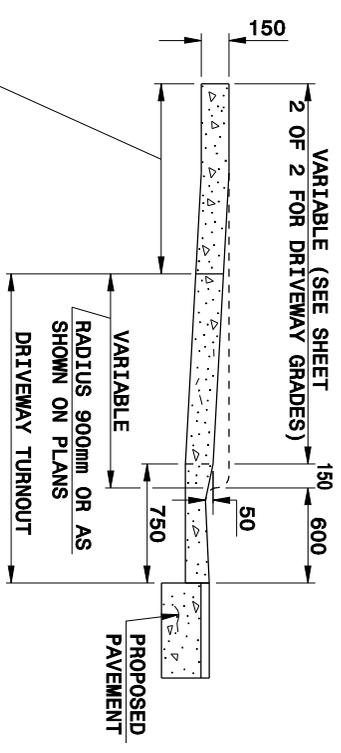

SECTION C-C