


**FRONT VIEW**

**SIDE VIEW**

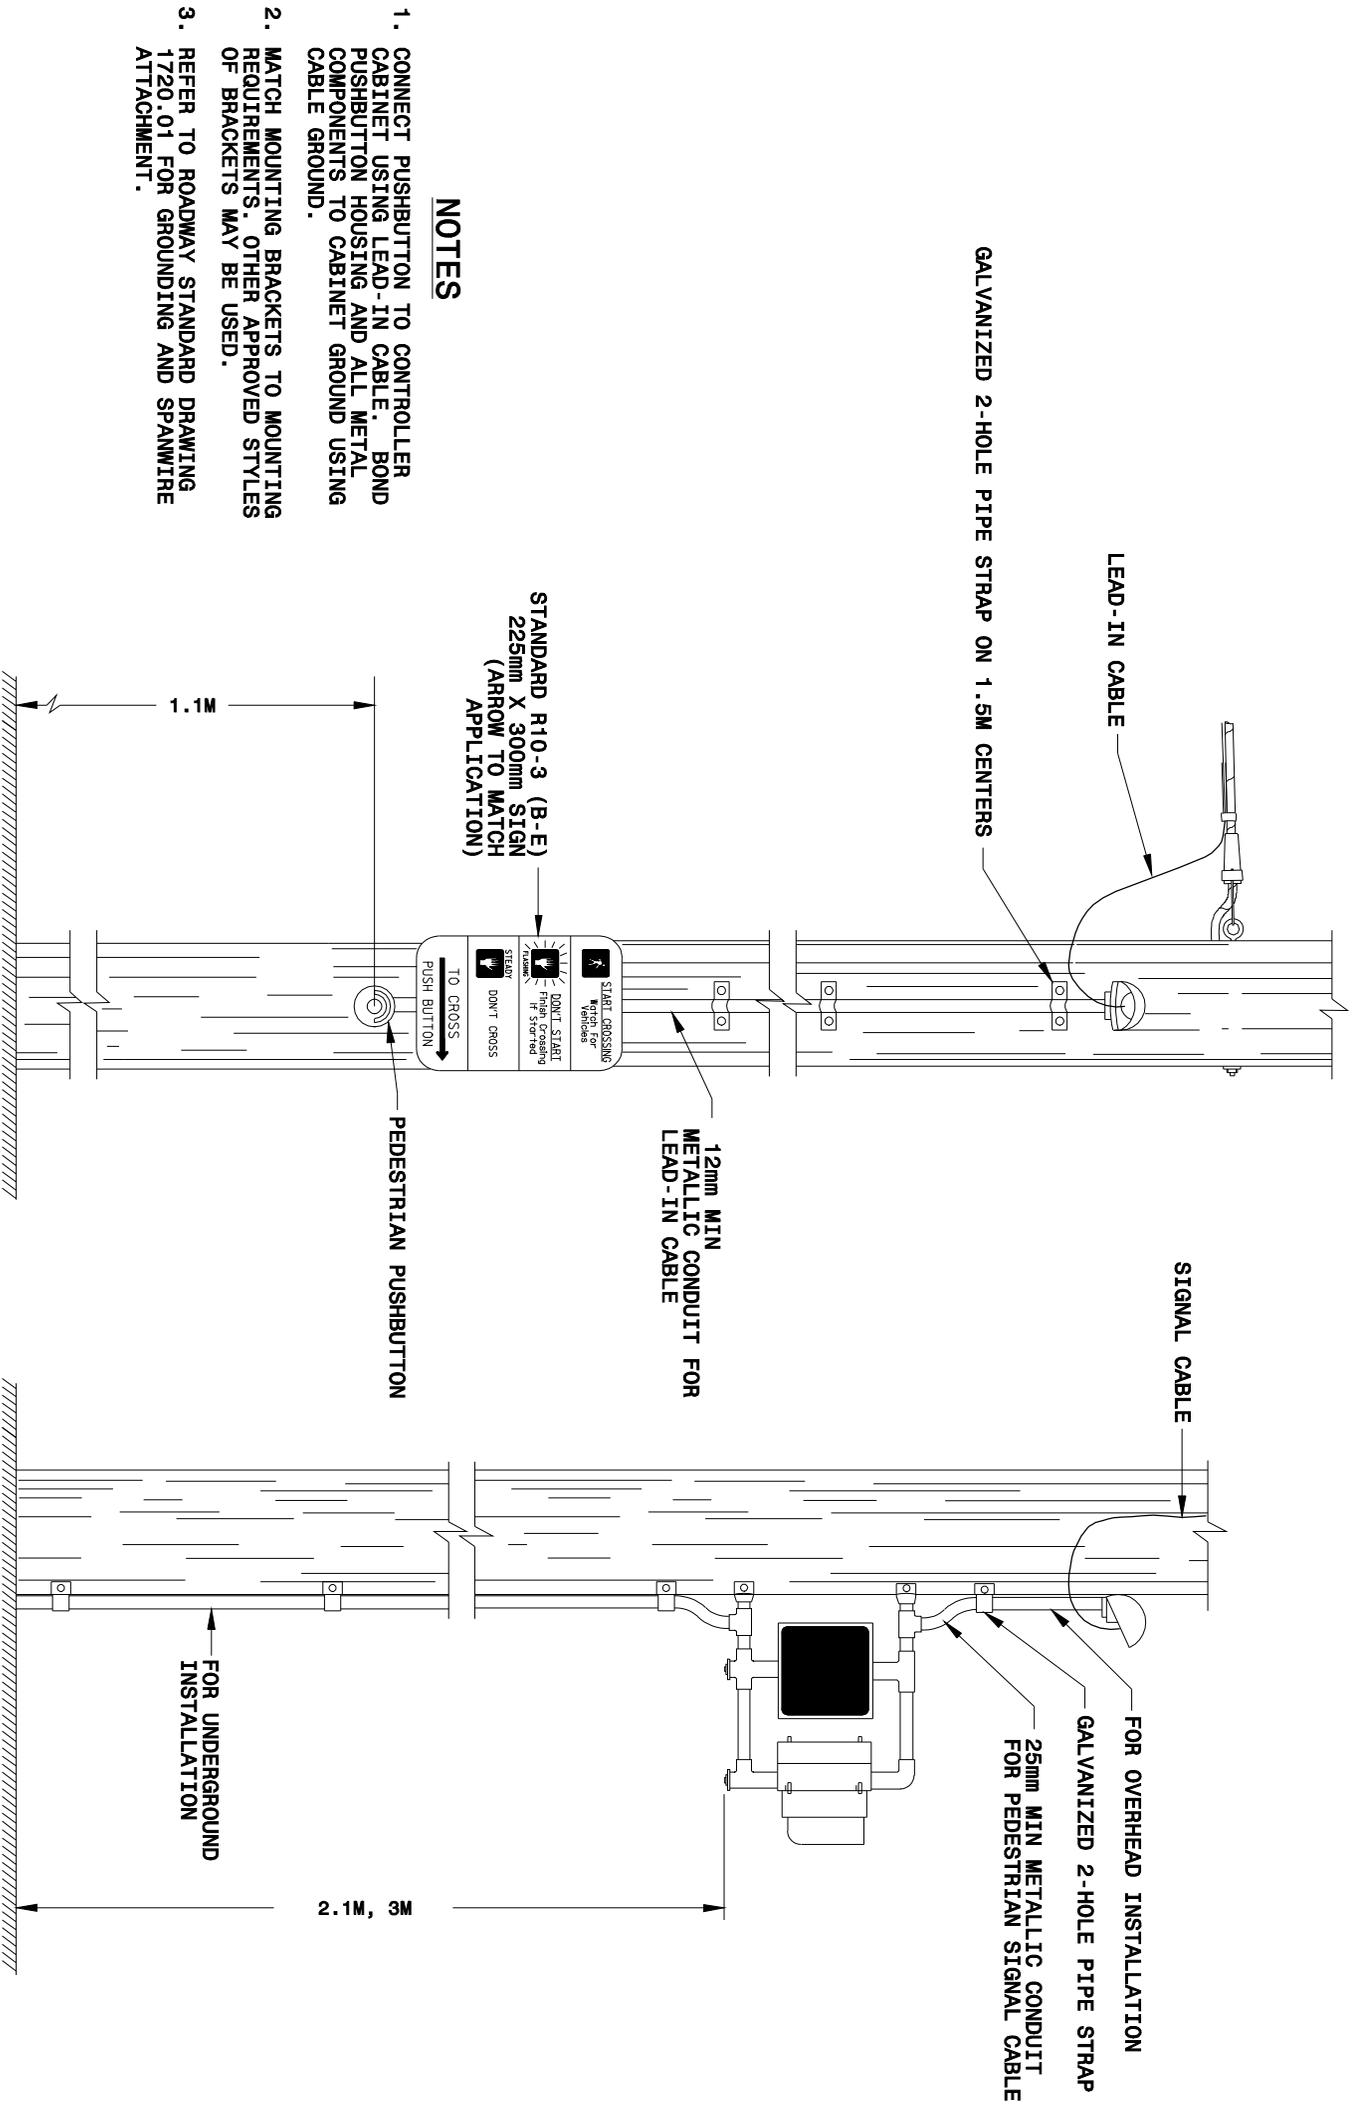

- NOTES**
1. CONNECT PUSHBUTTON TO CONTROLLER CABINET USING LEAD-IN CABLE. BOND PUSHBUTTON HOUSING AND ALL METAL COMPONENTS TO CABINET GROUND USING CABLE GROUND.
  2. MATCH MOUNTING BRACKETS TO MOUNTING REQUIREMENTS. OTHER APPROVED STYLES OF BRACKETS MAY BE USED.
  3. REFER TO ROADWAY STANDARD DRAWING 1720.01 FOR GROUNDING AND SPANWIRE ATTACHMENT.