

Installation Guide



Temporary Rock Silt Check Type A
with Excelsior/Coir Matting and PAM

Materials Needed

Coir Fiber Matting



Excelsior Matting



3.5 oz. Polyacrylamide

Wrap Installation



- Coir or Excelsior matting may be used
- Place matting on the sediment control stone
- Cut matting to the desired length

Wrap Installation




- Anchor matting at top and bottom with Class B stone

PAM Application



- Sprinkle 3.5 oz. of PAM 705 on the top, lower portion of matting section
- Re-apply after a 0.5" rain event, if needed.

TEMPORARY ROCK SILT CHECK TYPE 'A' WITH EXCELSIOR MATTING AND POLYACRYLAMIDE (PAM) DETAIL

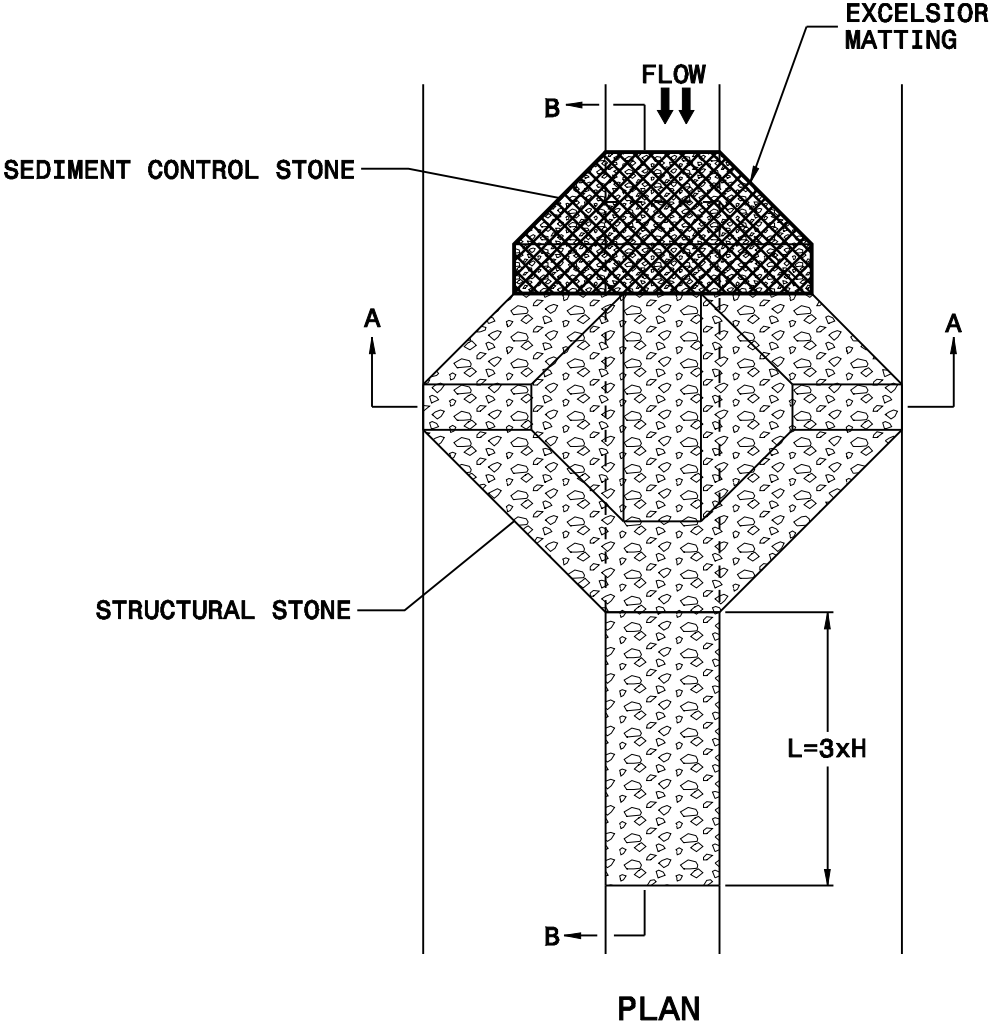

NOTE

USE EXCELSIOR FOR MATTING MATERIAL AND ANCHOR MATTING SECTION AT TOP AND BOTTOM WITH CLASS B STONE.

INITIALLY APPLY 3.5 OUNCES OF POLYACRYLAMIDE (PAM) TO TOP OF MATTING SECTION AND AFTER EVERY RAINFALL EVENT THAT EQUALS OR EXCEEDS 0.50 INCHES.

