PROJECT REFERENCE NO.	SHEET NO.
W-52030	Sig. 1.1

EDI MODEL 2010ECL-NC CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

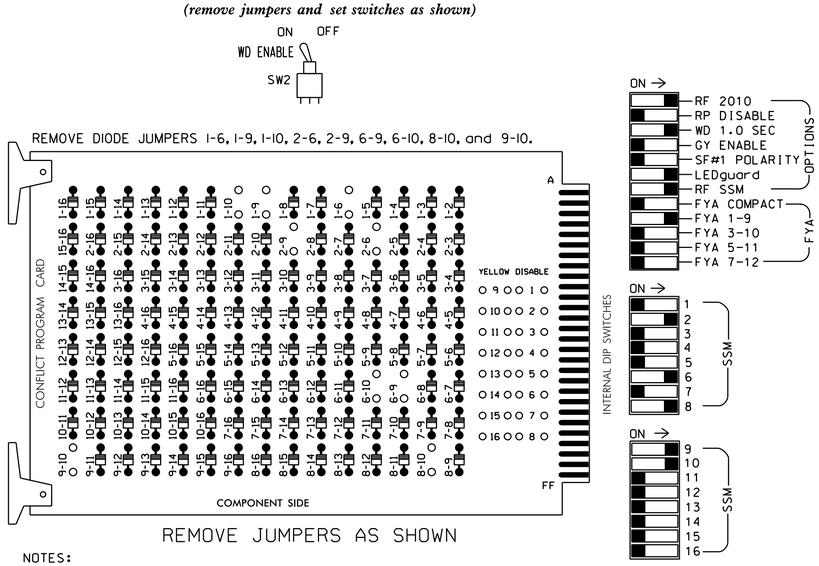

REMOVE JUMPERS AS SHOWN

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Make sure jumpers SEL2-SEL5 are present on the monitor board.

■ = DENOTES POSITION OF SWITCH

INPUT FILE POSITION LAYOUT

(front view)

		1	2	3	4	5	6	7	8	9	10	11	12	13	14
FILE "I"	U	Ø 1 1A	Ø 1 1B	Ø 2 2A	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SYS. DET. S5	SLOT EMPTY	SYS. DET. S1	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	FS DC ISOLATOR
	L	NOT USED	NOT USED	Ø 2 2B				NOT USED		SYS. DET. S2					ST DC ISOLATOR
FILE "J"	U	SLOT EMPTY	Ø 6 6A	SLOT EMPTY	WIRED INPUT ⊗	SLOT EMPTY	Ø 8 8A	SLOT EMPTY	SLOT EMPTY	SYS. DET. S3	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY
	L		Ø 6 6B				Ø 8 8B			SYS. DET. S4					

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

⊗ Wired Input - Do not populate slot with detector card

LOAD RESISTOR INSTALLATION DETAIL

(install resistor as shown below)

ACCEPTABLE VALUES

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

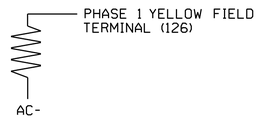

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Ensure that Red Enable is active at all times during normal operation. To prevent Red Failures on unused monitor channels, tie unused red monitor inputs 1,3, 4,5,7,11,12,13,14,15 & 16 to load switch AC+ per the cabinet manufacturer's instructions.
3. Enable Simultaneous Gap-Out for all phases.
4. Program phases 2 and 6 for Variable Initial and Gap Reduction.
5. Program phases 2 and 6 for Start Up In Green.
6. Program phases 2 and 6 for Yellow Flash, and overlaps 1 and 2 as Wag Overlaps.
7. The cabinet and controller are part of the Wilmington Signal System.

EQUIPMENT INFORMATION

CONTROLLER.....2070L
CABINET.....332 W/ AUX
SOFTWARE.....ECONOLITE OASIS
CABINET MOUNT.....BASE
OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
LOAD SWITCHES USED.....S1,S2,S6,S8,S9,S10
PHASES USED.....1,2,6,8
OVERLAP "A".....1+2
OVERLAP "B".....1+8
OVERLAP "C".....NOT USED
OVERLAP "D".....NOT USED

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A[1]	TB2-1,2	I1U	56	18	1	1	Y	Y			10
	-	J4U	48	10	26	6	Y	Y	Y		3
1B	TB2-5,6	I2U	39	1	2	1	Y	Y			15
2A	TB2-9,10	I3U	63	25	32	2	Y	Y			
2B	TB2-11,12	I3L	76	38	42	2	Y	Y			
6A	TB3-5,6	J2U	40	2	6	6	Y	Y			
6B	TB3-7,8	J2L	44	6	16	6	Y	Y			
8A	TB5-9,10	J6U	42	4	8	8	Y	Y			
8B	TB5-11,12	J6L	46	8	18	8	Y	Y			
✱ S1	TB6-9,10	I9U	60	22	11	SYS					
✱ S2	TB6-11,12	I9L	62	24	13	SYS					
✱ S3	TB7-9,10	J9U	59	21	15	SYS					
✱ S4	TB7-11,12	J9L	61	23	17	SYS					
✱ S5	TB6-1,2	I7U	65	27	34	SYS					

[1] Add jumper from I1-W to J4-W, on rear of input file.

✱ System detector only. Remove the vehicle phase assigned to this detector in the default programming.

INPUT FILE POSITION LEGEND: J2L
FILE J
SLOT 2
LOWER

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S2P	S3	S4	S4P	S5	S6	S6P	S7	S8	S8P	S9	S10	S11	S12	S13	S14
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11 ★	21,22 23	NU	NU	NU	NU	NU	61,62 63	NU	NU	81,82	NU	11 ★	83	NU	NU	NU	NU
RED		128						134						A124				
YELLOW	✱	129						135										
GREEN		130						136										
RED ARROW											107		A121					
YELLOW ARROW											108		A122	A125				
FLASHING YELLOW ARROW													A123					
GREEN ARROW	127										109			A126				

NU = Not Used

✱ Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail below.

FYA SIGNAL WIRING DETAIL

(wire signal head as shown)

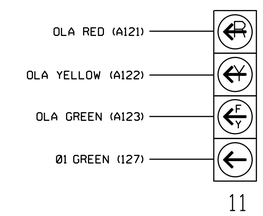

NOTE

The sequence display for signal head 11 requires special logic programming. See sheet 2 for programming instructions.

THIS ELECTRICAL PLAN SUPERSEDES THE PLAN SEALED ON 1/26/2015.

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 03-0270
DESIGNED: August 2015
SEALED: 9/4/2015
REVISED: N/A

Electrical Detail - Sheet 1 of 2

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared in the Offices of:
Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
Signals Management Section
750 N.Greenfield Pkwy,Garner,NC 27529

US 17-74-421-NC 133/
US 17-421
at
US 74-NC 133

Division 3 New Hanover County DS Wilmington

PLAN DATE: September 2015 REVIEWED BY: DTJ
PREPARED BY: S. Armstrong REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 031001 ENGINEER D. TODD JOYCE

DocuSigned by: D. Todd Joyce A90CADFDB0424ID... 9/9/2015 DATE

SIG. INVENTORY NO. 03-0270

09-SEP-2015 06:36
S:\TISSUE\TIS\Signals\Workgroups\Sig Mon\Armstrong\W030270_sm.ele.xxx.dgn
sarmstrong