PROJECT REFERENCE NO.	SHEET NO.
W-5209F	EC-6/CONST.4
R/W SHEET NO.	
ROADWAY DESIGN ENGINEER	HYDRAULICS ENGINEER

CULVERT REMOVAL SEQUENCE STA. 12 + 00 –Y2–

PHASE I

1. UTILIZE SPECIAL STILLING BASIN(S) AS NEEDED THROUGHOUT CULVERT REMOVAL.
2. INSTALL IMPERVIOUS DIKES A, DIVERTING FLOW.
3. REMOVE THE BARRELS 1, 2 AND WESTERN UPSTREAM / DOWNSTREAM HEADWALLS.
4. CONSTRUCT PROPOSED NORTHWESTERN CHANNEL RELOCATION.
5. REMOVE IMPERVIOUS DIKES A.

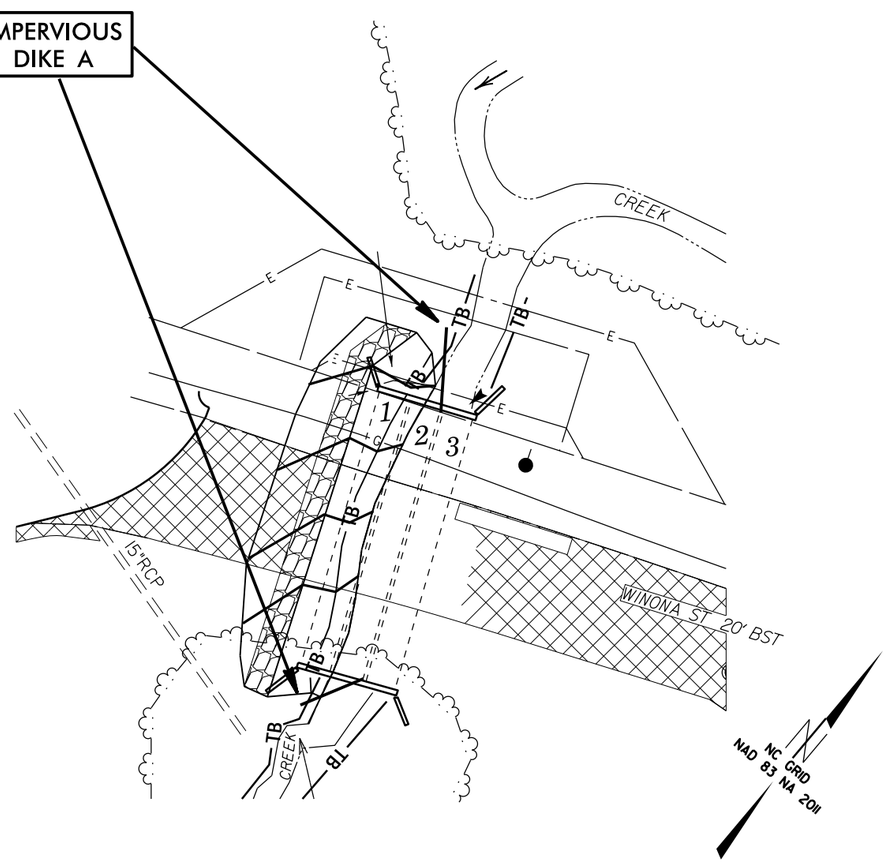

PHASE II
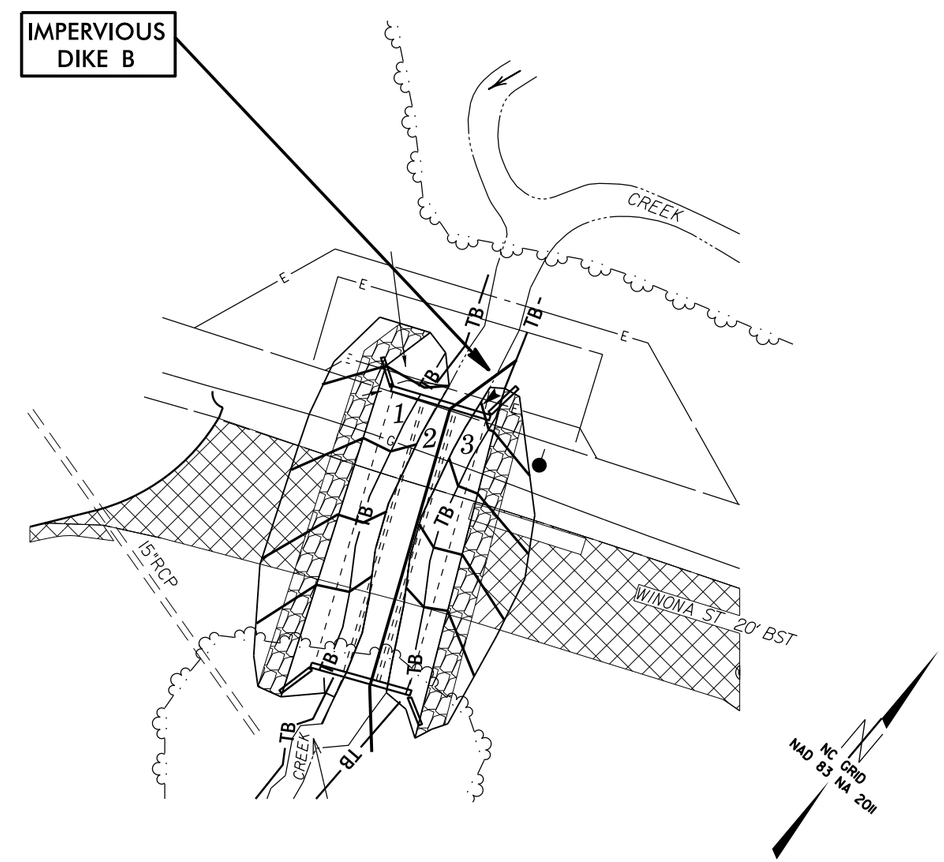
5. INSTALL IMPERVIOUS DIKE B, DIVERTING FLOW THROUGH COMPLETED CHANNEL RELOCATION.
6. REMOVE BARREL 3 AND REMAINING UPSTREAM / DOWNSTREAM HEADWALLS.
7. CONSTRUCT PROPOSED NORTHEASTERN CHANNEL RELOCATION.
8. REMOVE IMPERIOUS DIKES TO ALLOW NORMAL FLOW THROUGH THE NEWLY CONSTRUCTED CHANNEL.
9. REMOVE ANY REMAINING SPECIAL STILLING BASIN(S).